

# **YAMAHA**

# **DB50XG**

## **Sound Daughter Board**

**Owner's Manual**  
**Mode d'emploi**

GENERAL  
**midi**  
**XG**

# INTRODUCTION

Thank you for purchasing the Yamaha DB50XG Sound Daughter Board—a daughter board which attaches to any Creative Labs SoundBlaster™ or any sound card which has a WaveBlaster™ expansion port, to upgrade its sound from FM to high quality wavetable synthesis.

Featuring Yamaha's professional quality AWM2 tone generation technology—which uses high fidelity samples, or waveforms, of musical instrument and other sounds—the DB50XG contains 676 Normal Voices and 21 Drum Voices (percussion sets), features 16 Parts and maximum 32-note polyphony, and is fully compatible with Windows and DOS applications and games software that support the GM (General MIDI) System Level 1 standard format.

The DB50XG also features Yamaha's new XG-MIDI technology—an exciting breakthrough which not only provides considerably more Voices than the standard GM selection, but also lets you play more Voices at once, and features a variety of digital effects (11 Reverb effects, 11 Chorus effects, and 42 Variation effects) to add unprecedented dimension to your computer's sound.

A special CD-ROM bundled with the daughter board includes songs (in both MIDI and audio formats) and SMF "MIDI clips" which showcase the amazing sonic dimensions of XG, as well as a demo version of Yamaha Visual Arranger software.

This Owner's Manual covers installation and use of the DB50XG, as well as all relevant MIDI information. To ensure proper installation and use of the hardware and software, and in order to enjoy many years of great sound and performance from your DB50XG, please read this manual carefully, and be sure to keep it in a safe place for future reference.

## ■ PACKAGE CONTENTS

The DB50XG package includes the items listed below, so before beginning, please take a moment to make sure you have everything you need.

- DB50XG Sound Daughter Board
- Owner's Manual
- CD-ROM (includes MIDI data as well as stereo audio tracks of XG demonstration songs plus "MIDI clips", and a demo version of Yamaha's Visual Arranger software)

## NOTICE

If you want to edit the existing MIDI files or create a MIDI song from scratch using various voices and effects from the DB50XG, you are required to use an external sequencer which is capable of editing the system exclusive messages and transmit the parameter changes such as XG System On to the DB50XG. See page 10 for more information on the system exclusive messages.

## TABLE OF CONTENTS

Daughter Board Installation .....	2	TG300B Normal Voice List .....	34
Setting Up MIDI Mapper .....	3	XG Drum Voice List .....	36
About the GM and XG .....	3	TG300B Drum Voice List .....	37
DB50XG Overview and Features .....	4	Effect Type List .....	38
About MIDI .....	6	Effect Parameter List .....	39
MIDI Data Format .....	7	Effect Data Value Assign Table .....	42
MIDI Data Tables .....	27	Specifications .....	43
XG Normal Voice List .....	32		

# Daughter Board Installation

The DB50XG plugs directly into the sound cards listed below, as well as any sound card with a WaveBlaster expansion port. If your sound card is not on the list, please refer to the owner's manual for your sound card to see if it contains a MIDI expansion port.

## Creative Labs

- SoundBlaster 16 Basic
- SoundBlaster 16
- SoundBlaster 16 ASP
- SoundBlaster 16 SCSI-2
- SoundBlaster 16 MULTICD
- SoundBlaster AWE 32

(**NOTE:** The DB50XG cannot be connected to the SoundBlaster Value Edition sound card.)

## Aztech

- Sound Galaxy NX PRO 16
- Sound Galaxy NX PRO 16 Extra

## Televideo

- TeleSound Pro 16

## Reveal

- Sound FX 16

\* *The sound cards listed above are compatible with the DB50XG; however, specifications are subject to change without notice.*

## ■ Installation Procedure

1. Turn off the computer and unplug its AC power cord.

**!** **CAUTION:** Do not attempt to install your daughter board while the computer is plugged in. This can cause a serious shock hazard!

2. Remove the top cover of the computer. (For details, please refer to your computer's owner's manual.)

3. Remove your existing sound card from the computer's expansion slot.


4. Carefully remove the DB50XG daughter board from the anti-static bag.

**!** **IMPORTANT:** Before touching the daughter board, first touch a metal surface to discharge any static electricity which may be in your body, since such static electricity can cause serious damage to your DB50XG. Also, do not touch the inside surfaces of your daughter board in order to prevent possible interference with or damage to the circuitry.

5. Carefully line up the DB50XG daughter board with the sound card and slowly but steadily guide it into the sound card's expansion port, also inserting the DB50XG's plastic spacers into the corresponding holes to affix the daughter board to the sound card. To prevent breaking or damaging the daughter board during installation, do not use excessive force when attaching it to the sound card.

6. Reinsert the sound card into the computer's expansion slot.

7. Replace the top cover of the computer.

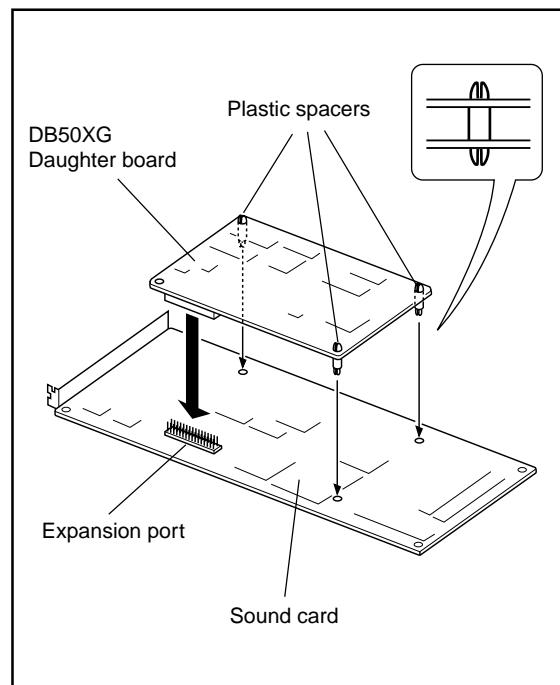


# Setting Up MIDI Mapper

MIDI Mapper lets you select the DB50XG to play MIDI data.

## ■ Procedure

1. Double click the [MIDI Mapper] icon in the Control Panel window. The MIDI Mapper window appears.
2. Select [Setups], and click the [↓] button in the dialog box. A list appears. Choose [(All) MIDI OUT]\* from the list.  
\* *The actual name of the MIDI map may be different depending on which sound card you are using.*

(NOTE: For DOS users, select the “WaveBlaster” or the one which corresponds to the WaveBlaster.)

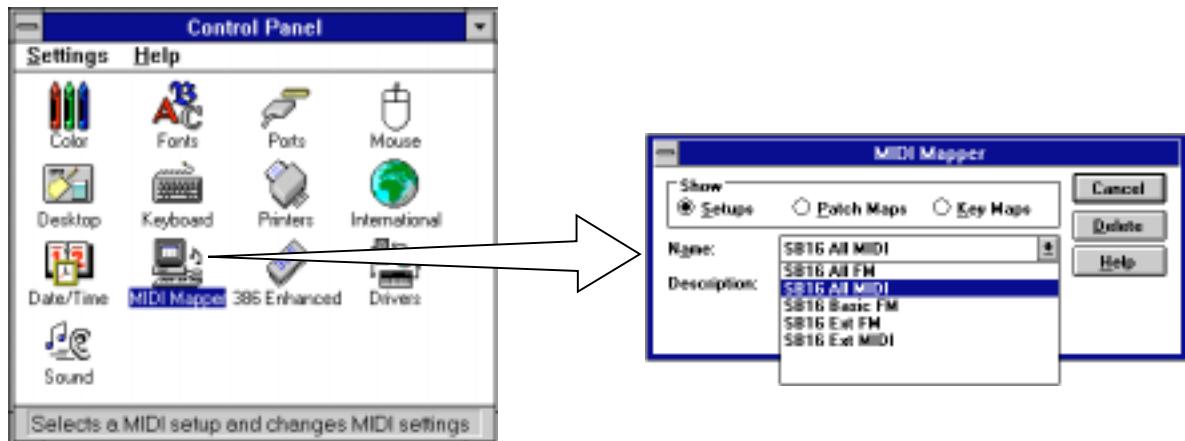

## About the GM and XG



### GM

GM (General MIDI) is an addition to the MIDI standard which ensures that any GM-compatible music data can be accurately played by any GM-compatible tone generator, regardless of maker. The GM mark is affixed to all software and hardware products that support the General MIDI standard. The DB50XG supports “GM System Level 1”.



### XG

XG is a new MIDI format created by Yamaha which significantly improves and expands upon the General MIDI standard by providing a greater variety of high-quality Voices plus considerably enhanced effect operation—while being fully compatible with GM.

# DB50XG Overview and Features

---

The DB50XG has 32-note polyphony and is 16-Part multitimbral, which means it can play up to 16 different instrument Parts (one Part per each of the 16 MIDI channels), each Part having its own Voice. Up to 16 different Voices can be sounded simultaneously.

The DB50XG features both XG and TG300B performance modes. Normally the DB50XG plays in XG mode. However, since it automatically recognizes which mode to select based on incoming MIDI data, you can easily change the mode by MIDI System Exclusive messages that you program in sequencer data, at the head of your composition.

## Please note the following:

- Starting up your computer will automatically initialize all DB50XG settings, or parameter values.
- Since the DB50XG requires about half a second to change modes when it receives a mode change message, be sure to insert at least one blank measure at the top in order to allow enough time for the mode to change before your actual music data begins.

## ● XG Mode

In XG mode the DB50XG will play XG-compatible multitimbral data, as well as multitimbral data created for the GM System Level 1 format.

### In XG mode the DB50XG can:

- Play up to 16 Parts.
- Choose from 480 Normal Voices and 11 Drum Voices.

## ● TG300B Mode

In TG300B mode the DB50XG will play multitimbral music data created for TG300B-compatible tone generators. TG300B mode also provides compatibility with the GM System Level 1 format.

### In TG300B mode the DB50XG can:

- Play up to 16 Parts.
- Choose from 579 Normal Voices and 10 Drum Voices.

## ■ Voices and Elements

A DB50XG Voice can be made up of one or two elements (i.e., sounds), depending on the complexity of the Voice. Many Voices are made up of only one element. Two-element Voices are made up of two one-element Voices, and may be configured in a variety of ways.

The number of elements in use determines the maximum number of simultaneous notes (polyphony) which the DB50XG can play at any given time, depending on the amount of incoming MIDI Note data. For details about the number of elements used in each Voice, see the XG Normal Voice List on page 32.

## ■ Normal Voices and Drum Voices

The DB50XG has two types of Voices—Normal Voices and Drum Voices. (In this Owner's Manual, in general the word Voice refers to a Normal Voice.)

The distinction between a Normal Voice and a Drum Voice is as follows:

- A Normal Voice is simply a pitched Voice which can be played on a musical scale from low to high, such as a piano or trumpet. The DB50XG has 676 Normal Voices.
- A Drum Voice is a complete set of drum and other percussion sounds, each sound having a fixed pitch. Each sound is assigned to a specific MIDI Note number (which also corresponds to a key on a MIDI keyboard). The DB50XG has 21 Drum Voices.

## ■ Maximum Polyphony

The DB50XG can play a maximum of 32 notes polyphony at once. However, the actual number of notes that will play at any given time is determined by the number of elements in use across the 16 Parts.

For example, if you use only one-element Voices, you can achieve the full 32 notes maximum polyphony. If you use one or more two-element Voices, however, maximum polyphony will be reduced accordingly.

The DB50XG is a last-note-priority tone generator, which means that if it receives more than 32 notes of MIDI Note data at any time, earlier (first) notes will automatically cut off to accommodate the most recent (last) incoming notes.

## ■ Part Priority

Each of the DB50XG's 16 Parts corresponds to each of the 16 MIDI channels (1 – 16). If incoming Note data exceeds the maximum polyphony, the DB50XG will prioritize which Parts are played first, in the following order, from higher priority to lower:

- Channel 10 (Drum Part), 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 12, 13, 14, 15, 16.

Therefore, if you are creating your own music data using sequencer software, you should assign your most important Parts (such as melody and bass) to higher priority MIDI channels (i.e., lower MIDI channel numbers) in order to preserve the integrity of your composition. Note that with the GM System Level 1, the Drum Part is always assigned to MIDI channel 10.

## ■ Element Reserve

The DB50XG has an Element Reserve feature that lets you reserve a specified number of notes for certain Parts, in order to keep notes from being “stolen” from those Parts by other Parts if incoming MIDI Note data exceeds maximum available polyphony.

For example, if you specify an Element Reserve value of “10” for Part 1, then Part 1 will always keep 10 elements for itself. You can set Element Reserve values with MIDI System Exclusive messages (see XG Native Parameter Change on page 11, and <Table 1 - 4> on page 28).

## ■ Selecting Voices

The DB50XG not only contains the 128 basic GM Voices and GM drum set, but many variation Voices as well—to give you access to a total of 676 Normal Voices and 21 Drum Voices.

In XG mode, the basic 128 GM Voices can be accessed by selecting Program numbers 1 – 128. Other Voices can be accessed by selecting both bank numbers and Program Change numbers. The Voice bank can be selected via MIDI Control Change Bank Select (MSB and LSB) messages. In XG mode, the MSB value determines the Voice type (Normal, Drum), while the LSB value actually selects the bank (excluding the SFX bank).

When the DB50XG is in TG300B mode, the Voice banks can be selected with appropriate MSB numbers, as LSB is fixed.

Lists of all available Voices along with bank and program numbers are provided on pages 32 – 37.

Note that the 128 MIDI Program Change numbers consist of 0 through 127, whereas the 128 DB50XG program numbers consist of 1 through 128. Depending on the sequencing hardware and software you use, you may have to convert the DB50XG program numbers to the appropriate Program Change numbers.

*\* For more information about Bank Select and Program Change messages, see About MIDI, page 6.*

## ■ Effect Types

The DB50XG features dozens of extremely versatile digital effects generated by Yamaha’s advanced Digital Signal Processing (DSP) technology—which add a completely new dimension to your computer’s sound.

There are three distinct effect types, or effect sections, each of which include a variety of individual effects. There are 11 Reverb type effects, 11 Chorus type effects, and 42 Variation type effects. For a complete list of effects, see the Effect Type List on page 38.

Reverb, Chorus and Variation effect types are configured, or routed, in one of two ways—to be either a System Effect or an Insertion Effect. The difference is as follows:

- **SYSTEM EFFECT**

- Applies the designated effect to all 16 Parts.

- **INSERTION EFFECT**

- Applies the designated effect to only one specific Part.

Reverb and Chorus effect types are dedicated System Effects, and therefore are applied to the overall “mix”. The Variation effect type, however, can be configured as either a System Effect or an Insertion Effect. To designate effect types and parameter values via MIDI messages, see XG Native Parameter Change, page 11.

# About MIDI

## ■ What is MIDI?

MIDI is an acronym that stands for Musical Instrument Digital Interface, which allows electronic musical instruments to “communicate” with each other, by sending and

receiving compatible Note, Control Change, Program Change and various other types of MIDI data, or messages.

## ■ MIDI Messages Received by the DB50XG

The DB50XG is controlled by various types of incoming MIDI messages which automatically determine play mode, select MIDI channels, Voices and effects, change parameter values, and of course play the Voices specified for the various Parts—complete with all the subtle nuances and powerful dynamics of expression that the composer originally intended. Below is an explanation of the various types of MIDI messages which the DB50XG can receive.

### ● Key On/Key Off

Key On/Key Off messages, also called Note messages, tell the DB50XG which notes to play, the Velocity value (depending on how hard the keys are struck) at which to play them, and how long to play them—i.e., when to start (On) and stop (Off) playing each note.

### ● Control Change

Control Change messages let you select a Voice bank, control volume, panning, modulation, portamento time, brightness and various other controller parameters, through specific Control Change numbers which correspond to each of the various parameters.

### ● Program Change

Program Change messages tell the DB50XG which Voice to select for each Part. You can insert Program Change

messages at any desired location in a song. Combining Bank Select numbers let you select various Voices from the hundreds of Voices available in the DB50XG.

### ● Pitch Bend

Pitch Bend messages are continuous controller messages that allow the pitch of designated notes to be raised or lowered by a specified amount over a specified duration.

### ● Channel Aftertouch

Channel Aftertouch is a pressure sensing function which lets you control various functions by how hard you press the keys, over the entire channel.

### ● Polyphonic Aftertouch

Polyphonic Aftertouch is a pressure sensing function which lets you control various functions by how hard you press the keys, for each individual key.

### ● System Exclusive

System Exclusive messages control various functions of the DB50XG, including master volume and master tuning, play mode (XG or TG300B), effect type and various other parameters specifically related to the DB50XG.

## ■ Decimal - Hexadecimal Conversion Chart

Many MIDI messages listed in the MIDI Data Format section, beginning on page 7, are expressed in hexadecimal numbers. The chart below lists the corresponding decimal number for each hexadecimal number. (Hexadecimal numbers may include the letter “H” as a suffix.)

Dec	Hex												
0	00	16	10	32	20	48	30	64	40	80	50	96	60
1	01	17	11	33	21	49	31	65	41	81	51	97	61
2	02	18	12	34	22	50	32	66	42	82	52	98	62
3	03	19	13	35	23	51	33	67	43	83	53	99	63
4	04	20	14	36	24	52	34	68	44	84	54	100	64
5	05	21	15	37	25	53	35	69	45	85	55	101	65
6	06	22	16	38	26	54	36	70	46	86	56	102	66
7	07	23	17	39	27	55	37	71	47	87	57	103	67
8	08	24	18	40	28	56	38	72	48	88	58	104	68
9	09	25	19	41	29	57	39	73	49	89	59	105	69
10	0A	26	1A	42	2A	58	3A	74	4A	90	5A	106	6A
11	0B	27	1B	43	2B	59	3B	75	4B	91	5B	107	6B
12	0C	28	1C	44	2C	60	3C	76	4C	92	5C	108	6C
13	0D	29	1D	45	2D	61	3D	77	4D	93	5D	109	6D
14	0E	30	1E	46	2E	62	3E	78	4E	94	5E	110	6E
15	0F	31	1F	47	2F	63	3F	79	4F	95	5F	111	6F
												127	7F

# MIDI Data Format

---

By sending various types of MIDI messages you can directly control and change the settings on the DB50XG.  
Please refer to the owner's manual of your software and hardware for information about how to transmit MIDI messages to the DB50XG.

## 1. CHANNEL MESSAGES

### 1.1 Key On / Key Off

Messages which are generated when the keyboard is played.  
Reception note range = C-2 (0) – G8 (127), C3 = 60  
Velocity range = 1 – 127 (Only the Key On velocity is received)  
Key On: Generated when a key is pressed.  
Key Off: Generated when a key is released.  
Each message includes a specific note number which corresponds to the key which is pressed, plus a velocity value based on how hard the key is struck.  
If the Multi Part parameter Rcv NOTE MESSAGE (page 29) = OFF for a specific Part, that Part will ignore Key On and Key Off messages.  
If the Drum Setup parameter Rcv NOTE OFF (page 30) = OFF, the Drum Part will ignore Key Off messages.  
If the Drum Setup parameter Rcv NOTE ON = OFF (page 30), the Drum Part will ignore Key On messages.

### 1.2 Control Change

Messages which control volume, panning, and other controller parameters.  
Each type of Control Change message is assigned to a specific control number.  
If the Multi Part parameter for each Control Change Receive (page 29, nn30 – nn40) = OFF, that Part will ignore the specific Control Change message.

#### 1.2.1 Bank Select

Messages which select variation Voice bank numbers.

CNTRL#	PARAMETER	DATA RANGE
0	Bank Select MSB	0:Normal, 63:User Voices, 64:SFX, 126:SFX Kit, 127:Drum
32	Bank Select LSB	0...127

You can select the Voice banks with MSB and LSB numbers.  
MSB and LSB functions differently depending on the play mode.  
In XG mode, MSB numbers select Voice type (Normal Voice or Drum Voice), and LSB numbers select Voice banks.  
In TG300B mode, LSB is fixed, and MSB numbers select Voice banks.  
(See Normal Voice List, Drum Voice List, from page 32.)  
A new bank selection will not become effective until the next Program Change message is received.

#### 1.2.2 Modulation

Messages which control vibrato depth.

CNTRL#	PARAMETER	DATA RANGE
1	Modulation	0...127

A setting of 0 = vibrato off, and a setting of 127 = maximum vibrato.

### 1.2.3 Portamento Time

Messages which control the duration of portamento, or a continuous pitch glide between successively played notes.

CNTRL#	PARAMETER	DATA RANGE
5	Portamento Time	0...127

When the parameter 1.2.9 Portamento = ON, values will adjust the speed of pitch change.

A setting of 0 = minimum portamento time, and 127 = maximum portamento time.

### 1.2.4 Data Entry

Messages which set the value for the parameter specified by RPN/NRPN.

CNTRL#	PARAMETER	DATA RANGE
6	Data Entry MSB	0...127
38	Data Entry LSB	0...127

Parameter value is determined by combining MSB and LSB.

### 1.2.5 Main Volume

Messages which control the volume of each Part.

CNTRL#	PARAMETER	DATA RANGE
7	Main Volume	0...127

A setting of 0 = minimum volume, and 127 = maximum volume.

### 1.2.6 Pan

Messages which control the stereo panning position of each Part.

CNTRL#	PARAMETER	DATA RANGE
10	Pan	0...127

A setting of 0 = extreme left position, and 127 = extreme right position.

### 1.2.7 Expression

Messages which control intonation expression of each Part.

CNTRL#	PARAMETER	DATA RANGE
11	Expression	0...127

A setting of 0 = minimum expression volume, and 127 = maximum expression volume.

### 1.2.8 Hold1

Messages which control sustain on/off.

CNTRL#	PARAMETER	DATA RANGE
64	Hold1	0...127

Settings between 0 – 63 = sustain off, and settings between 64 – 127 = sustain on.

### 1.2.9 Portamento

Messages which control portamento on/off.

CNTRL#	PARAMETER	DATA RANGE
65	Portamento	0...127

Settings between 0 – 63 = portamento off, and settings between 64 – 127 = portamento on.

The parameter 1.2.3 Portamento Time controls the portamento speed.

### 1.2.10 Sostenuto

Messages which control sostenuto on/off.

CNTRL#	PARAMETER	DATA RANGE
66	Sostenuto	0...127

Holding specific notes and then pressing and holding the sostenuto pedal will sustain those notes as you play subsequent notes, until the pedal is released.

Settings between 0 – 63 = sostenuto off, and settings between 64 – 127 = sostenuto on.

### 1.2.11 Soft Pedal

Messages which control soft pedal on/off.

CNTRL#	PARAMETER	DATA RANGE
67	Soft Pedal	0...127

Notes played while holding the soft pedal will be damped. Settings between 0 – 63 = soft pedal off, and settings between 64 – 127 = soft pedal on.

### 1.2.12 Harmonic Content

Messages which adjust the resonance set for each Voice.

CNTRL#	PARAMETER	DATA RANGE
71	Harmonic Content	0...127 (0:-64, 64:+0, 127:+63)

The value set here is an offset value which will be added to or subtracted from the Voice data.

Higher values will result in a more characteristic, resonant sound.

Depending on the Voice, the effective range may be narrower than the range available for adjustment.

### 1.2.13 Release Time

Messages which adjust the envelope release time set for each Voice.

CNTRL#	PARAMETER	DATA RANGE
72	Release Time	0...127 (0:-64, 64:+0, 127:+63)

The value set here is an offset value which will be added to or subtracted from the Voice data.

### 1.2.14 Attack Time

Messages which adjust the envelope attack time set for each Voice.

CNTRL#	PARAMETER	DATA RANGE
73	Attack Time	0...127 (0:-64, 64:+0, 127:+63)

The value set here is an offset value which will be added to or subtracted from the Voice data.

### 1.2.15 Brightness

Messages which adjust the filter cutoff frequency set for each Voice.

CNTRL#	PARAMETER	DATA RANGE
74	Brightness	0...127 (0:-64, 64:+0, 127:+63)

The value set here is an offset value which will be added to or subtracted from the Voice data.

Lower values will result in a softer sound.

Depending on the Voice, the effective range may be narrower than the range available for adjustment.

### 1.2.16 Portamento Control

Messages which apply a portamento between the currently-sounding note and the subsequent note.

CNTRL#	PARAMETER	DATA RANGE
84	Portamento Control	0...127

Portamento Control is transmitted specifying the Note On Key of the currently-sounding note.

Specify a Portamento Source Key number between 0 – 127. When a Portamento Control message is received, the currently sounding pitch will change with a Portamento Time of 0 to the next Key On key on the same channel.

For example, the following settings would apply a portamento from note C3 to C4.

90 3C 7F ..... C3 = Key On  
B0 54 3C ..... Source Key number set to C3  
90 48 7F ..... C4 = Key On (When C4 = on, C3 is raised by a portamento to C4.)

Even if the Multi Part parameter Rcv PORTAMENTO (page 29) = OFF, the Portamento Control message will be received .

### 1.2.17 Effect1 Depth (Reverb Send Level)

Messages which adjust the send level for the Reverb effect.

CNTRL#	PARAMETER	DATA RANGE
91	Effect1 Depth	0...127

### 1.2.18 Effect3 Depth (Chorus Send Level)

Messages which adjust the send level for the Chorus effect.

CNTRL#	PARAMETER	DATA RANGE
93	Effect3 Depth	0...127

### 1.2.19 Effect4 Depth (Variation Effect Send Level)

Messages which adjust the send level for the Variation effect.

CNTRL#	PARAMETER	DATA RANGE
94	Effect4 Depth	0...127

If Variation Connection (page 28) = 1 (System), this message sets the send level for the Variation effect.

If Variation Connection = 0 (Insertion), this has no effect.

### 1.2.20 Data Increment / Decrement (for RPN)

Messages which increase or decrease the MSB value of Pitch Bend Sensitivity, Fine Tune, or Coarse Tune in steps of 1.

CNTRL#	PARAMETER	DATA RANGE
96	RPN Increment	0...127
97	RPN Decrement	0...127

The data byte is ignored.

When the maximum value or minimum value is reached, the value will not be incremented or decremented further.

(Incrementing the Fine Tune will not cause the Coarse Tune to be incremented.)

### 1.2.21 NRPN (Non-Registered Parameter Number)

Messages which adjust a Voice's vibrato, filter, EG, drum setup or other parameter settings.

CNTRL#	PARAMETER	DATA RANGE
98	NRPN LSB	0...127
99	NRPN MSB	0...127

First send the NRPN MSB and NRPN LSB to specify the parameter which is to be controlled. Then use Data Entry to set the value of the specified parameter.

\* Note that once the NRPN has been set for a channel, subsequent data entry will be recognized as the same NRPN's

*value change. Therefore, after you use the NRPN, you should set a Null (7FH, 7FH) value to avoid an unexpected result.*

The following NRPN numbers can be received.

NRPN	DATA ENTRY	MSB	LSB	MSB	PARAMETER NAME and VALUE RANGE
01H	08H mmH	Vibrato Rate mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	09H mmH	Vibrato Depth mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	0AH mmH	Vibrato Delay mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	20H mmH	Filter Cutoff Frequency mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	21H mmH	Filter Resonance mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	63H mmH	EG Attack Time mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	64H mmH	EG Decay Time mm : 00H - 40H - 7FH (-64 - 0 - +63)			
01H	66H mmH	EG Release Time mm : 00H - 40H - 7FH (-64 - 0 - +63)			
14H	rrH mmH	Drum Filter Cutoff Frequency mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number			
15H	rrH mmH	Drum Filter Resonance mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number			
16H	rrH mmH	Drum EG Attack Rate mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number			
17H	rrH mmH	Drum EG Decay Rate mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number Applies to both Decay1 and 2.			
18H	rrH mmH	Drum Instrument Pitch Coarse mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number			
19H	rrH mmH	Drum Instrument Pitch Fine mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number			
1AH	rrH mmH	Drum Instrument Level mm : 00 - 7F (0 - max) rr : drum instrument note number			
1CH	rrH mmH	Drum Instrument Pan mm : 00H - 40H - 7FH (random, left - center - right) rr : drum instrument note number			
1DH	rrH mmH	Drum Instrument Reverb Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number			
1EH	rrH mmH	Drum Instrument Chorus Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number			
1FH	rrH mmH	Drum Instrument Variation Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number			

MSB 14H–1FH (for Drum) is valid only if the Multi Part parameter (page 28) PART MODE = DRUMS 1 or DRUMS2 for that channel. (If PART MODE = DRUM, no values will be changed.)

## 1.2.22 RPN (Registered Parameter Number)

Messages which offset, or add or subtract values from a Part's pitch bend sensitivity, tuning, or other parameter settings.

CNTRL#	PARAMETER	DATA RANGE
100	RPN LSB	0...127 (Default:7FH)
101	RPN MSB	0...127 (Default:7FH)
<i>* Note that once the RPN has been set for a channel, subsequent data entry will be recognized as the same RPN's value change. Therefore after you use the RPN, you should set a Null (7FH, 7FH) value to avoid an unexpected result.</i>		

The following RPN numbers can be received.

RPN	DATA ENTRY	MSB	LSB	MSB	LSB	PARAMETER NAME and VALUE RANGE
00H	00H mmH - -	Pitch Bend Sensitivity mm : 00 - 18H (0 - 24 chromatic steps)				
00H	01H mmH 11H	Assignable in chromatic steps up to 2 octaves Default : 02H LSB value is ignored.				
00H	02H mmH - -	Fine Tuning mm : 00H - 40H - 7FH (-64-0-+63)				
7FH	7FH - - -	Coarse Tuning mm : 28H - 40H - 58H (-24 - +24 chromatic steps) LSB value is ignored. RPN null Cancels RPN and NRPN numbers.				

## 1.2.23 Channel Mode Messages

The following Channel Mode Messages can be received.

2nd BYTE	3rd BYTE	MESSAGE
120	0	All Sounds Off
121	0	Reset All Controllers
123	0	All Notes Off
124	0	Omni Off
125	0	Omni On
126	0 ~ 16	Mono
127	0	Poly

### 1.2.23.1 All Sounds Off

Terminates all sounds currently sounding on the specified channel. However, the status of channel messages such as Note On and Hold On is maintained.

### 1.2.23.2 Reset All Controllers

The values of the following controllers will be reset to the defaults.

CONTROLLER	VALUE
Pitch Bend Change	±0 (center)
Channel Aftertouch	0 (off)
Polyphonic Aftertouch	0 (off)
Modulation	0 (off)
Expression	127 (max)
Hold1	0 (off)
Portamento	0 (off)
Sostenuto	0 (off)
Soft Pedal	0 (off)
Portamento Control	cancels the Portamento Source Key Number that was received

RPN	number not specified; internal data will not change
NRPN	number not specified; internal data will not change

### 1.2.23.3 All Notes Off

Terminates all notes currently on for the specified channel. However, if Hold1 or Sostenuto is on, notes will continue sounding until these are turned off.

### 1.2.23.4 Omni Off

Performs the same function as when an All Notes Off message is received.

### 1.2.23.5 Omni On

Performs the same function as when an All Notes Off message is received.

### 1.2.23.6 Mono

Performs the same function as when an All Sounds Off message is received, and if the 3rd byte (mono number) is in the range of 0 – 16, sets the corresponding channel to Mono Mode (Mode 4 : m = 1).

### 1.2.23.7 Poly

Performs the same function as when an All Sounds Off message is received, and sets the corresponding channel to Poly Mode (Mode 3).

## 1.3 Program Change

Messages for Voice selection.

With a combination of Bank Select, you can select not only basic Voice numbers, but also variation Voice bank numbers.

If the Multi Part parameter Rcv PROGRAM CHANGE (page 29) = OFF, that Part will not receive Program Change messages.

## 1.4 Pitch Bend

Messages for pitch bend wheel values.

If the Multi Part parameter Rcv PITCH BEND CHANGE (page 29) = OFF, that Part will not receive Pitch Bend messages.

## 1.5 Channel Aftertouch

Messages which let you control various functions by the pressure you apply to the keys after the initial striking of the keys, over the entire channel.

If the Multi Part parameter Rcv CHANNEL AFTER TOUCH (page 29) = OFF, that Part will not receive Channel Aftertouch.

## 1.6 Polyphonic Aftertouch

Messages which let you control various functions by the pressure you apply to the keys after the initial striking of the keys, for each individual key.

If the Multi Part parameter Rcv POLYPHONIC AFTER TOUCH (page 34) = OFF, that Part will not receive Polyphonic Aftertouch. Effective range is between note numbers 36 – 97.

## 2. SYSTEM EXCLUSIVE MESSAGES

System Exclusive messages control various functions of the DB50XG, including master volume and master tuning, play mode, effect type and various other parameters.

\* *The device number of the DB50XG is fixed to "All".*

### 2.1 Parameter Change

The DB50XG receives the following parameter change messages.

#### [ UNIVERSAL REALTIME MESSAGE ]

- 1) Master Volume

#### [ UNIVERSAL NON REALTIME MESSAGE ]

- 1) General MIDI Mode On

#### [ XG NATIVE PARAMETER CHANGE ]

- 1) XG System on
- 2) XG System Data parameter change
- 3) Multi Effect1 Data parameter change
- 4) Multi Part Data parameter change
- 5) Drums Setup Data parameter change

#### [ OTHER ]

- 1) Master tuning
- 2) TG300 System Data Parameter change
- 3) TG300 Multi Effect Data parameter change
- 4) TG300 Multi Part Data parameter change

### 2.1.2 Universal Realtime Messages

#### 2.1.2.1 Master Volume

```

11110000 F0 Exclusive status
01111111 7F Universal Real Time
01111111 7F ID of target device
00000100 04 Sub-ID #1=Device Control
            Message
00000001 01 Sub-ID #2=Master Volume
0sssssss ss* Volume LSB
0ttttttt tt Volume MSB
11110111 F7 End of Exclusive
or,
11110000 F0 Exclusive status
01111111 7F Universal Real Time
0xxxnnnn xn Device Number, xxx = irrelevant
00000100 04 Sub-ID #1=Device Control
            Message
00000001 01 Sub-ID #2=Master Volume
0sssssss ss Volume LSB
0ttttttt tt Volume MSB
11110111 F7 End of Exclusive

```

When received, the Volume MSB will be effective for the System Parameter MASTER VOLUME (page 27).

\* “ss” is the hexadecimal expression of 0sssssss; same as for “tt”, “aa”, etc.

### 2.1.3 Universal Non-Realtime Messages

#### 2.1.3.1 General MIDI Mode On

```

11110000 F0 Exclusive status
01111110 7E Universal Non-Real Time
01111111 7F ID of target device
00001001 09 Sub-ID #1=General MIDI
            Message
00000001 01 Sub-ID #2=General MIDI On
11110111 F7 End of Exclusive
or,

```

```

11110000 F0 Exclusive status
01111110 7E Universal Non-Real Time
0xxxnnnn xn Device Number, xxx = irrelevant
00001001 09 Sub-ID #1=General MIDI
    Message
00000001 01 Sub-ID #2=General MIDI On
11110111 F7 End of Exclusive

```

When General MIDI Mode On is received, the play mode will be changed to XG mode.

When this happens, the DB50XG will receive the MIDI messages which compatible with GM System Level 1, and consequently will not receive NRPN and Bank Select messages.

Since approximately 50ms is required to execute this message, be sure to leave an appropriate interval before the subsequent message.

#### 2.1.4 XG Native Parameter Change

With the Parameter Change messages as listed below, you can change the characteristic of a Voice, such as by Effect Type or effect parameter, transpose, tuning, and others.

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n* Device Number
01001100 4C XG Model ID
Oaaaaaaaaaa aa Address High
Oaaaaaaaaaa aa Address Mid
Oaaaaaaaaaa aa Address Low
Oddddddddd dd Data
    |
    |
11110111 F7 End of Exclusive

```

\* Any number is OK since the device number for the DB50XG is fixed to "All".

For parameters with data size of 2 or 4, transmit the appropriate number of data bytes.

When sending the parameter change messages consecutively, be sure to leave an appropriate interval (if the time base is 480, ca 5 unit) between the messages.

#### ■ EXAMPLE OF PARAMETER CHANGE

1. To change Variation Effect type to Echo, first check the Effect Type List (page 38) to identify the MSB and LSB numbers; for Echo Variation Effect type numbers are MSB = 07, LSB = 00.

Next, check the address in <Table 1 - 3> (page 28) for the VARIATION TYPE parameter; in this case the address is High, Mid, Low = 02, 01, 40, respectively.

Apply these to the 2.1.4 XG Native Parameter Change list as follows:

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000010 02 Address High
00000001 01 Address Mid
01000000 40 Address Low
00000111 07 Data (VARIATION TYPE MSB)
00000000 00 Data (VARIATION TYPE LSB)
11110111 F7 End of Exclusive

```

When this data is received, the DB50XG will change the effect type to Echo.

2. To change the effect Dry/Wet balance of Echo to 50% each, first check the Effect Parameter List (page 39), parameter number 10, to identify the Dry(50%)/Wet(50%); in this case the Dry=Wet value is 64 (hexadecimal 40).

Next, check the address in <Table 1 - 3> (page 28) for the VARIATION PARAMETER 10; in this case the address is High, Mid, Low = 02, 01, 54, respectively.

Apply these to the 2.1.4 XG Native Parameter Change list as follows:

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000010 02 Address High
00000001 01 Address Mid
01010100 54 Address Low
01000000 40 Data (MSB) ← actual value
00000000 00 Data (LSB) ← 00 fixed
11110111 F7 End of Exclusive

```

When this data is received, the DB50XG will change the effect Dry/Wet balance to 50% each.

**Be sure to allow enough time for the procedure to take place by inserting an empty measure at the top of the song for every channel.**

#### 2.1.4.1 XG System On

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000000 00 Address High
00000000 00 Address Mid
01111110 7E Address Low
00000000 00 Data
11110111 F7 End of Exclusive

```

When this data is received, the DB50XG will switch to XG mode and all the parameters will be initialized accordingly, and XG-compatible messages such as NRPN and Bank Select messages can be received.

Since approximately 50ms is required to execute this message, be sure to leave an appropriate interval before the subsequent message.

#### TG300B Reset

```

F0 41 1n 42 12 40 00 7F 00 41 F7
n=device number

```

**2.1.4.2 XG System Data parameter change**

See tables <1 - 1> and <1 - 2> (page 27).

**2.1.4.3 Multi Effect1 Data parameter change**

See tables <1 - 1> and <1 - 3> (page 27).

**2.1.4.4 Multi Part Data parameter change**

See tables <1 - 1> (page 27) and <1 - 4> (page 28).

**2.1.4.5 Drums Setup Data parameter change**

See tables <1 - 1> (page 27) and <1 - 5> (page 30).

If a Drum Setup Reset parameter change message (page 27) is received, the Drum Setup parameter values will be initialized.

Selecting a Drum Set will cause the Drum Setup parameter values to be initialized.

**2.1.5 Other parameter changes****2.1.5.1 Master Tuning**

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
00100111 27 Model ID
00110000 30 Sub ID2
00000000 00
00000000 00
0mmmmmmmm mm Master Tune MSB
01111111 11 Master Tune LSB
Occccccc cc irrelevant
11110111 F7 End of Exclusive
```

This message simultaneously changes the pitch of all channels.

**2.2 Bulk Dump**

The DB50XG receives the following bulk dump data.

**[ XG NATIVE ]**

- 1) XG System Data
- 2) Multi Effect1 Data
- 3) Multi Part Data
- 4) Drums Setup Data

**[ QS300 NATIVE ]**

- 1) QS300 User Normal Voice Data

**2.2.1 XG Native Bulk Dump**

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0000nnnn 0n Device Number
01001100 4C XG Model ID
0bbbbbbb bb ByteCount
0bbbbbbb bb ByteCount
Oaaaaaaaaaa aa Address High
Oaaaaaaaaaa aa Address Mid
Oaaaaaaaaaa aa Address Low
0ddddddd dd Data
|
|
|
Occccccc cc Check-sum
11110111 F7 End of Exclusive
```

For the Address and Byte Count, refer to the supplementary tables.

The Check Sum is the value that results in a value of 0 for the lower 7 bits when the Start Address, Byte Count, Data, plus the Check Sum itself are added.

**2.2.1.1 XG System Data bulk dump**

See tables <1 - 1> and <1 - 2> (page 27).

**2.2.1.2 Multi Effect1 Data bulk dump**

See tables <1 - 1> and <1 - 3> (page 27).

**2.2.1.3 Multi Part Data bulk dump**

See tables <1 - 1> (page 27) and <1 - 4> (page 28).

**2.2.1.4 Drums Setup Data bulk dump**

See tables <1 - 1> (page 27) and <1 - 5> (page 30).

**2.2.2 QS300 Native Bulk Dump**

Up to 32 Voices created by the QS300 can be saved in the DB50XG's User Memory by bulk dump messages. (Effective only when the XG mode is active.)

QS300 User Voices are stored in Bank MSB = 63, LSB = 00. Program Change numbers for User Voices are 1 – 32.

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0000nnnn 0n Device Number
01001011 4B QS300 Model ID
0bbbbbbb bb ByteCount
0bbbbbbb bb ByteCount
Oaaaaaaaaaa aa Address High
Oaaaaaaaaaa aa Address Mid
Oaaaaaaaaaa aa Address Low
0ddddddd dd Data
|
|
|
Occccccc cc Check-sum
11110111 F7 End of Exclusive
```

*\*Because of possible differences in number of elements, some QS300 Voices may sound slightly different.*

**2.2.2.1 QS300 User Normal Voice Data bulk dump**

See tables <2 - 1> and <2 - 2> (page 30).

**3. REALTIME MESSAGES****3.1 Active Sensing**

Once FE has been received, if no MIDI data is subsequently received for longer than an interval of approximately 300msec, the DB50XG will perform the same function as when ALL SOUNDS OFF, ALL NOTES OFF, and RESET ALL CONTROLLERS messages are received, and will then return to a status in which FE is not monitored.

# **DB50XG**

## **Sound Daughter Board**

Mode d'emploi

## Précautions

---

- N'exposez pas la carte-fille en plein soleil ou dans un endroit très humide, chaud, poussiéreux ou soumis à de fortes vibrations.
- Avant de toucher la carte-fille, prenez soin de toucher une surface métallique afin de décharger toute électricité statique qui pourrait s'être accumulée dans votre corps.
- Quand vous tenez la carte-fille, ne touchez pas la partie intérieure de la plaquette de circuit et n'appuyez pas sur celle-ci; évitez tout contact de la carte avec de l'eau ou tout autre liquide.
- Avant d'installer la carte-fille sur une carte sonore, débranchez le connecteur d'alimentation de votre ordinateur.
- Avant de raccorder l'ordinateur à d'autres dispositifs, coupez l'interrupteur d'alimentation de chacun des équipements.
- Yamaha ne saurait être tenu responsable de la perte de données, provoquée par une défaillance de l'ordinateur ou une erreur de manipulation par l'utilisateur.
- La carte-fille ne contient aucune pièce réparable par l'utilisateur; dès lors, ne touchez jamais la partie intérieure de la plaquette de circuit et ne modifiez ses circuits électroniques en aucune façon car ceci pourrait provoquer des secousses électriques ou endommager la carte-fille.

**Yamaha ne saurait être tenu responsable des dommages provoqués par un entretien et une utilisation incorrects de la carte-fille.**

- \* Windows® et MS-DOS sont des marques déposées de Microsoft® Corporation.
- \* SoundBlaster™ et WaveBlaster™ sont des marques de fabrique de Creative Labs, Inc.
- \* Les noms de société et les noms de produits apparaissant dans ce Mode d'emploi sont les marques déposées ou les marques de fabrique de leurs entreprises respectives et ils sont ici reconnus comme tels.

# **INTRODUCTION**

Nous vous remercions de votre achat de la Carte-fille sonore Yamaha DB50XG, une carte-fille qui s'attache sur toute carte SoundBlaster™ de Creative Labs ou toute autre carte sonore équipée d'un port d'extension, afin d'élever ses sons de la FM à une "synthèse wavetable" de haute qualité.

Dotée de la technologie de génération sonore AWM2 de qualité professionnelle Yamaha, qui utilise des échantillons ou des formes d'onde haute fidélité provenant d'instruments musicaux ou d'autres sources, la DB50XG contient 676 Voix Normal et 21 Voix Batterie (jeux de percussion), elle dispose de 16 Partitions et d'une polyphonie de 32 notes et elle est complètement compatible avec les applications Windows et DOS, ainsi que le logiciel qui supporte le format standard de Niveau 1 du Système GM (General MIDI).

La DB50XG propose également la nouvelle technologie XG-MIDI de Yamaha, une innovation passionnante qui non seulement vous procure nettement plus de Voix que la sélection GM standard, mais qui vous permet aussi de jouer plus de Voix en même temps; elle offre aussi toute une gamme d'effets numériques (11 effets Reverb, 11 effets Chorus et 42 effets Variation) afin d'ajouter une dimension sans précédent aux sons de votre ordinateur.

Un disque CD-ROM livré avec la carte-fille comporte des chansons (en formats MIDI et audio) et des "MIDI clips" SMF afin de démontrer les extraordinaires dimensions sonores du XG, ainsi qu'une version de démonstration du logiciel Visual Arranger de Yamaha.

Le présent Mode d'emploi traite de l'installation et de l'utilisation de la DB50XG; il contient aussi toutes les informations MIDI pertinentes.

Pour garantir une installation et une utilisation adéquates du matériel et du logiciel et afin de bénéficier pendant de longues années des sons et des performances remarquables de votre DB50XG, veuillez lire attentivement cette brochure et la conserver en lieu sûr de manière à pouvoir vous y référer ultérieurement.

## **■ Contenu du progiciel**

Le progiciel DG50XG comporte les articles ci-dessous; avant de commencez, veuillez vérifier que tous les éléments sont présents.

- Carte-fille sonore DB50XG
- Mode d'emploi
- CD-ROM (Il renferme des données MIDI et des plages audio stéréophoniques de chansons de démonstration XG, ainsi que des "clips MIDI" et une version de démonstration du logiciel Visual Arranger de Yamaha.)

## **R E M A R Q U E**

Si vous désirez modifier des fichiers MIDI existants ou créer une chanson MIDI à partir de zéro en utilisant divers effets et sonorités du DB5-XG, vous devez utiliser un séquenceur externe, capable de modifier les messages exclusifs de système et de transmettre au DB50XG les changements de paramètres, tels que XG System On. Reportez-vous en page 24 où vous trouverez plus d'informations sur les messages exclusifs de système.

## **Table des matières**

Installation de la Carte-fille .....	16	Liste des Voix Normal TG300B .....	34
Réglage de mappeur MIDI .....	17	Liste des Voix Batterie XG .....	36
A propos des Normes GM et XG .....	17	Liste des Voix Batterie TG300B .....	37
Aperçu et caractéristiques de la DB50XG ...	18	Liste des types d'effets .....	38
A propos de l'interface MIDI .....	20	Liste des paramètres d'effet .....	39
Format de données MIDI .....	21	Tableau d'assignation de valeur de données d'effet .....	42
Tableaux de données MIDI .....	27	Spécifications technique .....	43
Liste des Voix Normal XG .....	32		

# Installation de la Carte-fille

La DB50XG se branche directement sur les cartes sonores répertoriées ci-dessous, ainsi que sur toute carte sonore ayant un port d'extension WaveBlaster. Si la carte dont vous disposez ne se trouve pas sur cette liste, reportez-vous au mode d'emploi de votre carte pour savoir si elle possède un port d'extension MIDI.

## Creative Labs

- SoundBlaster 16 Basic
- SoundBlaster 16
- SoundBlaster 16 ASP
- SoundBlaster 16 SCSI-2
- SoundBlaster 16 MULTICD
- SoundBlaster AWE 32

**(Remarque:** La DB50XG ne peut pas être connectée à la carte sonore SoundBlaster Value Edition.)

## Aztech

- Sound Galaxy NX PRO 16
- Sound Galaxy NX PRO 16 Extra

## Televideo

- TeleSound Pro 16

## Reveal

- Sound FX 16

\* *Les cartes sonores ci-dessus sont compatibles avec la DB50XG; toutefois, les spécifications sont sujettes à modifications sans préavis.*

## ■ Démarches d'installation

1. Mettez l'ordinateur hors tension et débranchez son cordon d'alimentation secteur.

**ATTENTION:** Sous peine de vous exposer à une sérieuse secousse électrique, n'installez pas la carte-fille pendant que votre ordinateur est branché sur le secteur.


2. Déposez le couvercle de l'ordinateur. (Pour les détails, reportez-vous à son mode d'emploi.)
3. Retirez la carte sonore déjà installée dans la fente d'extension de l'ordinateur.
4. Retirez délicatement la carte-fille DB50XG de son sachet anti-électricité statique.

**IMPORTANT:** Avant de toucher la carte-fille, touchez une surface métallique afin de décharger toute électricité statique accumulée dans votre corps, car ce type d'électricité peut endommager sérieusement votre DB50XG. Ne touchez jamais les surfaces intérieures de la carte-fille pour éviter toute interférence avec les circuits et tout dégât consécutif.

5. Alignez délicatement la carte-fille DB50XG avec la carte sonore et guidez-la lentement mais fermement dans le port d'extension; insérez aussi les entretoises plastiques de la DB50XG dans les orifices correspondants afin de fixer la carte-fille sur la carte sonore. Pour éviter de briser ou d'endommager la carte-fille pendant son installation, procédez avec attention sans forcer.

6. Réinstallez la carte sonore dans la fente d'extension de l'ordinateur.

7. Replacez le couvercle sur l'ordinateur.

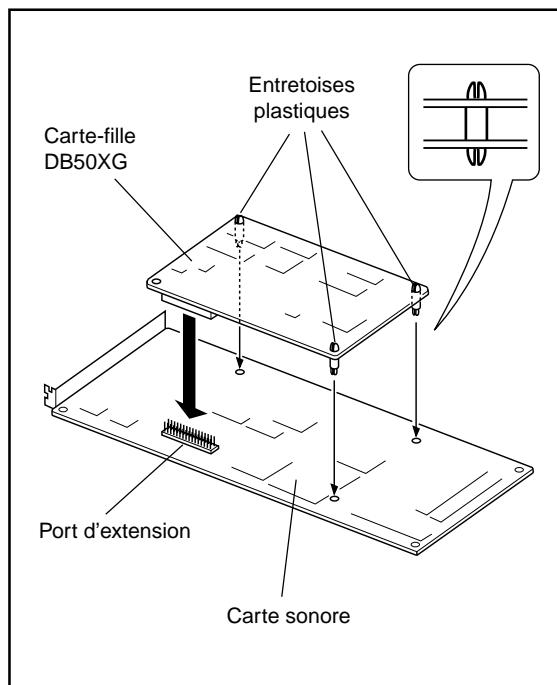


# Réglage du Mappeur MIDI

Le Mappeur MIDI vous permet de choisir la DB50XG afin de jouer des données MIDI.

## ■ Marche à suivre

1. Cliquez deux fois l'icône [MIDI Mapper] sur la fenêtre Panneau de Contrôle. La fenêtre MIDI Mapper apparaît.
2. Sélectionnez (Setups) et cliquez le bouton [ ↓ ] dans la case de dialogue. Une liste apparaît où vous choisissez [(All) MIDI OUT]\*.  
\* Il se peut que le nom réel de la carte MIDI soit différent selon la carte sonore que vous utilisez.

(Remarque: Pour les utilisateurs de DOS, sélectionnez “WaveBlaster” ou ce qui correspond à WaveBlaster.)

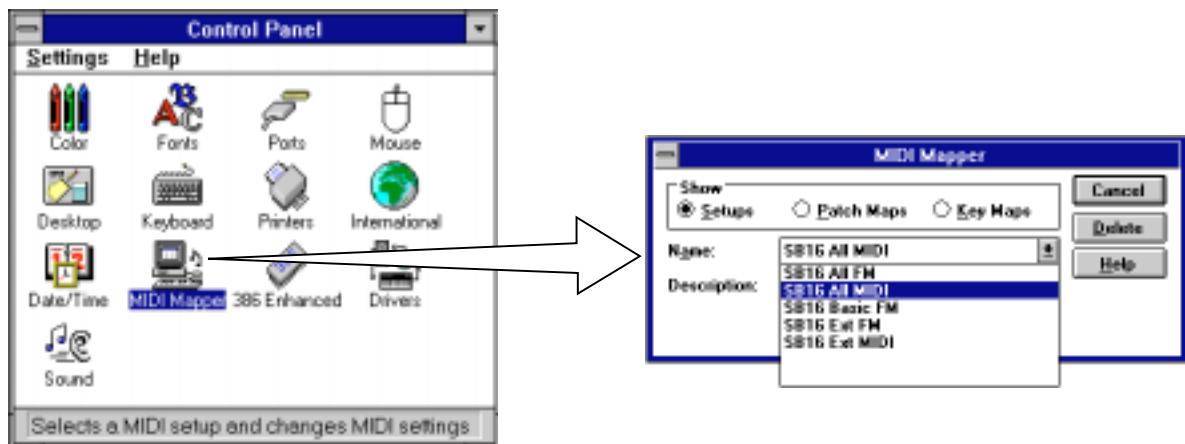

## A propos des Normes GM et XG



### GM

GM (General MIDI) a été ajouté à la Norme MIDI pour faire en sorte que toute donnée musicale compatible GM puisse être restituée avec précision par n'importe quel générateur de sons compatible GM, quel que soit son fabricant. Le sigle GM est apposé sur tous les logiciels et matériels qui supportent la norme General MIDI. La carte DB50XG supporte le “Système GM, Niveau 1”.



### XG

XG est un nouveau format MIDI, créé par Yamaha, afin d'améliorer et d'élargir de façon substantielle la norme General MIDI en proposant une plus grande variété de Voix de haute qualité ainsi qu'une opération remarquablement améliorée des effets, tout en restant parfaitement compatible avec la norme GM.

# Aperçu et caractéristiques de la DB50XG

---

La DB50XG a une polyphonie à 32 notes et elle est multitimbre à 16 Partitions, c'est-à-dire qu'elle peut jouer jusqu'à 16 partitions d'instruments différents (une Partition pour chacun des 16 canaux MIDI), chaque Partition ayant sa propre Voix. Un maximum de 16 Voix différentes peuvent être utilisées simultanément.

La DB50XG offre les deux modes de performance XG et TG300B. Normalement, la DB50XG joue en mode XG, mais comme elle identifie automatiquement quel mode doit être sélectionné en se basant sur les données MIDI entrées, vous pourrez facilement changer le mode grâce aux messages System Exclusive MIDI que vous programmez parmi les données de séquenceur au début de votre composition.

## Veuillez noter les points suivants:

- La mise en marche de votre ordinateur va initialiser automatiquement tous les réglages ou valeurs de paramètres de la DB50XG.
- Comme la DB50XG a besoin d'environ une demi seconde pour changer de mode quand il reçoit un message à cet effet, prenez soin d'insérer au moins une mesure vierge au début, afin de laisser assez de temps pour le changement du mode avant que ne commencent les données musicales proprement dites.

## ● XG Mode

En mode XG, la DB50XG reproduira les données multitimbre compatibles XG, ainsi que les données multitimbre, créées pour le format Système GM, Niveau 1.

### En mode XG, la DB50XG peut:

- Reproduire jusqu'à 16 Partitions.
- Choisir parmi 480 Voix Normal et 11 Voix Batterie.

## ● Mode TG300B

En mode TG300B, la DB50XG va reproduire les données musicales multitimbre, créées pour les générateurs de sons compatibles TG300B. Le mode TG300B assure aussi la compatibilité avec le format Système GM, Niveau 1.

### En mode TG300B, la DB50XG peut:

- Reproduire jusqu'à 16 Partitions.
- Choisir parmi 579 Voix Normal et 10 Voix Batterie.

## ■ Voix et Éléments

Une Voix de la DB50XG peut se composer d'un ou de deux éléments (c.à.d. des sons), selon la complexité de la Voix. Beaucoup de Voix sont formées d'un seul élément. Les Voix à 2 éléments sont formées de deux Voix à un élément et elles peuvent être configurées de diverses façons.

Le nombre d'éléments utilisés détermine le nombre maximum de notes simultanées (polyphonie) que la DB50XG peut jouer à un moment donné, selon la quantité de données de Notes MIDI entrées. Pour les détails sur le nombre d'éléments utilisés pour chaque Voix, reportez vous à "Liste des Voix Normal XG" en page 32.

## ■ Voix Normal et Voix Batterie

La DB50XG possède deux types de voix, à savoir les Voix Normal et les Voix Batterie. (Dans ce mode d'emploi, le terme "Voix" désigne habituellement une Voix Normal.) La distinction entre une Voix Normal et une Voix Batterie est la suivante:

- Une Voix dite "Normal" est simplement une Voix timbrée qui peut être reproduite sur une gamme musicale du grave à l'aigu, tel que celle d'un piano ou d'un trompette. La DB50XG possède ainsi 676 Voix Normal.
- Une Voix Batterie est un jeu complet de sons de tambours et autres instruments à percussion, chacun des son ayant une hauteur fixe. Chaque son est affecté à un numéro particulier de Note MIDI (qui correspond à une touche sur un clavier MIDI). La DB50XG possède 21 Voix Batterie.

## ■ Polyphonie maximum

La DB50XG peut produire 32 notes de sons polyphoniques à la fois. Cependant, le nombre réel de notes qui seront jouées à un moment donné sera déterminé par le nombre d'éléments utilisés sur les 16 Partitions.

Par exemple, si vous utilisez seulement des Voix à un élément, vous pouvez parvenir à une polyphonie totale de 32 notes maximum. En revanche, si vous utilisez des Voix à un ou deux éléments, la polyphonie maximum sera réduite d'autant.

La DB50XG est un générateur de sons à priorité à la dernière note, ce qui signifie que si elle reçoit plus de 32 notes de données MIDI à un moment donné, les notes précédentes (les premières) seront automatiquement coupées pour accomoder les plus récentes (les dernières).

## ■ Priorité de partition

Chacune des 16 Partitions de la DB50XG correspond à un des 16 canaux MIDI (1 – 16). Si les données de Note entrées dépassent la polyphonie maximum, la DB50XG va donner la priorité aux Partitions jouées d'abord, en suivant l'ordre décroissant de priorité ci-après:

- Canal 10 (Partition Batterie), 1, 2, 3, 4, 5, 6, 7, 8, 9, 11, 12, 13, 14, 15, 16.

Par conséquent, si vous créez vos propres données musicales à l'aide d'un logiciel pour séquenceur, vous devrez assigner les Partitions les plus importantes (telles que la mélodie et les basses) aux canaux MIDI de haute priorité (c.à.d. des petits numéros de canaux MIDI) afin de préserver l'intégrité de votre composition. Notez qu'avec le Système GM de Niveau 1, la Partition Batterie est toujours assignée au canal MIDI 10.

## ■ Element Reserve

La DB50XG possède une fonction "Element Reserve" qui vous permet de réserver un nombre spécifié de notes pour certaines partitions, de manière que ces notes ne soient pas "volées" par d'autres Partitions si les données de Note MIDI entrées dépassent la polyphonie maximum qui est disponible.

Par exemple, si vous spécifiez une valeur Element Reserve de "10" pour la Partition 1 , cette Partition 1 conservera toujours 10 éléments pour elle-même. Vous pourrez définir les valeurs Element Reserve par les messages System Exclusive MIDI (cf. "XG Native Parameter Change" en page 25 et le <Tableau 1 - 4> en page 28).

## ■ Sélection des Voix

La DB50XG contient non seulement 128 Voix GM basiques et des jeux de batterie GM, mais aussi de nombreuses Voix variation, ce qui vous donne accès à un total de 676 Voix Normal et de 21 Voix Batterie.

En mode XG, vous pouvez avoir accès aux 128 Voix GM basiques en sélectionnant les numéros de Programme 1 - 128. Pour avoir accès aux autres Voix, vous devez sélectionner les numéros de Banque et les numéros de Changement de Programme. La banque de Voix peut être choisie via les messages MIDI Control Change Bank Select (MSB et LSB). En mode XG, la valeur MSB détermine le type de Voix (Normal ou Batterie), tandis que la valeur LSB sélectionne la banque (sauf la banque SFX).

Quand la DB50XG est en mode TG300B, les banques de Voix peuvent être sélectionnées par les numéros MSB appropriés, car LSB est fixe.

Les listes de toutes les Voix disponibles avec leur banque et leurs numéros de programme se trouvent aux pages de 32 à 37.

Remarquez que les 128 numéros de Changement de Programme MIDI vont de 0 à 127, tandis que les 128 numéros de programme DB50XG vont de 1 à 128.

Selon le matériel et le logiciel de séquenceur utilisé, il se peut que vous ayez à convertir les numéros de programme DB50XG pour correspondre aux numéros de Changement de Programme appropriés.

\* Pour des informations complémentaires sur les messages Sélection de Banque et Changement de Programme, reportez-vous à "A propos de l'interface MIDI" en page 20.

## ■ Types d'effets

La DB50XG propose des dizaines d'effets numériques extrêmement polyvalents, le fruit de la technologie de pointe du Traitement des Signaux Numériques (DPS) de Yamaha. Ces effets ajoutent une dimension toute nouvelle aux sons de votre ordinateur.

Il existe trois types d'effets, ou sections d'effets, distincts, dont chacun comprend une série d'effets individuels. Il y a 11 effets du type Reverb, 11 effets du type Chorus et 42 effets du type Variation. Vous trouverez une liste complète de ces effets en page 38 sous "Liste des types d'effets".

Les types d'effets Reverb, Chorus et Variation sont configurés ou acheminés selon un ou deux parcours, pour être soit un Effet Système ou un Effet Insertion. La différence entre ceux-ci est la suivante:

### • EFFET SYSTEME

- Applique l'effet désigné à toutes les 16 Partitions.

### • EFFET INSERTION

- Applique l'effet désigné uniquement à une Partition spécifique.

Les types d'effets Reverb et Chorus sont des Effets Système réservés et ils sont donc appliqués au "mixage" d'ensemble. En revanche, le type d'effet Variation peut être configuré soit comme Effet Système, soit comme Effet Insertion. Pour désigner les types d'effet et les valeurs de paramètre via les messages MIDI, consultez la page 25 "XG Native Parameter Change".

# A propos de l'interface MIDI

## ■ Qu'est-ce que MIDI?

MIDI est un acronyme de l'anglais "Musical Instrument Digital Interface" (c.à.d. Interface pour Instruments de Musique Numériques). Cette norme permet aux instruments de musique électroniques de "communiquer" entre eux par

l'envoi et la réception de données ou de messages MIDI, tels que Note, Changement de Contrôle, Changement de Programme et d'autres types encore.

## ■ Messages MIDI reçus par la DB50XG

La DB50XG est contrôlée par divers types de messages MIDI qui, automatiquement, déterminent le mode de lecture, sélectionnent les canaux MIDI, les Voix et les Effets, changent les valeurs de paramètres et, bien sûr, jouent les Voix spécifiées pour les diverses Partitions. Tout cela s'accompagne avec toutes les nuances subtiles et la dynamique puissante de l'expression que l'ordinateur avait fournies à l'origine. Ci-après vous trouverez une explication des divers types de messages MIDI que la DB50XG peut recevoir.

### ● Key On/Key Off

Les messages Key On/Key Off, appelés aussi messages Note, disent à la DB50XG quelles notes jouer, la valeur de la Vélocité (dépendant de la force avec laquelle les touches sont frappées) à laquelle les notes doivent être jouées, et la longueur de leur exécution, c'est-à-dire quand commencer (On) et arrêter (Off) comme note.

### ● Control Change

Les messages Control Change vous permettent de choisir la banque de Voix, de contrôler le volume, le panning, la modulation, la durée du portamento, la brillance et divers autres paramètres de contrôleur par des valeurs spécifiques qui correspondent à chacun des divers paramètres.

### ● Program Change

Les messages Program Change disent à la DB50XG quelle Voix sélectionner pour chaque Partition. Vous pouvez in-

sérer des messages Program Change à n'importe quel point souhaité dans une chanson. Le fait de combiner des numéros de sélection de banque vous permet de choisir diverses Voix parmi les centaines que la DB50XG met à votre disposition.

### ● Pitch Bend

Les messages Pitch Bend sont des messages de contrôleur continus qui permettent d'élever ou d'abaisser la hauteur des notes désignées selon une valeur spécifiée et pendant une durée spécifiée.

### ● Channel Aftertouch

Channel Aftertouch est une fonction détectrice de pression qui vous permet de contrôler diverses fonctions par la force avec laquelle les touches sont actionnées sur tout le canal.

### ● Polyphonic Aftertouch

Polyphonic Aftertouch est une fonction détectrice de pression qui vous permet de contrôler diverses fonctions par la force avec laquelle les touches sont actionnées pour chaque touche individuelle.

### ● System Exclusive

Les messages System Exclusive contrôlent diverses fonctions de la DB50XG, telles que le volume principal, l'accord principal, le mode de lecture (XG ou TG300B), le type d'effet et divers autres paramètres, liés spécifiquement à la DB50XG.

## ■ Table de conversion décimale - hexadécimale

De nombreux messages MIDI répertoriés dans la section Format de données MIDI à partir de la page 21, sont exprimés en notation hexadécimale. Le tableau ci-après fournit la valeur décimale correspondant à chaque valeur hexadécimale. (La notation hexadécimale peut comporter la lettre "H" comme suffixe.)

Dec	Hex													
0	00	16	10	32	20	48	30	64	40	80	50	96	60	
1	01	17	11	33	21	49	31	65	41	81	51	97	61	
2	02	18	12	34	22	50	32	66	42	82	52	98	62	
3	03	19	13	35	23	51	33	67	43	83	53	99	63	
4	04	20	14	36	24	52	34	68	44	84	54	100	64	
5	05	21	15	37	25	53	35	69	45	85	55	101	65	
6	06	22	16	38	26	54	36	70	46	86	56	102	66	
7	07	23	17	39	27	55	37	71	47	87	57	103	67	
8	08	24	18	40	28	56	38	72	48	88	58	104	68	
9	09	25	19	41	29	57	39	73	49	89	59	105	69	
10	0A	26	1A	42	2A	58	3A	74	4A	90	5A	106	6A	
11	0B	27	1B	43	2B	59	3B	75	4B	91	5B	107	6B	
12	0C	28	1C	44	2C	60	3C	76	4C	92	5C	108	6C	
13	0D	29	1D	45	2D	61	3D	77	4D	93	5D	109	6D	
14	0E	30	1E	46	2E	62	3E	78	4E	94	5E	110	6E	
15	0F	31	1F	47	2F	63	3F	79	4F	95	5F	111	6F	
													127	7F

# Format de données MIDI

En transmettant divers types de messages MIDI, vous pouvez contrôler directement et changer les réglages sur la DB50XG.

Veuillez consulter le mode d'emploi du logiciel et du matériel à propos des informations relatives à la transmission des messages MIDI vers la DB50XG.

## 1. MESSAGES DE CANAL

### 1.1 Marche/arrêt de touche (Key On/Key Off)

Messages produits quand le clavier est joué.

Plage de note de réception = C-2 (0) – G8 (127), C3 = 60

Plage de vitesse = 1 – 127 (Seule la vitesse Key On est reçue)

Key On: Produit quand une touche est actionnée.

Key Off: Produit quand une touche est relâchée.

Chaque message inclut un numéro de note spécifique qui correspond à la touche actionnée, plus une valeur de vitesse, basée sur la force avec laquelle la touche est frappée.

Si le paramètre Multi-partitions Rcv NOTE MESSAGE (page 29) = OFF pour une partition spécifique, celle-ci ignorera les messages Key On et Key Off.

Si le paramètre Réglage Batterie Rcv NOTE OFF (page 30) = OFF, la partition Batterie ignorera les messages Key Off. Si le paramètre Réglage Batterie Rcv NOTE ON = OFF (page 30), la partition Batterie ignorera les messages Key On.

### 1.2 Changement de contrôle

Messages contrôlant le volume, le panoramique et d'autres paramètres de contrôleur.

Chaque type de message Changement de contrôle est assigné à un numéro de contrôle spécifique.

Si le paramètre Multi-partition pour chaque Réception de Changement de Contrôle (page 29, nn30 – nn 40) = OFF, cette partition ignorera le message Changement de contrôle spécifique.

#### 1.2.1 Sélection de banque

Messages sélectionnant les numéros de banque de Voix.

CNTRL#	PARAMETER	DATA RANGE
0	Sélection Banque MSB	0:Normal, 63:Voix Util, 64:SFX, 126:SFX Kit, 127:Batterie
32	Sélection Banque LSB	0...127

Vous pouvez sélectionner les banques Voix par les numéros MSB et LSB.

MSB et LSB fonctionnent différemment selon le mode de lecture.

En mode XG, les numéros MSB sélectionnent le type de Voix (Voix Normal ou Voix Batterie), tandis que les numéros LSB sélectionnent les banques Voix.

En mode TG300B, LSB est fixe, tandis que les numéros MSB sélectionnent les banques de Voix.

(Cf. Liste des Voix Normal, Liste des Voix Batterie, à partir de la page 32.)

La sélection d'une nouvelle banque ne sera pas effective avant que le message de Changement de Programme suivant ne soit reçu.

#### 1.2.2 Modulation

Messages contrôlant la profondeur de vibrato.

CNTRL#	PARAMETER	DATA RANGE
1	Modulation	0...127

Un réglage à 0 = coupure de vibrato et un réglage à 127 = vibrato maximum.

#### 1.2.3 Durée de portamento

Messages contrôlant la durée de portamento ou glissement continu de timbre entre des notes jouées successivement.

CNTRL#	PARAMETER	DATA RANGE
5	Durée de Portamento	0...127

Quand le paramètre 1.2.9 Portamento = ON, les valeurs vont ajuster la vitesse du changement de timbre.

Un réglage à 0 = durée minimale de portamento, et 127 = durée maximale de portamento.

#### 1.2.4 Entrée de données

Messages réglant la valeur pour le paramètre spécifié par RPN/ NRPN.

CNTRL#	PARAMETER	DATA RANGE
6	Entrée Données MSB	0...127
38	Entrée Données LSB	0...127

La valeur de paramètre est déterminée en combinant MSB et LSB.

#### 1.2.5 Volume principal

Messages contrôlant le volume de chaque partition.

CNTRL#	PARAMETER	DATA RANGE
7	Volume principal	0...127

Un réglage à 0 = volume minimal et à 127 = réglage maximal.

#### 1.2.6 Panoramique

Messages contrôlant la position du panoramique stéréo de chaque partition.

CNTRL#	PARAMETER	DATA RANGE
10	Panoramique	0...127

Un réglage à 0 = position extrême gauche et à 127 = position extrême droite.

#### 1.2.7 Expression

Messages contrôlant l'expression d'intonation de chaque partition.

CNTRL#	PARAMETER	DATA RANGE
11	Expression	0...127

Un réglage à 0 = volume d'expression minimal et à 127 = volume d'expression maximale.

#### 1.2.8 Maintien 1

Messages contrôlant la marche/arrêt du maintien.

CNTRL#	PARAMETER	DATA RANGE
64	Maintien 1	0...127

Réglages entre 0 – 63 = Maintien hors service, et réglages entre 64 – 127 = Maintien en service.

#### 1.2.9 Portamento

Messages contrôlant la marche/arrêt du portamento.

CNTRL#	PARAMETER	DATA RANGE
65	Portamento	0...127

Réglages entre 0 – 63 = Portamento hors service, et réglages entre 64 – 127 = Portamento en service.

Le paramètre 1.2.3 Durée de Portamento contrôle la vitesse du portamento.

### 1.2.10 Sostenuto

Messages contrôlant la marche/arrêt du sostenuto.

CNTRL#	PARAMETER	DATA RANGE
66	Sostenuto	0...127

Le fait d'appuyer sur des notes spécifiques et de maintenir appuyée la pédale sostenuto va soutenir ces notes tandis que vous jouez les notes suivantes jusqu'à ce que la pédale soit relâchée.

Réglages entre 0 – 63 = mise hors service de sostenuto, et réglages entre 64 – 127 = mise en service de sostenuto.

### 1.2.11 Pédale douce

Messages contrôlant la marche/arrêt de la pédale douce.

CNTRL#	PARAMETER	DATA RANGE
67	Soft Pedal	0...127

Les notes jouées en appuyant sur la pédale douce sont amorties.

Réglages entre 0 – 63 = pédale douce hors service, et réglages entre 64 – 127 = pédale douce en service.

### 1.2.12 Contenu harmonique

Messages ajustant la résonance réglée pour chaque Voix

CNTRL#	PARAMETER	DATA RANGE
71	Contenu Harmonique	0...127 (0:-64, 64:+0, 127:+63)

La valeur fixée ici est une valeur de décalage qui sera ajoutée ou soustraite de la donnée de Voix

Des valeurs plus hautes fourniront un son plus résonant et caractéristique.

Selon la Voix, la plage effective peut s'avérer plus étroite que la plage disponible pour le réglage.

### 1.2.13 Durée de libération

Messages ajustant la durée de libération d'enveloppe, fixée pour chaque voix.

CNTRL#	PARAMETER	DATA RANGE
72	Durée Libération	0...127 (0:-64, 64:+0, 127:+63)

La valeur fixée ici est une valeur de décalage qui sera ajoutée ou soustraite de la donnée de Voix.

### 1.2.14 Durée d'attaque

Messages ajustant la durée d'attaque d'enveloppe, fixée pour chaque voix.

CNTRL#	PARAMETER	DATA RANGE
73	Durée Attaque	0...127 (0:-64, 64:+0, 127:+63)

La valeur fixée ici est une valeur de décalage qui sera ajoutée ou soustraite de la donnée de Voix.

### 1.2.15 Luminosité

Messages qui ajustent la fréquence de coupure du filtre, fixée pour chaque voix.

CNTRL#	PARAMETER	DATA RANGE
74	Luminosité	0...127 (0:-64, 64:+0, 127:+63)

La valeur fixée ici est une valeur de décalage qui sera ajoutée ou soustraite de la donnée de Voix.

Des valeurs plus basses résulteront en un son plus doux.

Selon la Voix, la plage effective peut s'avérer plus étroite que la plage disponible pour le réglage.

### 1.2.16 Contrôle de Portamento

Messages appliquant à portamento entre la note sonnant actuellement et la note suivante.

CNTRL#	PARAMETER	DATA RANGE
84	Contrôle Portamento	0...127

Le Contrôle de Portamento est transmis en spécifiant la Touche Note On de la note sonnant actuellement.

Spécifiez un numéro de Touche de Source Portamento entre 0 – 127.

Quand un message de Contrôle Portamento est reçu, la hauteur sonnant actuellement va changer avec une Durée de Portamento 0 jusqu'à la touche Key On suivante sur le même canal.

Par exemple, les réglages suivants appliqueraient un portamento de la note C3 à C4.

90	3C	7F .....	C3 = Key On
B0	54	3C .....	Source Key number set to C3
90	48	7F .....	C4 = Key On (Quand C4 = on, C3 est élevé par un portamento à C4.)

Même si un paramètre Multi-partitions Rcv PORTAMENTO (page 29) = OFF, le message Contrôle de Portamento Control sera reçu.

### 1.2.17 Profondeur d'Effet 1 (Reverb Send Level)

Messages ajustant le niveau de transmission pour l'effet Reverb.

CNTRL#	PARAMETER	DATA RANGE
91	Prof. Effet1	0...127

### 1.2.18 Profondeur d'Effet 3 (Chorus Send Level)

Messages ajustant le niveau de transmission pour l'effet Chorus.

CNTRL#	PARAMETER	DATA RANGE
93	Prof. Effet3	0...127

### 1.2.19 Profondeur d'Effet4 (Variation Effect Send Level)

Messages ajustant le niveau de transmission pour l'effet Variation.

CNTRL#	PARAMETER	DATA RANGE
94	Prof. Effet4	0...127

Si la connexion de Variation (page 28) = 1 (System), ce message définit le niveau de transmission pour l'effet Variation.

Si la Connexion de Variation = 0 (Insertion), ceci n'exerce pas d'effet.

### 1.2.20 Augmentation / Diminution Donnée (pour RPN)

Messages qui augmentent ou diminuent la valeur MSB de la Sensibilité de Hauteur de son, Accord fin ou Accord brut en paliers de 1.

CNTRL#	PARAMETER	DATA RANGE
96	RPN Incrément	0...127
97	RPN Décrément	0...127

L'octet de données est ignoré.

Quand la valeur maximale ou la valeur minimale est atteinte, la valeur n'augmente ou ne diminue plus.

(L'augmentation de l'Accord Fin n'entraînera pas l'augmentation de l'Accord brut.)

### 1.2.21 NRPN (Nombre Paramètre Non-Enregistré)

Messages ajustant un vibrato de Voix, filtre, EG, réglage batterie ou d'autres réglages de paramètres.

CNTRL#	PARAMETER	DATA RANGE
98	NRPN LSB	0...127
99	NRPN MSB	0...127

Envoyez d'abord le NRPN MSB and NRPN LSB pour spécifier le paramètre qui doit être contrôlé. Utilisez ensuite Data Entry pour définir la valeur du paramètre spécifié.

\* Notez qu'une fois que le NRPN a été défini pour un canal, l'entrée de données suivante sera reconnue comme le même changement de valeur NRPN. Par conséquent, après avoir utilisé le NRPN, il faut définir une valeur Nul (7FH, 7FH) pour éviter un résultat inattendu.

Les nombres NRPN suivants peuvent être reçus.

NRPN DATA ENTRY		
MSB	LSB	NOM de PARAMETRE et PLAGE de VALEUR
01H	08H	mmH Vibrato Rate mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	09H	mmH Vibrato Depth mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	0AH	mmH Vibrato Delay mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	20H	mmH Filter Cutoff Frequency mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	21H	mmH Filter Resonance mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	63H	mmH EG Attack Time mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	64H	mmH EG Decay Time mm : 00H - 40H - 7FH (-64 - 0 - +63)
01H	66H	mmH EG Release Time mm : 00H - 40H - 7FH (-64 - 0 - +63)
14H	rrH	mmH Drum Filter Cutoff Frequency mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
15H	rrH	mmH Drum Filter Resonance mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
16H	rrH	mmH Drum EG Attack Rate mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
17H	rrH	mmH Drum EG Decay Rate mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
18H	rrH	mmH Applies to both Decay1 and 2. Drum Instrument Pitch Coarse mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
19H	rrH	mmH Drum Instrument Pitch Fine mm : 00H - 40H - 7FH (-64 - 0 - +63) rr : drum instrument note number
1AH	rrH	mmH Drum Instrument Level mm : 00 - 7F (0 - max) rr : drum instrument note number
1CH	rrH	mmH Drum Instrument Pan mm : 00H - 40H - 7FH (random, left - center - right) rr : drum instrument note number
1DH	rrH	mmH Drum Instrument Reverb Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number

1EH	rrH	mmH	Drum Instrument Chorus Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number
1FH	rrH	mmH	Drum Instrument Variation Send Level mm : 00H - 7FH (0 - max) rr : drum instrument note number

MSB 14H –1FH (pour Batterie) est invalide seulement si le paramètre Multi-partitions (page 28) PART MODE = DRUMS 1 ou DRUMS2 pour ce canal. (Si PART MODE = DRUM, aucune valeur ne sera changée.)

### 1.2.22 RPN (Numéro de Paramètre Enregistré)

Messages qui décalent, ajoutent ou soustraient les valeurs de la sensibilité de Hauteur de son d'une partition, accord ou autres réglages de paramètres.

CNTRL#	PARAMETER	DATA RANGE
100	RPN LSB	0...127 (Défaut:7FH)
101	RPN MSB	0...127 (Défaut:7FH)

\* Notez qu'une fois que le RPN a été défini pour un canal, l'entrée de données suivante sera reconnue comme le même changement de valeur RPN. Par conséquent, après avoir utilisé le RPN, il faut définir une valeur Nul (7FH, 7FH) pour éviter un résultat inattendu.

Les nombres RPN suivants peuvent être reçus.

RPN DATA ENTRY		
MSB	LSB	NOM de PARAMETRE et PLAGE de VALEUR
00H	00H	mmH -- Pitch Bend Sensitivity mm : 00 - 18H (0 - 24 chromatic steps)
00H	01H	mmH 11H Assignable in chromatic steps up to 2 octaves Default : 02H
00H	02H	mmH -- LSB value is ignored. Fine Tuning mm : 00H - 40H - 7FH (-64-0-+63)
00H	02H	mmH -- Coarse Tuning mm : 28H - 40H - 58H (-24 - +24 chromatic steps)
7FH	7FH	-- -- LSB value is ignored. RPN null Cancels RPN and NRPN numbers.

### 1.2.23 Messages de Mode de Canal

Les messages de mode de Canal suivants peuvent être reçus.

2nd BYTE	3rd BYTE	MESSAGE
120	0	All Sounds Off
121	0	Reset All Controllers
123	0	All Notes Off
124	0	Omni Off
125	0	Omni On
126	0 ~ 16	Mono
127	0	Poly

#### 1.2.23.1 Tous Sons coupés

Termine tous les sons actuellement utilisés sur le canal spécifié. Cependant, le statut des messages de canal, tel que Note On and Hold On est maintenu.

### 1.2.23.2 Réinitialisation Tous Contrôleurs

Les valeurs des contrôleurs suivants seront ramenées aux valeurs implicites.

CONTROLEUR	VALEUR
Pitch Bend Change	±0 (center)
Channel Aftertouch	0 (off)
Polyphonic Aftertouch	0 (off)
Modulation	0 (off)
Expression	127 (max)
Hold1	0 (off)
Portamento	0 (off)
Sostenuto	0 (off)
Soft Pedal	0 (off)
Portamento Control	cancels the Portamento Source Key Number that was received
RPN	number not specified; internal data will not change
NRPN	number not specified; internal data will not change

### 1.2.23.3 Toutes Notes Hors service

Termine toutes les notes actuellement en service pour le canal spécifié. Cependant, si Maintien 1 ou Sostenuto est en service, les notes continueront de retentir jusqu'à ce qu'elles soient mises hors service.

### 1.2.23.4 Omni Hors service

Remplit la même fonction que quand un message "Toutes Notes hors service" est reçu.

### 1.2.23.5 Omni En service

Remplit la même fonction que quand un message "Toutes Notes hors service" est reçu.

### 1.2.23.6 Mono

Remplit la même fonction que quand un message "Tous Sons Hors service" est reçu, et si le 3e octet (numéro mono) est dans la plage de 0 – 16, règle le canal correspondant au Mode Mono (Mode 4 : m = 1).

### 1.2.23.7 Poly

Remplit la même fonction que quand un message "Tous Sons Hors service" est reçu, et règle le canal correspondant au Mode Poly (Mode 3).

## 1.3 Changement Programme

Messages pour sélection de Voix.

Avec une combinaison de Sélection Banque, vous pourrez sélectionner non seulement les numéros de Voix basiques, mais aussi des numéros de banque de Voix variation. Si le paramètre Multi-partition Rcv PROGRAM CHANGE (page 29) = OFF, cette Partition ne recevra pas les messages de Changement de Programme.

## 1.4 Hauteur de Son

Messages pour les valeurs de molette Hauteur de son.

Si le paramètre Multi-partition Rcv PITCH BEND CHANGE (page 29) = OFF, cette Partition ne recevra pas les messages de Hauteur de son

## 1.5 Aftertouch de canal

Messages permettant de contrôler diverses fonctions par la pression appliquée aux touches après la frappe initiale des touches, sur tout le canal.

Si le paramètre Multi-partition Rcv CHANNEL AFTERTOUCH (page 29) = OFF, cette Partition ne recevra pas les messages Channel Aftertouch.

## 1.6 Aftertouch polyphonique

Messages permettant de contrôler diverses fonctions par la pression appliquée aux touches après la frappe initiale des touches, pour chaque touche individuelle.

Si le paramètre Multi-partition Rcv POLYPHONIC AFTERTOUCH (page 34) = OFF, cette Partition ne recevra pas les messages Polyphonic Aftertouch.

La plage efficace est entre les numéros de note 36 – 97.

## 2. MESSAGES EXCLUSIFS DE SYSTEME (System Exclusive)

Les messages System Exclusive contrôlent diverses fonctions de la DB50XG, notamment le volume principal et l'accord principal, le mode de lecture, le type d'effet et divers autres paramètres.

\* *Le numéro de dispositif de la DB50XG est fixé à "All".*

### 2.1 Changement de paramètre

La DB50XG reçoit les messages de changement de paramètre suivants.

#### [ UNIVERSAL REALTIME MESSAGE ]

- 1) Master Volume

#### [ UNIVERSAL NON REALTIME MESSAGE ]

- 1) General MIDI Mode On

#### [ XG NATIVE PARAMETER CHANGE ]

- 1) XG System on
- 2) XG System Data parameter change
- 3) Multi Effect1 Data parameter change
- 4) Multi Part Data parameter change
- 5) Drums Setup Data parameter change

#### [ AUTRE ]

- 1) Master tuning
- 2) TG300 System Data Parameter change
- 3) TG300 Multi Effect Data parameter change
- 4) TG300 Multi Part Data parameter change

### 2.1.2 Universal Realtime Messages

#### 2.1.2.1 Master Volume

11110000	F0	Exclusive status
01111111	7F	Universal Real Time
01111111	7F	ID of target device
00000100	04	Sub-ID #1=Device Control Message
00000001	01	Sub-ID #2=Master Volume
0sssssss	ss*	Volume LSB
0ttttttt	tt	Volume MSB
11110111	F7	End of Exclusive
ou,		
11110000	F0	Exclusive status
01111111	7F	Universal Real Time
0xxxnnnn	xn	Device Number, xxx = irrelevant
00000100	04	Sub-ID #1=Device Control Message
00000001	01	Sub-ID #2=Master Volume
0sssssss	ss	Volume LSB
0ttttttt	tt	Volume MSB
11110111	F7	End of Exclusive

Quand il est reçu, le MSB Volume sera effectif pour le Paramètre de Système MASTER VOLUME (page 27).

\* "ss" est l'expression hexadécimale de 0sssssss; même que pour "tt", "aa", etc.

### 2.1.3 Universal Non-Realtime Messages

#### 2.1.3.1 General MIDI Mode On

```

11110000 F0 Exclusive status
01111110 7E Universal Non-Real Time
01111111 7F ID of target device
00001001 09 Sub-ID #1=General MIDI
Message
00000001 01 Sub-ID #2=General MIDI On
11110111 F7 End of Exclusive
ou,
11110000 F0 Exclusive status
01111110 7E Universal Non-Real Time
0xxxmnxx xn Device Number, xxx = irrelevant
00001001 09 Sub-ID #1=General MIDI
Message
00000001 01 Sub-ID #2=General MIDI On
11110111 F7 End of Exclusive

```

Quand General MIDI Mode On est reçu, le mode de lecture sera changé au mode XG.

Quand ceci se produit, la DB50XG recevra les messages MIDI qui sont compatibles avec GM System Niveau 1, et par conséquent, elle ne recevra pas les messages NRPN et Bank Select.

Comme environ 50ms sont requises pour exécuter ce message, veillez à laisser un intervalle adéquat avant le message suivant.

### 2.1.4 XG Native Parameter Change

Avec les messages Changement de Paramètre repris ci-dessous, vous pouvez changer la caractéristique d'une Voix, tel que par le Type d'effet ou le paramètre d'effet, transposition, accord et autres.

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n* Device Number
01001100 4C XG Model ID
Oaaaaaaaaa aa Address High
Oaaaaaaaaa aa Address Mid
Oaaaaaaaaa aa Address Low
Oddddddd dd Data
|
|
11110111 F7 End of Exclusive

```

\* *N'importe quel nombre convient car le numéro de dispositif pour la DB50XG est fixé à "All".*

Pour les paramètres avec format de données de 2 ou 4, transmettez le nombre approprié d'octets de données.

Si vous envoyez successivement des messages de changement de paramètre, veillez à laisser un intervalle adéquat (si la base de temps est 480, env. 5 unités) entre les messages.

#### ■ Exemple de changement de paramètre

1. Pour changer le type Variation Effect en Echo, vérifiez d'abord la Liste de Type d'Effet (page 38) pour identifier les numéros MSB et LSB; pour Echo Variation Effect, les numéros de type sont MSB = 07 et LSB = 00.

Ensuite, vérifiez l'adresse dans <Tableau 1-3> (page 28) pour le paramètre VARIATION TYPE; dans ce cas, l'adresse est High, Mid, Low = 02, 01, 40 respectivement.

Appliquez ces valeurs à la liste 2.1.4. Changement de paramètre natif XG comme suit:

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000010 02 Address High
00000001 01 Address Mid
01000000 40 Address Low
00000011 07 Data (VARIATION TYPE MSB)
00000000 00 Data (VARIATION TYPE LSB)
11110111 F7 End of Exclusive

```

Quand cette donnée est reçue, le DB50XG changera le type d'effet en Echo.

2. Pour changer la balance Dry/Wet d'effet de Echo à 50% chacun, vérifiez d'abord la Liste de Paramètre d'Effet (page 39) au numéro de paramètre 10 pour identifier Dry(50%)/Wet(50%). Dans ce cas, la valeur Dry=Wet est 64 (40 en hexadécimal).

Vérifiez ensuite l'adresse dans <Tableau 1 - 3> (page 28) pour le VARIATION PARAMETER 10; dans ce cas, l'adresse est High, Mid, Low = 02, 01, 54, respectivement. Appliquez ces valeurs à la liste 2.1.4 XG Native Parameter Change comme suit:

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000010 02 Address High
00000001 01 Address Mid
01010100 54 Address Low
01000000 40 Data (MSB) ← Valeur réelle
00000000 00 Data (LSB) ← Fixé à 00
11110111 F7 End of Exclusive

```

Quand cette donnée est reçue, la DB50XG changera la balance Dry/Wet d'effet à 50% chacun.

**Prenez soin de laisser le temps pour que la procédure s'accomplice en insérant une mesure vierge au début de la chanson pour chaque canal.**

#### 2.1.4.1 XG System On

```

11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
01001100 4C XG Model ID
00000000 00 Address High
00000000 00 Address Mid
01111110 7E Address Low
00000000 00 Data
11110111 F7 End of Exclusive

```

Quand cette donnée est reçue, la DB50XG passe au mode XG et tous les paramètres sont initialisés en conséquence, et les messages compatibles-XG, tels que les messages NRPN et Sélection de Banque seront reçus.

Comme environ 50ms sont requises pour exécuter ce message, veillez à laisser un intervalle adéquat avant le message suivant.

#### Réinitialisation TG300B

```
F0 41 1n 42 12 40 00 7F 00 41 F7
n=device number
```

**2.1.4.2 XG System Data parameter change**

Cf. tableaux <1 - 1> et <1 - 2> (page 27).

**2.1.4.3 Multi Effect1 Data parameter change**

Cf. tableaux <1 - 1> et <1 - 3> (page 27).

**2.1.4.4 Multi Part Data parameter change**

Cf. tableaux <1 - 1> (page 27) et <1 - 4> (page 28).

**2.1.4.5 Drums Setup Data parameter change**

Cf. tableaux <1 - 1> (page 27) et <1 - 5> (page 30).

Si un message de changement de paramètre DRUM SETUP RESET (page 27) est reçu, les valeurs de paramètre Drum Setup seront initialisées.

La sélection de Drum Set fera que les valeurs de paramètre Drum Setup seront initialisées.

**2.1.5 Autres changements de paramètre****2.1.5.1 Master Tuning**

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0001nnnn 1n Device Number
00100111 27 Model ID
00110000 30 Sub ID2
00000000 00
00000000 00
0mmmmmmm mm Master Tune MSB
01111111 11 Master Tune LSB
Occccccc cc irrelevant
11110111 F7 End of Exclusive
```

Ce message change simultanément la hauteur de son de tous les canaux.

**2.2 Bulk Dump**

La DB50XG reçoit les données Bulk Dump suivantes.

**[ XG NATIVE ]**

- 1) XG System Data
- 2) Multi Effect1 Data
- 3) Multi Part Data
- 4) Drums Setup Data

**[ QS300 NATIVE ]**

- 1) QS300 User Normal Voice Data

**2.2.1 XG Native Bulk Dump**

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0000nnnn 0n Device Number
01001100 4C XG Model ID
0bbbbbbb bb ByteCount
0bbbbbbb bb ByteCount
Oaaaaaaaaaa aa Address High
Oaaaaaaaaaa aa Address Mid
Oaaaaaaaaaa aa Address Low
0ddddddd dd Data
|
|
Occccccc cc Check-sum
11110111 F7 End of Exclusive
```

Pour Address et Byte Count, reportez-vous aux tableaux supplémentaires.

Check Sum est la valeur qui résulte en une valeur de 0 pour les 7 bits inférieurs quand Start Address, Byte Count, Data, plus Check Sum elle-même sont ajoutés,

**2.2.1.1 XG System Data bulk dump**

Cf. tableaux <1 - 1> et <1 - 2> (page 27).

**2.2.1.2 Multi Effect1 Data bulk dump**

Cf. tableaux <1 - 1> et <1 - 3> (page 27).

**2.2.1.3 Multi Part Data bulk dump**

Cf. tableaux <1 - 1> (page 27) et <1 - 4> (page 28).

**2.2.1.4 Drums Setup Data bulk dump**

Cf. tableaux <1 - 1> (page 27) et <1 - 5> (page 30).

**2.2.2 QS300 Native Bulk Dump**

Un maximum de 32 Voix créées par le QS300 peuvent être conservées dans la Mémoire Utilisateur de la DB50XG par message Bulk Dump. (Effectif seulement quand le mode XG est actif.)

Les Voix Utilisateur de QS300 sont stockées dans Bank MSB = 63, LSB = 00. Les numéros Changement de Programme pour les Voix Utilisateurs sont 1 – 32.

```
11110000 F0 Exclusive status
01000011 43 YAMAHA ID
0000nnnn 0n Device Number
01001011 4B QS300 Model ID
0bbbbbbb bb ByteCount
0bbbbbbb bb ByteCount
Oaaaaaaaaaa aa Address High
Oaaaaaaaaaa aa Address Mid
Oaaaaaaaaaa aa Address Low
0ddddddd dd Data
|
|
Occccccc cc Check-sum
11110111 F7 End of Exclusive
```

\* En raison de différences possibles dans le nombre d'éléments, il se peut que certaines Voix QS300 soient légèrement différentes.

**2.2.2.1 QS300 User Normal Voice Data bulk dump**

Cf. tableaux <2 - 1> et <2 - 2> (page 30).

**3. MESSAGES EN TEMPS REEL****3.1 Active Sensing**

Une fois que FE a été reçu, si aucune donnée MIDI n'est reçue ensuite pendant plus longtemps qu'un intervalle d'environ 300msec, la DB50XG remplira les mêmes fonctions que quand les messages ALL SOUNDS OFF, ALL NOTES OFF, and RESET ALL CONTROLLERS sont reçus, et il repassera alors à l'état où FE n'est pas surveillé.

# MIDI Data Tables/ Tableaux de données MIDI

<Table 1-1> Parameter Base Address  
Model ID = 4C [ XG ]

Parameter Change				
	Address			Description
	High	Mid	Low	
XG SYSTEM	00	00	00	System
	00	00	7D	Drum setup Reset
	00	00	7E	XG System On
	00	00	7F	All Parameter Reset
EFFECT 1	02	01	00	Effect1(Reverb,Chorus,Variation )
MULTI PART	08	00	00	Multi Part 1
	08	0F	00	Multi Part 16
DRUM	30	0D	00	Drum Setup 1
	31	0D	00	Drum Setup 2

Address	Parameter
3n 0D 00	note number 13
3n 0E 00	note number 14
:	:
3n 5B 00	note number 91

n : Drum Setup number (0, 1)

<Table 1-2>

MIDI Parameter Change table ( SYSTEM ) [XG]

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
00 00 00	4	0000 - 07FF	MASTER TUNE	-102.4 - +102.3[cent] 1st bit3 - 0→bit15 - 12 2nd bit3 - 0→bit11 - 8 3rd bit3 - 0→bit7 - 4 4th bit3 - 0→bit3 - 0	00 04 00 00
04 1	1	00 - 7F	MASTER VOLUME	0 - 127	7F
05 1	1		NOT USED		
06 1	1	28 - 58	TRANSPOSE	-24 - +24[semitones]	40
7D n			DRUM SETUP RESET	n=Drum Setup number (0, 1)	
7E 00			XG SYSTEM ON	00=XG System ON (receive only)	
7F 00			ALL PARAMETER RESET	00=ON (receive only)	
TOTAL SIZE	07				

<Table 1-3>

MIDI Parameter Change table ( EFFECT 1 ) [XG]

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
02 01 00	2	00 - 7F	REVERB TYPE MSB	see Effect Type List (page 38) 00 : basic type	01 (=HALL1) 00
		00 - 7F	REVERB TYPE LSB		depends on reverb type
02 1	1	00 - 7F	REVERB PARAMETER 1	see Effect Parameter List (page 39)	depends on reverb type
03 1	1	00 - 7F	REVERB PARAMETER 2	see Effect Parameter List (page 39)	depends on reverb type
04 1	1	00 - 7F	REVERB PARAMETER 3	see Effect Parameter List (page 39)	depends on reverb type
05 1	1	00 - 7F	REVERB PARAMETER 4	see Effect Parameter List (page 39)	depends on reverb type
06 1	1	00 - 7F	REVERB PARAMETER 5	see Effect Parameter List (page 39)	depends on reverb type
07 1	1	00 - 7F	REVERB PARAMETER 6	see Effect Parameter List (page 39)	depends on reverb type
08 1	1	00 - 7F	REVERB PARAMETER 7	see Effect Parameter List (page 39)	depends on reverb type
09 1	1	00 - 7F	REVERB PARAMETER 8	see Effect Parameter List (page 39)	depends on reverb type
0A 1	1	00 - 7F	REVERB PARAMETER 9	see Effect Parameter List (page 39)	depends on reverb type
0B 1	1	00 - 7F	REVERB PARAMETER 10	see Effect Parameter List (page 39)	depends on reverb type
0C 1	1	00 - 7F	REVERB RETURN	~-dB...0dB...+6dB (0...64...127)	40
0D 1	1	01 - 7F	REVERB PAN	L63...C...R63 (1...64...127)	40
TOTAL SIZE	0E				
02 01 10	1	00 - 7F	REVERB PARAMETER 11	see Effect Parameter List (page 39)	depends on reverb type
11 1	1	00 - 7F	REVERB PARAMETER 12	see Effect Parameter List (page 39)	depends on reverb type
12 1	1	00 - 7F	REVERB PARAMETER 13	see Effect Parameter List (page 39)	depends on reverb type
13 1	1	00 - 7F	REVERB PARAMETER 14	see Effect Parameter List (page 39)	depends on reverb type
14 1	1	00 - 7F	REVERB PARAMETER 15	see Effect Parameter List (page 39)	depends on reverb type
15 1	1	00 - 7F	REVERB PARAMETER 16	see Effect Parameter List (page 39)	depends on reverb type
TOTAL SIZE	6				
02 01 20	2	00 - 7F	CHORUS TYPE MSB	see Effect Type List (page 38) 00 : basic type	41 (=CHORUS1) 00
		00 - 7F	CHORUS TYPE LSB		depends on chorus type
22 1	1	00 - 7F	CHORUS PARAMETER 1	see Effect Parameter List (page 39)	depends on chorus type
23 1	1	00 - 7F	CHORUS PARAMETER 2	see Effect Parameter List (page 39)	depends on chorus type
24 1	1	00 - 7F	CHORUS PARAMETER 3	see Effect Parameter List (page 39)	depends on chorus type
25 1	1	00 - 7F	CHORUS PARAMETER 4	see Effect Parameter List (page 39)	depends on chorus type
26 1	1	00 - 7F	CHORUS PARAMETER 5	see Effect Parameter List (page 39)	depends on chorus type
27 1	1	00 - 7F	CHORUS PARAMETER 6	see Effect Parameter List (page 39)	depends on chorus type
28 1	1	00 - 7F	CHORUS PARAMETER 7	see Effect Parameter List (page 39)	depends on chorus type
29 1	1	00 - 7F	CHORUS PARAMETER 8	see Effect Parameter List (page 39)	depends on chorus type
2A 1	1	00 - 7F	CHORUS PARAMETER 9	see Effect Parameter List (page 39)	depends on chorus type
2B 1	1	00 - 7F	CHORUS PARAMETER 10	see Effect Parameter List (page 39)	depends on chorus type
2C 1	1	00 - 7F	CHORUS RETURN	~-dB...0dB...+6dB (0...64...127)	40
2D 1	1	01 - 7F	CHORUS PAN	L63...C...R63 (1...64...127)	40
2E 1	1	00 - 7F	SEND CHORUS TO REVERB	~-dB...0dB...+6dB (0...64...127)	00
TOTAL SIZE	0F				

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
02 01 30	1	00 - 7F	CHORUS PARAMETER 11	see Effect Parameter List (page 39)	depends on chorus type
31	1	00 - 7F	CHORUS PARAMETER 12	see Effect Parameter List (page 39)	depends on chorus type
32	1	00 - 7F	CHORUS PARAMETER 13	see Effect Parameter List (page 39)	depends on chorus type
33	1	00 - 7F	CHORUS PARAMETER 14	see Effect Parameter List (page 39)	depends on chorus type
34	1	00 - 7F	CHORUS PARAMETER 15	see Effect Parameter List (page 39)	depends on chorus type
35	1	00 - 7F	CHORUS PARAMETER 16	see Effect Parameter List (page 39)	depends on chorus type
TOTAL SIZE	6				
02 01 40	2	00 - 7F	VARIATION TYPE MSB	see Effect Type List (page 38) 00 : basic type	05 (=DELAY L,C,R) 00
42	2	00 - 7F	VARIATION TYPE LSB	see Effect Parameter List (page 39)	depends on variation type
44	2	00 - 7F	VARIATION PARAMETER 1 MSB	see Effect Parameter List (page 39)	depends on variation type
45	2	00 - 7F	VARIATION PARAMETER 1 LSB	see Effect Parameter List (page 39)	depends on variation type
46	2	00 - 7F	VARIATION PARAMETER 2 MSB	see Effect Parameter List (page 39)	depends on variation type
47	2	00 - 7F	VARIATION PARAMETER 2 LSB	see Effect Parameter List (page 39)	depends on variation type
48	2	00 - 7F	VARIATION PARAMETER 3 MSB	see Effect Parameter List (page 39)	depends on variation type
49	2	00 - 7F	VARIATION PARAMETER 3 LSB	see Effect Parameter List (page 39)	depends on variation type
4A	2	00 - 7F	VARIATION PARAMETER 4 MSB	see Effect Parameter List (page 39)	depends on variation type
4B	2	00 - 7F	VARIATION PARAMETER 4 LSB	see Effect Parameter List (page 39)	depends on variation type
4C	2	00 - 7F	VARIATION PARAMETER 5 MSB	see Effect Parameter List (page 39)	depends on variation type
4D	2	00 - 7F	VARIATION PARAMETER 5 LSB	see Effect Parameter List (page 39)	depends on variation type
4E	2	00 - 7F	VARIATION PARAMETER 6 MSB	see Effect Parameter List (page 39)	depends on variation type
4F	2	00 - 7F	VARIATION PARAMETER 6 LSB	see Effect Parameter List (page 39)	depends on variation type
50	2	00 - 7F	VARIATION PARAMETER 7 MSB	see Effect Parameter List (page 39)	depends on variation type
51	2	00 - 7F	VARIATION PARAMETER 7 LSB	see Effect Parameter List (page 39)	depends on variation type
52	2	00 - 7F	VARIATION PARAMETER 8 MSB	see Effect Parameter List (page 39)	depends on variation type
53	2	00 - 7F	VARIATION PARAMETER 8 LSB	see Effect Parameter List (page 39)	depends on variation type
54	2	00 - 7F	VARIATION PARAMETER 9 MSB	see Effect Parameter List (page 39)	depends on variation type
55	2	00 - 7F	VARIATION PARAMETER 9 LSB	see Effect Parameter List (page 39)	depends on variation type
56	1	00 - 7F	VARIATION PARAMETER 10 MSB	see Effect Parameter List (page 39)	depends on variation type
57	1	00 - 7F	VARIATION PARAMETER 10 LSB	see Effect Parameter List (page 39)	depends on variation type
58	1	00 - 7F	VARIATION RETURN	-∞dB...0dB...+6dB (0...64...127)	40
59	1	00 - 7F	VARIATION PAN	L63...C...R63 (1...64...127)	40
5A	1	00 - 01	SEND VARIATION TO REVERB	-∞dB...0dB...+6dB (0...64...127)	00
5B	1	00 - 01	SEND VARIATION TO CHORUS	-∞dB...0dB...+6dB (0...64...127)	00
5C	1	00 - 01	VARIATION CONNECTION	0:INSERTION, 1:SYSTEM	00
5D	1	00 - 01	VARIATION PART	part1...16 = 0...15, OFF = 127	7F
5E	1	00 - 01	MW VARIATION CONTROL DEPTH	-64 - +63	40
5F	1	00 - 01	BEND VARIATION CONTROL DEPTH	-64 - +63	40
60	1	00 - 01	CAT VARIATION CONTROL DEPTH	-64 - +63	40
61	1	00 - 01	AC1 VARIATION CONTROL DEPTH	-64 - +63	40
62	1	00 - 01	AC2 VARIATION CONTROL DEPTH	-64 - +63	40
TOTAL SIZE	21				
02 01 70	1	00 - 7F	VARIATION PARAMETER 11	see Effect Parameter List (page 39)	depends on variation type
71	1	00 - 7F	VARIATION PARAMETER 12	see Effect Parameter List (page 39)	depends on variation type
72	1	00 - 7F	VARIATION PARAMETER 13	see Effect Parameter List (page 39)	depends on variation type
73	1	00 - 7F	VARIATION PARAMETER 14	see Effect Parameter List (page 39)	depends on variation type
74	1	00 - 7F	VARIATION PARAMETER 15	see Effect Parameter List (page 39)	depends on variation type
75	1	00 - 7F	VARIATION PARAMETER 16	see Effect Parameter List (page 39)	depends on variation type
TOTAL SIZE	6				

## &lt; Table 1-4 &gt;

## MIDI Parameter Change table ( MULTI PART ) [XG]

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
08 nn 00	1	00 - 20	ELEMENT RESERVE	0 - 32	part10 = 00, other = 02
nn 01	1	00 - 7F	BANK SELECT MSB	0 - 127	part10 = 7F, other = 00
nn 02	1	00 - 7F	BANK SELECT LSB	0 - 127	00
nn 03	1	00 - 7F	PROGRAM NUMBER	1 - 128	00
nn 04	1	00 - 0F, 7F	Rcv CHANNEL	1 - 16, OFF	part no.
nn 05	1	00 - 01	MONO/POLY MODE	0:MONO, 1:POLY	01
nn 06	1	00 - 02	SAME NOTE NUMBER	0:SINGLE	01
			KEY ON ASSIGN	1:MULTI	
nn 07	1	00 - 03	PART MODE	2:INST (for DRUM) 0:NORMAL 1:DRUM 2 - 3:DRUMS1 - 2	00 (Other than Part10) 02 (Part10)
nn 08	1	28 - 58	NOTE SHIFT	-24 - +24 [semitones]	40
nn 09	2	00 - FF	DETUNE	-12.8 - +12.7 [Hz]	08 00
nn 0A				1st bit3-0→bit7-4 2nd bit3-0→bit3-0	(80)
nn 0B	1	00 - 7F	VOLUME	0 - 127	64
nn 0C	1	00 - 7F	VELOCITY SENSE DEPTH	0 - 127	40
nn 0D	1	00 - 7F	VELOCITY SENSE OFFSET	0 - 127	40
nn 0E	1	00 - 7F	PAN	0:random, L63...C...R63 (1...64...127)	40
nn 0F	1	00 - 7F	NOTE LIMIT LOW	C-2 - G8	00
nn 10	1	00 - 7F	NOTE LIMIT HIGH	C-2 - G8	7F
nn 11	1	00 - 7F	DRY LEVEL	0 - 127	7F
nn 12	1	00 - 7F	CHORUS SEND	0 - 127	00
nn 13	1	00 - 7F	REVERB SEND	0 - 127	28
nn 14	1	00 - 7F	VARIATION SEND	0 - 127	00

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
nn 15	1	00 - 7F	VIBRATO RATE	-64 - +63	40
nn 16	1	00 - 7F	VIBRATO DEPTH	-64 - +63	40 (drum part ignores)
nn 17	1	00 - 7F	VIBRATO DELAY	-64 - +63	40 (drum part ignores)
nn 18	1	00 - 7F	FILTER CUTOFF FREQUENCY	-64 - +63	40
nn 19	1	00 - 7F	FILTER RESONANCE	-64 - +63	40
nn 1A	1	00 - 7F	EG ATTACK TIME	-64 - +63	40
nn 1B	1	00 - 7F	EG DECAY TIME	-64 - +63	40
nn 1C	1	00 - 7F	EG RELEASE TIME	-64 - +63	40
nn 1D	1	28 - 58	MW PITCH CONTROL	-24 - +24 [semitones]	40
nn 1E	1	00 - 7F	MW FILTER CONTROL	-9600 - +9450 [cent]	40
nn 1F	1	00 - 7F	MW AMPLITUDE CONTROL	-64 - +63	40
nn 20	1	00 - 7F	MW LFO PMOD DEPTH	0 - 127	0A
nn 21	1	00 - 7F	MW LFO FMOD DEPTH	0 - 127	00
nn 22	1	00 - 7F	MW LFO AMOD DEPTH	0 - 127	00
nn 23	1	28 - 58	BEND PITCH CONTROL	-24 - +24 [semitones]	42
nn 24	1	00 - 7F	BEND FILTER CONTROL	-9600 - +9450 [cent]	40
nn 25	1	00 - 7F	BEND AMPLITUDE CONTROL	-64 - +63	40
nn 26	1	00 - 7F	BEND LFO PMOD DEPTH	+100 - +100 [%]	40
nn 27	1	00 - 7F	BEND LFO FMOD DEPTH	+100 - +100 [%]	40
nn 28	1	00 - 7F	BEND LFO AMOD DEPTH	+100 - +100 [%]	40
TOTAL SIZE	29				
nn 30	1	00 - 01	Rcv PITCH BEND	0:OFF, 1:ON	01
nn 31	1	00 - 01	Rcv CH AFTER TOUCH (CAT)	0:OFF, 1:ON	01
nn 32	1	00 - 01	Rcv PROGRAM CHANGE	0:OFF, 1:ON	01
nn 33	1	00 - 01	Rcv CONTROL CHANGE	0:OFF, 1:ON	01
nn 34	1	00 - 01	Rcv POLY AFTER TOUCH (PAT)	0:OFF, 1:ON	01
nn 35	1	00 - 01	Rcv NOTE MESSAGE	0:OFF, 1:ON	01
nn 36	1	00 - 01	Rcv RPN	0:OFF, 1:ON	01
nn 37	1	00 - 01	Rcv NRPN	0:OFF, 1:ON	XG=01, GM=00
nn 38	1	00 - 01	Rcv MODULATION	0:OFF, 1:ON	01
nn 39	1	00 - 01	Rcv VOLUME	0:OFF, 1:ON	01
nn 3A	1	00 - 01	Rcv PAN	0:OFF, 1:ON	01
nn 3B	1	00 - 01	Rcv EXPRESSION	0:OFF, 1:ON	01
nn 3C	1	00 - 01	Rcv HOLD1	0:OFF, 1:ON	01
nn 3D	1	00 - 01	Rcv PORTAMENTO	0:OFF, 1:ON	01
nn 3E	1	00 - 01	Rcv SOSTENUTO	0:OFF, 1:ON	01
nn 3F	1	00 - 01	Rcv SOFT PEDAL	0:OFF, 1:ON	01
nn 40	1	00 - 01	Rcv BANK SELECT	0:OFF, 1:ON	XG=01, GM=00
nn 41	1	00 - 7F	SCALE TUNING C	-64 - +63 [cent]	40
nn 42	1	00 - 7F	SCALE TUNING C#	-64 - +63 [cent]	40
nn 43	1	00 - 7F	SCALE TUNING D	-64 - +63 [cent]	40
nn 44	1	00 - 7F	SCALE TUNING D#	-64 - +63 [cent]	40
nn 45	1	00 - 7F	SCALE TUNING E	-64 - +63 [cent]	40
nn 46	1	00 - 7F	SCALE TUNING F	-64 - +63 [cent]	40
nn 47	1	00 - 7F	SCALE TUNING F#	-64 - +63 [cent]	40
nn 48	1	00 - 7F	SCALE TUNING G	-64 - +63 [cent]	40
nn 49	1	00 - 7F	SCALE TUNING G#	-64 - +63 [cent]	40
nn 4A	1	00 - 7F	SCALE TUNING A	-64 - +63 [cent]	40
nn 4B	1	00 - 7F	SCALE TUNING A#	-64 - +63 [cent]	40
nn 4C	1	00 - 7F	SCALE TUNING B	-64 - +63 [cent]	40
nn 4D	1	28 - 58	CAT PITCH CONTROL	-24 - +24 [semitones]	40
nn 4E	1	00 - 7F	CAT FILTER CONTROL	-9600 - +9450 [cent]	40
nn 4F	1	00 - 7F	CAT AMPLITUDE CONTROL	-64 - +63	40
nn 50	1	00 - 7F	CAT LFO PMOD DEPTH	0 - 127	00
nn 51	1	00 - 7F	CAT LFO FMOD DEPTH	0 - 127	00
nn 52	1	00 - 7F	CAT LFO AMOD DEPTH	0 - 127	00
nn 53	1	28 - 58	PAT PITCH CONTROL	-24 - +24 [semitones]	40
nn 54	1	00 - 7F	PAT FILTER CONTROL	-9600 - +9450 [cent]	40
nn 55	1	00 - 7F	PAT AMPLITUDE CONTROL	-64 - +63	40
nn 56	1	00 - 7F	PAT LFO PMOD DEPTH	0 - 127	00
nn 57	1	00 - 7F	PAT LFO FMOD DEPTH	0 - 127	00
nn 58	1	00 - 7F	PAT LFO AMOD DEPTH	0 - 127	00
nn 59	1	00 - 5F	AC1 CONTROLLER NUMBER	0 - 95	10
nn 5A	1	28 - 58	AC1 PITCH CONTROL	-24 - +24 [semitones]	40
nn 5B	1	00 - 7F	AC1 FILTER CONTROL	-9600 - +9450 [cent]	40
nn 5C	1	00 - 7F	AC1 AMPLITUDE CONTROL	-64 - +63	40
nn 5D	1	00 - 7F	AC1 LFO PMOD DEPTH	0 - 127	00
nn 5E	1	00 - 7F	AC1 LFO FMOD DEPTH	0 - 127	00
nn 5F	1	00 - 7F	AC1 LFO AMOD DEPTH	0 - 127	00
nn 60	1	00 - 5F	AC2 CONTROLLER NUMBER	0 - 95	11
nn 61	1	28 - 58	AC2 PITCH CONTROL	-24 - +24 [semitones]	40
nn 62	1	00 - 7F	AC2 FILTER CONTROL	-9600 - +9450 [cent]	40
nn 63	1	00 - 7F	AC2 AMPLITUDE CONTROL	-64 - +63	40
nn 64	1	00 - 7F	AC2 LFO PMOD DEPTH	0 - 127	00
nn 65	1	00 - 7F	AC2 LFO FMOD DEPTH	0 - 127	00
nn 66	1	00 - 7F	AC2 LFO AMOD DEPTH	0 - 127	00
nn 67	1	00 - 01	PORTEMANTO SWITCH	0:OFF, 1:ON	00
nn 68	1	00 - 7F	PORTEMANTO TIME	0 - 127	00

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
nn 69	1	00 - 7F	PITCH EG INITIAL LEVEL	-64 - +63	40
nn 6A	1	00 - 7F	PITCH EG ATTACK TIME	-64 - +63	40
nn 6B	1	00 - 7F	PITCH EG RELEASE LEVEL	-64 - +63	40
nn 6C	1	00 - 7F	PITCH EG RELEASE TIME	-64 - +63	40
nn 6D	1	01 - 7F	VELOCITY LIMIT LOW	1 - 127	01
nn 6E	1	01 - 7F	VELOCITY LIMIT HIGH	1 - 127	7F
TOTAL SIZE	3F				

nn = Part Number (0 : Part 1, 1 : Part 2, 2 : Part 3, ..., 15 : Part 16)

For the DRUM PART, the following parameters have no effect.

- SOFT PEDAL
- BANK SELECT LSB
- MONO/POLY
- SCALE TUNING
- PORTAMENTO
- POLY AFTER TOUCH
- PITCH EG INITIAL LEVEL
- PITCH EG ATTACK TIME
- PITCH EG RELEASE LEVEL
- PITCH EG RELEASE TIME

### < Table 1-5 >

**MIDI Parameter Change table ( DRUM SETUP ) [XG]**

Address (H)	Size (H)	Data (H)	Parameter	Description	Default value(H)
3n rr 00	1	00 - 7F	PITCH COARSE	-64 - +63	40
3n rr 01	1	00 - 7F	PITCH FINE	-64 - +63[cent]	40
3n rr 02	1	00 - 7F	LEVEL	0 - 127	depend on the note
3n rr 03	1	00 - 7F	ALTERNATE GROUP	0:OFF, 1 - 127	depend on the note
3n rr 04	1	00 - 7F	PAN	0:random, L63...C...R63 (1...64...127)	depend on the note
3n rr 05	1	00 - 7F	REVERB SEND	0 - 127	depend on the note
3n rr 06	1	00 - 7F	CHORUS SEND	0 - 127	depend on the note
3n rr 07	1	00 - 7F	VARIATION SEND	0 - 127	depend on the note
3n rr 08	1	00 - 01	KEY ASSIGN	0:SINGLE, 1:MULTI	00
3n rr 09	1	00 - 01	Rcv NOTE OFF	0:OFF, 1:ON	depend on the note
3n rr 0A	1	00 - 01	Rcv NOTE ON	0:OFF, 1:ON	01
3n rr 0B	1	00 - 7F	FILTER CUTOFF FREQUENCY	-64 - +63	40
3n rr 0C	1	00 - 7F	FILTER RESONANCE	-64 - +63	40
3n rr 0D	1	00 - 7F	EG ATTACK RATE	-64 - +63	40
3n rr 0E	1	00 - 7F	EG DECAY1 RATE	-64 - +63	40
3n rr 0F	1	00 - 7F	EG DECAY2 RATE	-64 - +63	40
TOTAL SIZE	10				

[Note] n : Drum Setup number (0, 1)

rr : note number (0D - 5B)

When XG system on or GM mode on messages are received, all Drum Setup parameters are initialized.

The Drum Setup Reset message can be used to initialized each Drum Setup parameter.

Selecting a Drum Set will cause the Drum Setup parameter values to be initialized.

### < Table 2-1 >

Parameter Base Address

Model ID = 4B [ QS300 ]

Bulk Dump				Description	
	Address				
	High	Mid	Low		
User Normal Voice	11	00	00	User Normal Voice 1	
	:			:	
	11	1F	00	User Normal Voice 32	

### < Table 2-2 >

**MIDI Bulk Dump table ( USER NORMAL VOICE ) [QS300]**

Address (H)	Size (H)	Data (H)	Parameter	Description
11 nn 00	17D	20 - 7E	VOICE NAME	[Common]
11	nn	00		
:				
07				
08			NOT USED	
:			NOT USED	
0A			NOT USED	
0B	01 - 03		ELEMENT SWITCH	1:Element 1 on, 2:Element 2 on, 3:Element 1 and 2 on
0C	00 - 7F		VOICE LEVEL	
0D			NOT USED	
:			NOT USED	
3C			NOT USED	
3D	00 - 7F		WAVE NUMBER HIGH	[Element 1] bit13 - bit7
3E	00 - 7F		WAVE NUMBER LOW	bit6 - bit0
3F	00 - 7F		NOTE LIMIT LOW	
40	00 - 7F		NOTE LIMIT HIGH	
41	00 - 7F		VELOCITY LIMIT LOW	
42	00 - 7F		VELOCITY LIMIT HIGH	
43	00 - 01		FILTER EG VELOCITY CURVE	
44	00 - 02		LFO WAVE SELECT	0:saw, 1:tri, 2:S&H
45	00 - 01		LFO PHASE INITIALIZE	0:OFF, 1:ON

Address (H)	Size (H)	Data (H)	Parameter	Description
46	00 - 3F		LFO SPEED	
47	00 - 7F		LFO DELAY	
48	00 - 7F		LFO FADE TIME	
49	00 - 3F		LFO PMD DEPTH	
4A	00 - 0F		LFO CMD DEPTH	
4B	00 - 1F		LFO AMD DEPTH	
4C	20 - 60		NOTE SHIFT	
4D	0E - 72		DETUNE	
4E	00 - 05		PITCH SCALING	0:100%, 1:50%, 2:20%, 3:10%, 4:5%, 5:0%
4F	00 - 7F		PITCH SCALING CENTER NOTE	
50	00 - 03		PITCH EG DEPTH	0:1/oct, 1:oct, 2:2oct, 3:4oct
51	39 - 47		VELOCITY PEG LEVEL SENSITIVITY	
52	39 - 47		VELOCITY PEG RATE SENSITIVITY	
53	39 - 47		PEG RATE SCALING	
54	00 - 7F		PEG RATE SCALING CENTER NOTE	
55	00 - 3F		PEG RATE 1	
56	00 - 3F		PEG RATE 2	
57	00 - 3F		PEG RATE 3	
58	00 - 3F		PEG RATE 4	
59	00 - 7F		PEG LEVEL 0	
5A	00 - 7F		PEG LEVEL 1	
5B	00 - 7F		PEG LEVEL 2	
5C	00 - 7F		PEG LEVEL 3	
5D	00 - 7F		PEG LEVEL 4	
5E	00 - 3F		FILTER RESONANCE	
5F	00 - 07		VELOCITY SENSITIVITY	
60	00 - 7F		CUTOFF FREQUENCY	
61	00 - 7F		CUTOFF SCALING BREAK POINT 1	
62	00 - 7F		CUTOFF SCALING BREAK POINT 2	
63	00 - 7F		CUTOFF SCALING BREAK POINT 3	
64	00 - 7F		CUTOFF SCALING BREAK POINT 4	
65	00 - 7F		CUTOFF SCALING OFFSET 1	
66	00 - 7F		CUTOFF SCALING OFFSET 2	
67	00 - 7F		CUTOFF SCALING OFFSET 3	
68	00 - 7F		CUTOFF SCALING OFFSET 4	
69	39 - 47		VELOCITY FEG LEVEL SENSITIVITY	
6A	39 - 47		VELOCITY FEG RATE SENSITIVITY	
6B	39 - 47		FEG RATE SCALING	
6C	00 - 7F		FEG RATE SCALING CENTER NOTE	
6D	00 - 3F		FEG RATE 1	
6E	00 - 3F		FEG RATE 2	
6F	00 - 3F		FEG RATE 3	
70	00 - 3F		FEG RATE 4	
71	00 - 7F		FEG LEVEL 0	
72	00 - 7F		FEG LEVEL 1	
73	00 - 7F		FEG LEVEL 2	
74	00 - 7F		FEG LEVEL 3	
75	00 - 7F		FEG LEVEL 4	
76	00 - 7F		ELEMENT LEVEL	
77	00 - 7F		LEVEL SCALING BREAK POINT 1	
78	00 - 7F		LEVEL SCALING BREAK POINT 2	
79	00 - 7F		LEVEL SCALING BREAK POINT 3	
7A	00 - 7F		LEVEL SCALING BREAK POINT 4	
7B	00 - 7F		LEVEL SCALING OFFSET 1	
7C	00 - 7F		LEVEL SCALING OFFSET 2	
7D	00 - 7F		LEVEL SCALING OFFSET 3	
7E	00 - 7F		LEVEL SCALING OFFSET 4	
7F	00 - 06		VELOCITY CURVE	
80	00 - 0F		PAN	0 (Left) - 14 (Right), 15:Scaling
81	39 - 47		AEG RATE SCALING	
82	00 - 7F		AEG SCALING CENTER NOTE	
83	00 - 0F		AEG KEY ON DELAY	
84	00 - 7F		AEG ATTACK RATE	
85	00 - 7F		AEG DECAY 1 RATE	
86	00 - 7F		AEG DECAY 2 RATE	
87	00 - 7F		AEG RELEASE RATE	
88	00 - 7F		AEG DECAY 1 LEVEL	
89	00 - 7F		AEG DECAY 2 LEVEL	
8A	00 - 7F		ADDRESS OFFSET HIGH	bit13 - bit7
8B	00 - 7F		ADDRESS OFFSET LOW	bit6 - bit0
8C	39 - 47		RESONANCE SENSITIVITY	[Element 2]
8D				Same as [Element 1]
:				Same as [Element 1]
DC				Same as [Element 1]
DD				[Element 3]
:				NOT USED
12C				NOT USED
12D				[Element 4]
:				NOT USED
17C				NOT USED
TOTAL SIZE	17D			

nn=Voice Number (00-1F)

# XG Normal Voice List / Liste des Voix Normal XG

**Bank Select MSB=000, LSB=Bank Number**

Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element
Piano	1	0	GrandPno	1	Organ	17	0	DrawOrgn	1	Bass	33	0	Aco.Bass	1	Ensemble	49	0	Strings1	1
	1		GrndPnoK	1		32		DetDrwOr	2		40		JazzRthm	2		3		S.Strngs	2
	18		MelloGrp	1		33		60sDrOr1	2		45		VXUprght	2		8		SlowStr	1
	40		PianoStr	2		34		60sDrOr2	2		34	0	FngrBass	1		24		ArcoStr	2
	41		Dream	2		35		70sDrOr1	2		18		FingDrk	2		35		60sStrng	2
2	0		BrtePno	1		36		DrawOrg2	2		27		FlangeBa	2		40		Orchestr	2
	1		BritPnoK	1		37		60sDrOr3	2		40		Ba&DstEG	2		41		Orchstr2	2
3	0		E.Grand	2		38		EvenBar	2		43		FngSlap	2		42		TremOrch	2
	1		EIGrPnoK	2		40		16+2*3'	2		45		FngBass2	2		45		VeloStr	2
	32		Det.CP80	2		64		Organ Ba	1		65		ModAlem	2		50	0	Strings2	1
	40		EIGrPno1	2		65		70sDrOr2	2		35	0	PickBass	1		3		S.SlwStr	2
	41		EIGrPno2	2		66		CheezOrg	2		28		MutePkBa	1		8		LegatoSt	2
4	0		HnkyTnk	2		67		DrawOrg3	2		36	0	Fretless	1		40		Warm Str	2
	1		HnkyTnkK	2		18	0	PercOrgn	1		32		Fretless2	2		41		Kingdon	2
5	0		E.Piano1	2		24		70sPcOr1	2		33		Fretless3	2		64		70s Str	1
	1		El.Pno1K	1		32		DetPrOr	2		34		Fretless4	2		65		Str Ens3	1
	18		MelloEP1	2		33		LiteOrg	2		96		SynFretl	2		51	0	Syn.Str1	2
	32		Chor.EP1	2		37		PercOrg2	2		97		Smooth	2		27		ResoStr	2
	40		HardEl.P	2		19	0	RockOrgn	2		37	0	SlapBass1	1		64		Syn Str4	2
	45		VX El.P1	2		64		RotaryOr	2		27		ResoSlap	1		65		SS Str	2
	64		60sEl.P	1		65		SloRotar	2		32		PunchThm	2		52	0	Syn.Str2	2
6	0		E.Piano2	2		66		FstRotar	2		38	0	SlapBass2	1		53	0	ChoirAah	1
	1		El.Pno2K	1		20	0	ChrchOrg	2		43		VeloSlap	2		3		S.Choir	2
	32		Chor.EP2	2		32		ChurOrg3	2		39	0	SynBass1	1		16		Ch.Aahs2	2
	33		DX Hard	2		35		ChrOrg2	2		18		SynBass1Dk	1		32		MelChoir	2
	34		DXLegend	2		40		NotreDam	2		20		FastResB	1		40		ChoirStr	2
	40		DX Phase	2		64		OrgFlute	2		24		AcidBass	1		54	0	VoiceOoh	1
	41		DX-Analg	2		65		TrmOrgFl	2		35		CvBass	2		55	0	SynVoice	1
	42		DXKotoEP	2		21	0	ReedOrgn	1		40		TeknoBa	2		40		SynVox2	2
	45		VX El.P2	2		40		Puff Org	2		64		Oscar	2		41		Choral	2
7	0		Harpsi.	1		22	0	Acordion	2		65		SqrBass	1		64		AnaVoice	1
	1		Harpsi.K	1		32		Accordlt	2		66		RubberBa	2		56	0	Orch.Hit	2
	25		Harpsi.2	2		23	0	Harmnica	1		96		Hammer	2		35		OrchHit2	2
	35		Harpsi.3	2		24	0	TangoAcd	2		40	0	SynBass2	1		64		Impact	2
8	0		Clavi.	2		64		TngoAcd2	2		6		MelloSB2	1		57	0	Trumpet	1
	1		Clavi. K	1		25	0	NylonGtr	1		12		Seq Bass	2		16		Trumpet2	1
	27		ClaviWah	2		16		NylonGt2	1		18		ClkSynBa	2		17		BriteTrp	2
	64		PulseCv	1		25		NylonGt3	2		19		SynBa2Dk	1		32		WarmTrp	1
	65		PierceCl	2		43		VelGtHrm	2		32		SmthBa2	2		58	0	Trombone	1
Chromatic Percussion	9	0	Celesta	1		96		Ukulele	1		40		ModulrBa	2		18		Trombone2	2
	10	0	Glocken	1		26	0	SteelGtr	1		41		DX Bass	2		59	0	Tuba	1
	11	0	MusicBox	2		16		SteelGt2	1		64		X WireBa	2		16		Tuba 2	1
	64		Orgel	2		35		12StrGtr	2		41					60	0	Mute.Trp	1
12	0		Vibes	1		40		Nyln&Stl	2		44	0	Contrabs	1		61	0	Fr.Horn	2
	1		Vibesk	1		41		Stl&Body	2		45	0	Trem.Str	1		6		Fr.HrtSolo	2
	45		HardVibe	2		96		Mandolin	1		8		SlowVln	1		32		Fr.Horn2	1
13	0		Marimba	1		27	0	Jazz Gtr	1		43	0	Cello	1		37		HornOrch	2
	1		MarimbaK	1		18		MelloGtr	1		44	0	Contrabs	1		62	0	BrasSect	1
	64		SineMrb	2		32		JazzAmp	2		45	0	Trem.Str	1		35		Tp&TbSec	2
	97		Balafon2	2		28	0	CleanGtr	1		40		SlowTrStr	1		40		BrssSec2	2
	98		Log Drum	2		32		ChorusGtr	2		41	0	Pizz.Str	1		41		HiBrass	2
14	0		Xylophon	1		29	0	Mute.Gtr	1		47	0	Harp	1		42		MelloBras	2
	96		TubuBel	1		40		FunkGtr1	2		40		YangChin	2		63	0	SynBras1	2
	97		ChrchBel	2		41		MuteStlG	2		48	0	Timpani	1		12		QuackBr	2
15	0		Carillon	2		43		FunkGtr2	2							20		RezSynBr	2
16	0		Dulcimer	1		45		Jazz Man	1		24					24		PolyBrss	2
	35		Dulcimr2	2		45					27					27		SynBras3	2
	96		Cimbalom	2		46					32					32		JumpBrss	2
	97		Santur	2		41					45					45		AnaVelBr	2
	97					31	0	Dist.Gtr	1		64					64		AnaBras1	2
						40		FeedbkGt	2										
						41		FeedbkGt2	2										
						32	0	GtrHarmo	1										
						65		GtrFeedbk	1										
						66		GtrHrm02	1										

Bank 0 : (GM)

Bank 1 : Key Scale Panning

Bank 3 : Stereo

Bank 6 : Single

Bank 8 : Slow

Bank 12 : Fast Decay

Bank 14 : Double Attack

Bank 16 : Bright

Bank 17 : Bright

Bank 18 :

Dark

Bank 34 : Detune 3

Bank 35 : Octave 1

Bank 36 : Octave 2

Bank 37 : 5th 1

Bank 38 : 5th 2

Bank 39 : Bend

Bank 40 : Tutti

Bank 41 : Tutti

Bank 42 : Tutti

Bank 43 : Velo-Switch

Bank 45 : Velo-Xfade

Bank 64 : Other wave

Bank 65 : Other wave

Bank 66 : Other wave

Bank 67 : Other wave

Bank 68 : Other wave

Bank 69 : Other wave

Bank 70 : Other wave

Bank 71 : Other wave

Bank 72 : Other wave

Bank 96 : Other wave

Bank 97 : Other wave

Bank 98 : Other wave

Bank 99 : Other wave

Bank 100 : Other wave

Bank 101 : Other wave

**Bank Select MSB=064, LSB=000  
SFX voice**

Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element
Reed	65	0	SpmoSax	1	Synth Pad	92	0	ChoirPad	2	Ethnic	105	0	Sitar	1
	66	0	Alto Sax	1		64	0	Heaven2	2		32	0	DetSitar	2
	40	0	Sax Sect	2		66	0	Itopia	2		35	0	Sitar 2	2
	43	0	HyprAlto	2		67	0	CC Pad	2		96	0	Tambra	2
	67	0	TenorSax	1		93	0	BowedPad	2		97	0	Tamboura	2
	40	0	BrthTnSx	2		64	0	Glacier	2		106	0	Banjo	1
	41	0	SoftTent	2		65	0	GlassPad	2		28	0	MuteBnjo	1
	64	0	TnISax 2	1		94	0	MetalPad	2		96	0	Rabab	2
	68	0	Bari.Sax	1		64	0	Tine Pad	2		97	0	Gopichnt	2
	69	0	Oboe	2		65	0	Pan Pad	2		98	0	Oud	2
	70	0	Eng.Horn	1		95	0	Halo Pad	2		107	0	Shamisen	1
	71	0	Bassoon	1		96	0	SweepPad	2		108	0	Koto	1
	72	0	Clarinet	1		20	0	Shwimmer	2		96	0	T. Koto	2
	73	0	Piccolo	1		27	0	Converge	2		97	0	Kanon	2
	74	0	Flute	1		64	0	PolarPad	2		109	0	Kalimba	1
	75	0	Recorder	1		66	0	Celstial	2		110	0	Bagpipe	2
	76	0	PanFlute	1	Synth Effects	97	0	Rain	2		111	0	Fiddle	1
	77	0	Bottle	2		45	0	ClaviPad	2		112	0	Shanai	1
	78	0	Shakhhci	2		64	0	HrmorRain	2		64	0	Shanai2	1
	79	0	Whistle	1		65	0	AfrnWnd	2		96	0	Pungi	1
	80	0	Ocarina	1		66	0	Caribbean	2		97	0	Hichiriki	2
	81	0	SquareLd	2		98	0	SoundTrk	2	Percussive	113	0	TnkBell	2
	6	0	Square 2	1		27	0	Prologue	2		96	0	Bonang	2
	8	0	LMSquare	2		64	0	Ancestri	2		97	0	Gender	2
	18	0	Hollow	1		99	0	Crystal	2		98	0	Gamelan	2
	19	0	Shmoog	2		12	0	SynDrCmp	2		99	0	S.Gamlan	2
	64	0	Mellow	2		14	0	Popcorn	2		100	0	Rama Cym	2
	65	0	SoloSine	2		18	0	TinyBell	2		101	0	AsianBel	2
	66	0	SineLead	1		35	0	RndGlock	2		114	0	Agogo	2
	82	0	SawLead	2		40	0	GlockChi	2		115	0	SteelDrm	2
	6	0	Saw 2	1		41	0	ClearBell	2		97	0	GlasPerc	2
	8	0	ThickSaw	2		42	0	ChorBell	2		98	0	ThaiBell	2
	18	0	DynaSaw	1		64	0	SynMallet	1		116	0	WoodBlok	1
	19	0	DigiSaw	2		65	0	SftCryst	2		96	0	Castanet	1
	20	0	Big Lead	2		66	0	LoudGlok	2		117	0	TaikoDrm	1
	24	0	HeavySyn	2		67	0	XmasBell	2		96	0	Gr.Cassa	1
	25	0	WaspySyn	2		68	0	VibeBell	2		118	0	MelodTom	2
	40	0	PulseSaw	2		69	0	DigiBell	2		64	0	Mel Tom2	1
	41	0	Dr. Lead	2		70	0	AirBells	2		65	0	Real Tom	2
	45	0	VeloLead	2		71	0	BellHarp	2		66	0	Rock Tom	2
	96	0	Seq Ana	2		72	0	Gamelcha	2		119	0	Syn.Drum	1
	83	0	CalioPld	2	Sound Effects	100	0	Atmosphr	2		64	0	Ana Tom	1
	65	0	Pure Pad	2		18	0	WarmAtms	2		65	0	ElecPerc	2
	84	0	Chiff Ld	2		19	0	HollwRls	2		120	0	RevCymbl	1
	64	0	Rubby	2		40	0	NylonEP	2		121	0	FretNoiz	2
	85	0	CharanLd	2		64	0	NylinHarp	2		122	0	BrthNoiz	2
	64	0	DistLead	2		65	0	Harp Vox	2		123	0	Seashore	2
	65	0	WireLead	2		66	0	AtmosPad	2		124	0	Tweet	2
	86	0	Voice Ld	2		67	0	Planet	2		125	0	Telephone	1
	24	0	SynthAah	2		101	0	Bright	2		126	0	Helicptr	1
	64	0	VoxLead	2		64	0	FantaBel	2		127	0	Applause	1
	87	0	Fifth Ld	2		96	0	Smokey	2		128	0	Gunshot	1
	35	0	Big Five	2	Synth Pad	102	0	Goblins	2		39			
	88	0	Bass &Ld	2		64	0	GobSyn	2		40			
	16	0	Big&Low	2		65	0	50sSciFi	2		41			
	64	0	Fat&Pry	2		66	0	Ring Pad	2		42			
	65	0	SoftWurl	2		67	0	Ritual	2		43			
	89	0	NewAgePd	2		68	0	ToHeaven	2		44			
	64	0	Fantasy2	2		70	0	Night	2		45			
	90	0	Warm Pad	2		71	0	Glisten	2		46			
	16	0	ThickPad	2		96	0	BelChoir	2		47			
	17	0	Soft Pad	2		103	0	Echoes	2		48			
	18	0	SinePad	2		8	0	EchoPad2	2		49	0	Dog	1
	64	0	Horn Pad	2		14	0	Echo Pan	2		50	0	Horse	1
	65	0	RotarStr	2		64	0	EchoBell	2		51	0	Bird 2	1
	91	0	PolySyPd	2		65	0	Big Pan	2		52			
	64	0	PolyPd80	2		66	0	SynPiano	2		53			
	65	0	ClickPad	2		67	0	Creation	2		54			
	66	0	Ana Pad	2		68	0	Stardust	2		55	0	Ghost	2
	67	0	SquarPad	2		69	0	Reso Pan	2		56	0	Maou	2
						104	0	Sci-Fi	2		57			
						64	0	Starz	2		58			

No Sound  
Pas de son

# TG300B Normal Voice List / Liste des Voix Normal TG300B

**Bank Select MSB=Bank Number, LSB=000**

Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element
Piano	1	0	GrandPno	1	Organ	17	0	DrawOrgn	1	Guitar	29	0	Mute.Gtr	1	Strings	41	0	Violin	1
	8	GrndPnoK	1			1	70sDrOr1	2			8	FunckGtr1	2			8	SlowVln	1	
	16	MelloGrp	1			8	DetDrwOr	2			16	FunkGtr2	2			126	E-Organ4	2	
	126	A-Piano1	2			9	70sDrOr2	2			126	A-Bass	2			127	synbass1	1	
	127	a.piano1	1			16	60sDrOr1	2			127					127			
	2	0	BritePno	1		17	60sDrOr2	2			30	0	Ovdrive	1		42	0	Viola	1
	8	BritnPnoK	1			18	60sDrOr3	2			126	Choir-1	1			126	E-Organ5	2	
	126	A-Piano2	2			24	CheezOrg	2			127	synbass2	1			127	rain	2	
	127	a.piano2	1			32	DrawOrg2	2			31	0	Dist.Gtr	1		43	0	Cello	1
	3	0	E.Grand	2		33	EvenBar	2			8	FeedkGt	2			126	E-Organ6	2	
4	1	ElGrPno1	2			40	Organ Ba	1			9	FeedkGt2	2			127	synbass2	2	
	2	ElGrPno2	2			126	Slap-2	2			126	Choir-2	1			44	0	Contrab.	1
	8	ElGrPnoK	2			127	harpsi1	1			127	synbass3	2			126	E-Organ7	2	
	126	A-Piano3	2			18	0	PercOrgn	1		32	0	GtrHarmo	1		45	0	Trem.Str	1
	127	a.piano3	1			1	70sPcOr1	2			8	GtFeedbk	1			8	SlowTrStr	1	
	4	0	HnkyTnk	2		8	DetPrCor	2			126	Choir-3	2			9	Susp Str	2	
	8	HnkyTnkK	2			32	PercOrg2	2			127	synbass4	1			126	E-Organ8	2	
	126	A-Piano4	2			126	Slap-3	2			33	0	Aco.Bass	1		46	0	Pizz.Str	1
	127	e.piano1	1			127	harpsi2	2			126	Choir-4	2			126	E-Organ9	2	
	5	0	E.Piano1	2	Bass	19	0	RockOrgn	2		34	0	FngBass	1		47	0	Harp	1
5	8	Chor.EP1	2			8	RotaryOr	2			1	FngBass2	2			126	SoftTP-1	1	
	16	VX El.P1	2			16	SloRotar	2			126	Strngs-1	2			127	syndorg	2	
	24	60sEl.P	1			24	FstRotar	2			127	syphorno	2			127	syndbass	2	
	25	HardEl.P	2			126	Slap-4	2			35	0	PickBass	1		48	0	Timpani	1
	26	MelloEP1	2			127	harpsi3	1			8	MutePkBa	1			126	SoftTP-2	1	
	32	El.Pno1K	1			20	0	ChrchOrg	2		126	Strngs-2	2			127	squareld	2	
	126	A-Piano5	1			8	ChurOrg2	2			127	choir pd	2			49	0	Strings1	1
	127	e.piano2	1			16	ChurOrg3	2			36	0	Fretless	1		1	1	Slow Str	1
	6	0	E.Piano2	2		24	OrgFlute	2			1	Fretless2	2			8	Orchestr	2	
	8	Chor.EP2	2			32	TrmOrgFl	2			2	Fretless3	2			9	Orchstr2	2	
6	16	VX El.P2	2			126	Slap-5	2			3	Fretless4	2			10	TremOrch	2	
	24	DX Hard	2			127	clav1	1			4	SynFretl	2			11	ChoirStr	2	
	32	El.Pno2K	1			21	0	ReedOrgn	1		5	Smooth	2			16	S.Strngs	2	
	126	A-Piano6	1			126	Slap-6	2			126	Strngs-3	2			24	VeloStr	2	
	127	e.piano3	1			127	clav2	1			127	bowed pd	2			126	TP/TRB-1	1	
	7	0	Harpsi.	1	Ensemble	22	0	Accordion	2		127	strsect1	2			127	strsect1	2	
7	8	Harpsi.3	2			8	Accordlt	2			0	SlapBas1	1			50	0	Strings2	1
	16	Harpsi.K	1			126	Slap-7	2			1	ResoSlap	1			1	1	70s Str	1
	24	Harpsi.2	2			127	clavi3	1			8	Strngs-4	2			8	LegatoSt	2	
	126	A-Piano7	1			23	0	Harmnica	1		126	soundtrk	2			9	Warm Str	2	
	127	e.piano4	1			1	Harmo 2	2			38	0	SlapBas2	1		10	10	S.IwStr	2
	8	Clavi.	2			126	Slap-8	2			126	E-Organ1	2			126	TP/TRB-2	1	
	126	Clavi. K	1			127	celesta1	1			127	atmosphr	2			127	strsect2	2	
	127	E-Piano1	2			24	0	TangoAccd	2		39	0	SynBass1	1		51	0	SynStr1	2
	127	hnyktyk	2			126	Finger-2	2			1	SynBass1Dk	1			1	1	TP/TRB-3	1
	9	0	Celesta	1	Guitar	40	126	synbras1	2		8	AcidBass	1			126	TP/TRB-4	1	
Chromatic Percussion	126	E-Piano2	2			40	126	LequintG	1		9	FastResB	1			127	pizz.str	1	
	127	e.organ1	2			40	126	Finger-2	2		10	TeknoBa	2			52	0	SynStr2	2
	10	0	Glocken	1		40	126	synbras1	2		126	ResoBass	1			126	TP/TRB-5	2	
	126	E-Piano3	2			40	127	SteelGtr2	1		126	E-Organ2	2			127	cello1	1	
	127	e.organ2	2			40	126	Finger-2	2		127	syn warm	2			53	0	ChoirAah	1
	11	0	MusicBox	2		40	126	LequintG	1		1	ClkSynBa	2			8	S.Choir	2	
	126	A-Guitr1	1			40	126	Finger-2	2		2	ModulBa	2			9	MelChoir	2	
	127	e.organ3	1			40	126	synbras1	2		3	Seq Bass	2			126	TP/TRB-6	2	
	12	0	Vibes	1	Ensemble	40	126	SteelGtr1	1		8	DX Bass	2			127	cello2	1	
	8	HardVibe	2			40	126	12StrGtr	2		9	X WireBa	2			126	TP/TRB-7	2	
	126	VibesK	1			40	126	Nyln&Stl	2		16	RubberBa	2			127	cello1	1	
	127	A-Guitr2	2			40	126	Mandolin	2		17	SynBa2Dk	1			54	0	VoiceOoh	1
	127	e.organ4	1			40	126	SteelGt2	1		18	MelloSB1	1			126	TP/TRB-8	2	
	13	0	Marimba	1		40	126	Picked-1	1		19	SmthBa2	2			127	cello2	1	
	8	MarimbaK	1			40	127	synbras2	2		20	E-Organ3	2			55	0	SynVoice	1
	17	Balafon2	2			40	127	Jazz Gtr	1		21	126	SynVox2	2		8	Sax-1	1	
	24	Log Drum	2			40	127	MelloGtr	1		22	126	Sax-2	1		126	TP/TRB-9	2	
	126	A-Guitr3	2			40	127	PdlSteel	1		23	126	LoFiRave	2		127	cello2	1	
	127	pipeorg1	2			40	127	Picked-2	2		24	126	Dulcimer2	2		56	0	Orch.Hit	2
14	0	Xylophon	1			40	127	synbras3	2		25	126	OrchHit2	2		1	1	Impact	2
	126	E-Guitr1	2			40	127	CleanGtr	1		26	126	Impact	2		8	8	Imp	2
	127	pipeorg2	2			40	127	ChorusGt	2		27	126	126	LoFiRave		16	126	Sax-1	1
	15	0	TubulBel	1	Ensemble	40	126	FretlsBs	1		28	126	126	Dulcimer		127	126	Sax-2	1
	8	ChrchBel	2			40	127	synbras4	2		28	127	127	Dulcimer2		127	127	TP/TRB-10	2
	9	Carillon	2			40	127	synfunny	1		29	127	127	Dulcimer3		57	0	Orch.Hit	2
	126	E-Guitr2	1			40	127	acordion	2		30	127	127	Dulcimer4		1	1	OrchHit2	2
	127	pipeorg3	2			40	127	acordion	2		31	127	127	Dulcimer5		8	8	Impact	2
	16	0	Dulcimer	1		40	127	acordion	2		32	127	127	Dulcimer6		16	126	LoFiRave	2
	1	Dulcimr2	2			40	127	acordion	2		33	127	127	Dulcimer7		126	126	Sax-1	1
	8	Cimbalom	2			40	127	acordion	2		34	127	127	Dulcimer8		127	127	TP/TRB-11	2
	126	Slap-1	2			40	127	acordion	2		35	127	127	Dulcimer9		58	0	Orch.Hit	2
	127	acordion	2			40	127	acordion	2		36	127	127	Dulcimer10		1	1	OrchHit2	2

TG300B Normal Voice List / Liste des Voix Normal TG300B

Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element	Instrument Group	Program #	Bank #	Voice Name	Element		
Brass	57	0	Trumpet	1	Synth Lead	81	0	SquareLd	2	Synth Effects	97	0	Rain	2	Percussive	113	0	TnkBell	2		
	1		Trumpet2	1		1		Square 2	1		1		HrmnRain	2		8		Bonang	2		
	24		BriteTrp	2		2		Hollow	1		2		AfrcnWnd	2		9		Gender	2		
	25		WarmTrp	2		3		Mellow	2		8		Clavipad	2		10		Gamelan	2		
	126		Sax-3	1		4		SoloSine	2		127		brssect2	2		11		S.Gamlan	2		
	127		contrabs	1		5		Shmoog	2		98	0	SoundTrk	2		16		Rama Cym	2		
	58	0	Trombone	1		6		LMSquare	2		1		Ancestrl	2		127		timpani	1		
	1		Trmbone2	2		8		SineLead	1		2		Prologue	2		114	0	Agogo	2		
	126		Sax-4	2		127		sax3	1		127		vibe1	1		127		melotom	1		
	127		harp 1	1		82	0	Saw,Lead	2		99	0	Crystal	2		115	0	SteelDrm	2		
	59	0	Tuba	1		1		Saw 2	1		1		SynMalet	1		127		deepsnar	1		
	1		Tuba 2	1		2		PulseSaw	2		2		SftCryst	2		116	0	WoodBlok	1		
	126		Brass-1	1		3		ThickSaw	2		3		RndGlock	2		8		Castanet	1		
	127		harp 2	1		4		Big Lead	2		4		LoudGlok	2		127		e.perc1	1		
	60	0	Mute.Trp	1		5		VeloLead	2		5		GlockChi	2		117	0	TaikoDrm	1		
	126		Brass-2	1		6		HeavySyn	2		6		ClearBell	2		8		Gr.Cassa	1		
	127		guitar 1	1		7		DynaSaw	1		7		XmasBell	2		127		e.perc2	1		
	61	0	Fr.Horn	2		8		Dr. Lead	2		8		VibeBell	2		118	0	MelodTom	2		
	1		FrHorn2	2		16		WaspySyn	2		9		DigiBell	2		1		Real Tom	2		
	8		FrHrSolo	1		127		sax4	1		16		ChorBell	2		8		Mel Tom2	1		
	16		HornOrch	2	Synth Pad	83	0	CalioLd	2		17		AirBells	2		9		Rock Tom	2		
	126		Brass-3	2		2		Pure Pad	2		18		BellHarp	2		127		taiko	1		
	127		guitar 2	1		127		clarinet1	1		19		Gamelimba	2		119	0	Syn.Drum	1		
	62	0	BrasSect	1		84	0	Chiff Ld	2		127		vibe2	1		8		Ana Tom	1		
	8		BrssSec2	2		127		clarinet2	1		100	0	Atmosphr	2		9		ElecPerc	2		
	126		Brass-4	2		85	0	CharanLd	2		127		NylnHarp	2		127		taikorim	1		
	127		elecgtr1	2		8		DistLead	2		101	0	Harp Vox	2		120	0	RevCymbal	1		
	63	0	SynBras1	2		127		oboe	1		1		HollowRls	2		127		cymbal	2		
	1		PolyBrss	2		86	0	Voice Ld	2		2		NylonEP	2		121	0	FretNoiz	2		
	8		SynBras3	2		127		eng.horn	1		3		AtmosPad	2		1		CuttingNz	1		
	9		QuackBr	2		87	0	Fifth Ld	2		4		symallet	1		2		Str Slap	1		
	16		AnaBrss1	2		127		Big Five	2		5		CtrngNz2	2		3		CtngNz2	2		
	126		Brass-5	2		88	0	bassoon	1		127		glocken	2		123	0	Seashore	2		
	127		elecgtr2	2		1		Bass &Ld	2		1		1			1		Rain	1		
	64	0	SynBras2	1		2		Big&Low	2		2		2			2		Thunder	1		
	1		Soft Btrs	2		3		Fat&Prky	2		3		3			3		Wind	1		
	8		SynBras4	2		4		harmnica	1		4		4			4		Stream	2		
	16		AnaBrss2	2	Synth Pad	127	0	NewAgePd	2		5		SynPiano	2		5		Bubble	2		
	17		VelBras2	2		1		Fantasy2	2		127		tubulbel	1		127		orchehit	1		
	126		Orch-Hit	1		2		trumpet1	1		104	0	Sci-Fi	2		1		124	0	Tweet	2
	127		sitar	1		127		Warm Pad	2		1		1			2		Dog	1		
	65	0	SprnoSax	1		1		ThickPad	2		2		2			3		Horse	1		
	127		a.bass 1	1		2		Horn Pad	2		3		3			3		Bird 2	1		
	66	0	Alto Sax	1		3		RotarStr	2		4		4			127		Telephone	1		
	8		HyperAlto	2		4		Soft Pad	2		127		5			1		Tel.Dial	1		
	127		a.bass 2	1		127		trumpet2	1		105	0	Sitar	1		2		DoorSlk	1		
	67	0	TnrSax 2	1	Synth Pad	1		Heaven2	2		2		2			3		Scratch	1		
	8		BrthTnSx	2		127		trmbone2	2		16		3			4		WindChm	1		
	127		e.bass 1	1		1		BowedPad	2		127		4			5		Scratch2	2		
	68	0	Baris.Sax	1		127		fr.horn1	1		106	0	Banjo	1		6		bird	1		
	127		e.bass 2	1		127		Metapad	2		1		1			127		Helicpr	1		
	69	0	Oboe	2		1		Tine Pad	2		8		2			1		CarEngin	1		
	127		slapbas1	1		2		Pan Pad	2		16		3			2		Car Stop	1		
	70	0	Eng.Horn	1		127		fr.horn2	2		24		4			3		Car Pass	1		
	127		slapbas2	1		1		Halo Pad	2		127		5			4		Car Crash	1		
	71	0	Bassoon	1		127		tuba	2		107	0	Shamisen	1		5		6		Siren	2
	127		frettes1	1		1		SweepPad	2		8		6			6		Train	1		
	72	0	Clarinet	1		127		PolarPad	2		9		7			7		Jetplane	2		
	127		frettes2	1		1		Converge	2		16		8			8		Starship	2		
	73	0	Piccolo	1		127		Shwimmer	2		127		9			9		Burst	2		
	127		flute1	1		1		Celstial	2		109	0	Kalimba	1		16		Coaster	2		
	74	0	Flute	1		127		brssect1	1		127		127			127		jam	1		
	127		flute2	1		1		Bagpipe	2		110	0	Applause	1		1		Applause	1		
	75	0	Recorder	1		127		whistle2	1		127		2			2		Laughing	1		
	127		piccolo1	1		1		Fiddle	1		111	0	Scream	1		3		Scream	1		
	76	0	PanFlute	1		127		bottle	2		127		4			4		Punch	1		
	127		piccolo2	2		1		Shanai	1		112	0	Heart	1		5		FootStep	1		
	77	0	Bottle	2		127		Shakhi	2		127		6			6		efctwater	2		
	127		recorder	1		127		panpipes	2		127		7			7		Gunshot	1		
	78	0	Shakhi	2		127		sax1	2		113	0	MchnGun	1		8		MchnGun	1		
	127		sax2	1		127		sax2	1		127		9			9		LaserGun	2		
	79	0	Whistle	1		127		shakchi	2		127		10			10		Xlosion	2		
	127		sax1	2		1		Shanai2	1		127		11			11		efctngl	2		
	80	0	Ocarina	1		127		breath	2		127		12			12					

# XG Drum Voice List / Liste des Voix Batterie XG

---

**Bank Select MSB=Bank Number, LSB=000**

Bank	127	127	127	127	127	127	127	127	126	126
Program #	1	2	9	17	25	26	33	41	49	1
Note#	Note	Key off	Alternate assign	Standard Kit	Standard2 Kit	Room Kit	Rock Kit	Electro Kit	Analog Kit	Jazz Kit
13	C# -1	3		Surdo Mute						
14	D -1	3		Surdo Open						
15	D# -1			Hi Q						
16	E -1			Whip Slap						
17	F -1	4		Scratch Push						
18	F# -1	4		Scratch Pull						
19	G -1			Finger Snap						
20	G# -1			Click Noise						
21	A -1			Metronome Click						
22	A# -1			Metronome Bell						
23	B -1			Seq Click L						
24	C 0			Seq Click H						
25	C# 0			Brush Tap						
26	D 0 O			Brush Swirl L						
27	D# 0			Brush Slap						
28	E 0 O			Brush Swirl H			Reverse Cymbal	Reverse Cymbal		
29	F 0 O			Snare Roll	Snare Roll 2					
30	F# 0			Castanet		Hi Q	Hi Q			
31	G 0			Snare L	Snare L 2	SD Rock M	Share M	SD Rock H	Brush Slap L	
32	G# 0			Sticks						
33	A 0			Bass Drum L		Bass Drum M	Bass Drum H 4	Bass Drum M		Bass Drum L2
34	A# 0			Open Rim Shot	Open Rim Shot 2					
35	B 0			Bass Drum M	Bass Drum M 2	Bass Drum H 3	BD Rock	BD Analog L		Gran Cassa
36	C 1			Bass Drum H	Bass Drum H 2	BD Rock	BD Gate	BD Analog H	BD Jazz	BD Soft
37	C# 1			Side Stick				Analog Side Stick		
38	D 1			Snare M	Snare M 2	SD Room L	SD Rock	SD Rock L	Analog Snare L	Brush Slap M
39	D# 1			Hand Clap						Marching Sn M
40	E 1			Snare H	Snare H 2	SD Room H	SD Rock Rim	SD Rock H	Analog Snare H	Brush Tap H
41	F 1			Floor Tom L		Room Tom 1	Rock Tom 1	E Tom 1	Analog Tom 1	Jazz Tom 1
42	F# 1	1		Hi-Hat Closed					Analog HH Closed 1	
43	G 1			Floor Tom H		Room Tom 2	Rock Tom 2	E Tom 2	Analog Tom 2	Jazz Tom 2
44	G# 1	1		Hi-Hat Pedal					Analog HH Closed 2	
45	A 1			Low Tom		Room Tom 3	Rock Tom 3	E Tom 3	Analog Tom 3	Jazz Tom 3
46	A# 1	1		Hi-Hat Open					Analog HH Open	
47	B 1			Mid Tom L		Room Tom 4	Rock Tom 4	E Tom 4	Analog Tom 4	Jazz Tom 4
48	C 2			Mid Tom H		Room Tom 5	Rock Tom 5	E Tom 5	Analog Tom 5	Jazz Tom 5
49	C# 2			Crash Cymbal 1					Analog Cymbal	Hand Cym.Open L
50	D 2			High Tom		Room Tom 6	Rock Tom 6	E Tom 6	Analog Tom 6	Jazz Tom 6
51	D# 2			Ride Cymbal 1						Hand Cym.Closed L
52	E 2			Chinese Cymbal						FL.Key Click
53	F 2			Ride Cymbal Cup						Engine Start
54	F# 2			Tambourine						Tire Screech
55	G 2			Splash Cymbal						Car Passing
56	G# 2			Cowbell						Crash
57	A 2			Crash Cymbal 2						Siren
58	A# 2			Vibraslap						Train
59	B 2			Ride Cymbal 2						Jetplane
60	C 3			Bongo H						Starship
61	C# 3			Bongo L						Burst Noise
62	D 3			Conga H Mute						Coaster
63	D# 3			Conga H Open						SubMarine
64	E 3			Conga L						
65	F 3			Timbale H						
66	F# 3			Timbale L						
67	G 3			Agogo H						
68	G# 3			Agogo L						
69	A 3			Cabasa						Rain
70	A# 3			Maracas						Laughing
71	B 3 O			Samba Whistle H						Thunder
72	C 4 O			Samba Whistle L						Screaming
73	C# 4			Guiro Short						Wind
74	D 4 O			Guiro Long						Punch
75	D# 4			Claves						Stream
76	E 4			Wood Block H						Heartbeat
77	F 4			Wood Block L						Bubble
78	F# 4			Cuica Mute			Scratch Push	Scratch Push		Footsteps
79	G 4			Cuica Open			Scratch Pull	Scratch Pull		Feed
80	G# 4	2		Triangle Mute						
81	A 4	2		Triangle Open						
82	A# 4			Shaker						
83	B 4			Jingle Bell						
84	C 5			Bell Tree						
85	C# 5									Dog
86	D 5									Machine Gun
87	D# 5									Horse Gallop
88	E 5									Laser Gun
89	F 5									Bird 2
90	F# 5									Explosion
91	G 5									FireWork

Same as Standard Kit

Même que Kit standard

No Sound

Pas de son

- \* Drum and percussion sounds assigned to the same Alternate Assign numbered group cannot be sounded simultaneously. For example, the Hi-Hat Open sound (group 1) and Hi-Hat Closed sound (also group 1) cannot be sounded at the same time.
- \* Les sons de percussions et de batterie assignés aux groupes numérotés d'assignation alternée ne peuvent être entendus simultanément. Par exemple, le son Hi-Hat Open (groupe 1) et le son Hi-Hat Closed (également groupe 1) ne peuvent être entendus en même temps.

# TG300B Drum Voice List / Liste des Voix Batterie TG300B

---

Program #	1	9	17	25	26	33	41	49	57	128		
Note#	Note	Alternate assign	Standard Kit	Room Kit	Power Kit	Electro Kit	Analog Kit	Jazz Kit	Brush Kit	Orchestra Kit	SFX Set	C/M Kit
25	C# 0		Snare Roll									
26	D 0		Finger Snap									
27	D# 0		Hi Q									
28	E 0		Whip Slap									
29	F 0	7	Scratch Push									
30	F# 0	7	Scratch Pull									
31	G 0		Sticks									
32	G# 0		Click Noise									
33	A 0		Metronome Click									
34	A# 0		Metronome Bell									
35	B 0		Bass Drum M									
36	C 1		Bass Drum H	BD Power	BD Electronic	BD Analog H	BD Jazz	BD Soft	Gran Cassa			
37	C# 1		Side Stick				Analog Side Stick					
38	D 1		Snare M	SD Power	SD Electronic	Analog Snare L		Brush Tap	Concert SD			
39	D# 1		Hand Clap					Brush Slap	Castanet	High-Q		
40	E 1		Snare H			SD Power		Brush Swirl	Concert SD	Slap	SD Electro	
41	F 1		Floor Tom L	Room Tom 1	Room Tom 1	E Tom 1	Analog Tom 1	Jazz Tom 1	Jazz Tom 1	Timpani F	Scratch Push	
42	F# 1	1	Hi-Hat Closed				Analog HH Closed 1			Timpani F#	Scratch Pull	
43	G 1		Floor Tom H	Room Tom 2	Room Tom 2	E Tom 2	Analog Tom 2	Jazz Tom 2	Jazz Tom 2	Timpani G	Sticks	
44	G# 1	1	Hi-Hat Pedal				Analog HH Closed 2			Timpani G#	Square Click	Hi-Hat Open 1
45	A 1		Low Tom	Room Tom 3	Room Tom 3	E Tom 3	Analog Tom 3	Jazz Tom 3	Jazz Tom 3	Timpani A	Metronome Click	
46	A# 1	1	Hi-Hat Open				Analog HH Open			Timpani A#	Metronome Bell	Hi-Hat Open 2
47	B 1		Mid Tom L	Room Tom 4	Room Tom 4	E Tom 4	Analog Tom 4	Jazz Tom 4	Jazz Tom 4	Timpani B	Guitar Fret Noise	
48	C 2		Mid Tom H	Room Tom 5	Room Tom 5	E Tom 5	Analog Tom 5	Jazz Tom 5	Jazz Tom 5	Timpani C	Guitar Cutting Down	
49	C# 2		Crash Cymbal 1				Analog Cymbal			Timpani C#	Guitar Cutting Up	
50	D 2		High Tom	Room Tom 6	Room Tom 6	E Tom 6	Analog Tom 6	Jazz Tom 6	Jazz Tom 6	Timpani D	Ac Bass Slap	
51	D# 2		Ride Cymbal 1							Timpani D#	FL.Key Click	
52	E 2		Chinese Cymbal			Reverse Cymbal				Timpani E	Laughing	
53	F 2		Ride Cymbal Cup							Timpani F	Screaming	
54	F# 2		Tambourine								Punch	
55	G 2		Splash Cymbal								Heartbeat	
56	G# 2		Cowbell			Analog Cowbell					Footsteps 1	
57	A 2		Crash Cymbal 2								Footsteps 2	
58	A# 2		Vibraslap								Applause	
59	B 2		Ride Cymbal 2								Hand Cym.2	Door Creaking
60	C 3		Bongo H									Door Slam
61	C# 3		Bongo L									Scratch
62	D 3		Conga H Mute				Analog Conga H					Windchime
63	D# 3		Conga H Open				Analog Conga M					Engine Start
64	E 3		Conga L				Analog Conga L					Tire Screech
65	F 3		Timbale H									Car Passing
66	F# 3		Timbale L									Crash
67	G 3		Agogo H									Siren
68	G# 3		Agogo L									Train
69	A 3		Cabasa									Jetplane
70	A# 3		Maracas			Analog Maracas						Helicopter
71	B 3	2	Samba Whistle H									Starship
72	C 4	2	Samba Whistle L									Gunshot
73	C# 4	3	Guiro Short									Machine Gun
74	D 4	3	Guiro Long									Laser Gun
75	D# 4		Claves			Analog Claves						Explosion
76	E 4		Wood Block H									Dog
77	F 4		Wood Block L									Laughing
78	F# 4	4	Cuica Mute									Horse Gallop
79	G 4	4	Cuica Open									Screaming
80	G# 4	5	Triangle Mute									Bird Tweet
81	A 4	5	Triangle Open									Punch
82	A# 4		Shaker									Rain
83	B 4		Jingle Bell									Heartbeat
84	C 5		Bell Tree									Thunder
85	C# 5		Castanet									Footsteps 1
86	D 5	6	Surdo Mute									Wind
87	D# 5	6	Surdo Open									Footsteps 2
88	E 5											Seashore
89	F 5											Applause
90	F# 5											Tire Screech
91	G 5											Car Passing
92	G# 5											Crash
93	A 5											Siren
94	A# 5											Train
95	B 5											Jetplain
96	C 6											Helicopter
97	C# 6											Starship
98	D 6											Gunshot
99	D# 6											Machine Gun
100	E 6											Laser Gun
101	F 6											Explosion
102	F# 6											Dog
103	G 6											Horse Gallop
104	G# 6											Bird Tweet
105	A 6											Rain
106	A# 6											Thunder
107	B 6											Wind
108	C 7											Seashore
												Stream
												Bubble

Same as Standard Kit

Même que Kit standard

No Sound

Pas de son

# Effect Type List / Liste des types d'effets

---

## REVERB

Exclusive		Effect Type	Description
MSB	LSB		
00	00	NO EFFECT	Effect turned off.
01	00	HALL1	Reverb simulating the resonance of a hall.
01	01	HALL2	Reverb simulating the resonance of a hall.
02	00	ROOM1	Reverb simulating the resonance of a room.
02	01	ROOM2	Reverb simulating the resonance of a room.
02	02	ROOM3	Reverb simulating the resonance of a room.
03	00	STAGE1	Reverb appropriate for a solo instrument.
03	01	STAGE2	Reverb appropriate for a solo instrument.
04	00	PLATE	Reverb simulating a metal plate reverb unit.
10	00	WHITE ROOM	A unique short reverb with a bit of initial delay.
11	00	TUNNEL	Simulation of a tunnel space expanding to left and right.
13	00	BASEMENT	A bit of initial delay followed by reverb with a unique resonance.

## CHORUS

Exclusive		Effect Type	Description
MSB	LSB		
00	00	NO EFFECT	Effect turned off.
41	00	CHORUS1	Conventional chorus program that adds natural spaciousness.
41	01	CHORUS2	Conventional chorus program that adds natural spaciousness.
41	02	CHORUS3	Conventional chorus program that adds natural spaciousness.
41	08	CHORUS4	Chorus with stereo input. The pan setting specified for the Part will also apply to the effect sound.
42	00	CELESTE1	A 3-phase LFO adds modulation and spaciousness to the sound.
42	01	CELESTE2	A 3-phase LFO adds modulation and spaciousness to the sound.
42	02	CELESTE3	A 3-phase LFO adds modulation and spaciousness to the sound.
42	08	CELESTE4	Celeste with stereo input. The pan setting specified for the Part will also apply to the effect sound.
43	00	FLANGER1	Adds a jet-airplane effect to the sound.
43	01	FLANGER2	Adds a jet-airplane effect to the sound.
43	08	FLANGER3	Adds a jet-airplane effect to the sound.

## VARIATION

Exclusive		Effect Type	Description
MSB	LSB		
00	00	NO EFFECT	Effect turned off.
01	00	HALL1	Reverb simulating the resonance of a hall.
01	01	HALL2	Reverb simulating the resonance of a hall.
02	00	ROOM1	Reverb simulating the resonance of a room.
02	01	ROOM2	Reverb simulating the resonance of a room.
02	02	ROOM3	Reverb simulating the resonance of a room.
03	00	STAGE1	Reverb appropriate for a solo instrument.
03	01	STAGE2	Reverb appropriate for a solo instrument.
04	00	PLATE	Reverb simulating a metal plate reverb unit.
05	00	DELAY L,C,R	A program that creates three delay sounds; L, R, and C (center).
06	00	DELAY L,R	A program that creates two delay sounds; L and R. Two feedback delays are provided.
07	00	ECHO	Two delays (L and R) and independent feedback delays for L and R.
08	00	CROSS DELAY	A program that crosses the feedback of two delays.
09	00	EARLY REF1	An effect that produces only the early reflection component of reverb.
09	01	EARLY REF2	An effect that produces only the early reflection component of reverb.
0A	00	GATE REVERB	A simulation of gated reverb.
0B	00	REVERSE GATE	A program that simulates gated reverb played backwards.
14	00	KARAOKE 1	A delay with feedback of the same types as used for karaoke reverb.
14	01	KARAOKE 2	A delay with feedback of the same types as used for karaoke reverb.
14	02	KARAOKE 3	A delay with feedback of the same types as used for karaoke reverb.
41	00	CHORUS1	Conventional chorus program that adds natural spaciousness.
41	01	CHORUS2	Conventional chorus program that adds natural spaciousness.
41	02	CHORUS3	Conventional chorus program that adds natural spaciousness.
41	08	CHORUS4	Chorus with stereo input.
42	00	CELESTE1	A 3-phase LFO adds modulation and spaciousness to the sound.
42	01	CELESTE2	A 3-phase LFO adds modulation and spaciousness to the sound.
42	02	CELESTE3	A 3-phase LFO adds modulation and spaciousness to the sound.
42	08	CELESTE4	Celeste with stereo input.
43	00	FLANGER1	Adds a jet-airplane effect to the sound.
43	01	FLANGER2	Adds a jet-airplane effect to the sound.
43	08	FLANGER3	Adds a jet-airplane effect to the sound.
44	00	SYMPHONIC	A multi-phase version of CELESTE.
45	00	ROTARY SPEAKER	A simulation of a rotary speaker. You can use AC1 (assignable controller) etc. to control the speed of rotation.
46	00	TREMOLO	An effect that cyclically modulates the volume.
47	00	AUTO PAN	A program that cyclically moves that sound image to left and right, front and back.
48	00	PHASER1	Cyclically changes the phase to add modulation to the sound.
48	08	PHASER2	Phaser with stereo input.
49	00	DISTORTION	Adds a sharp-edged distortion to the sound.
4A	00	OVER DRIVE	Adds mild distortion to the sound.
4B	00	AMP SIMULATOR	A simulation of a guitar amp.
4C	00	3BAND EQ(MONO)	A mono EQ with adjustable LOW, MID, and HIGH equalizing.
4D	00	2BAND EQ(STEREO)	A stereo EQ with adjustable LOW and HIGH. Ideal for drum Parts.
4E	00	AUTO WAH(LFO)	Cyclically modulates the center frequency of a wah filter. With an AC1 etc. this can function as a pedal wah.
40	00	THRU	Bypass without applying an effect.

\* MSB, LSB is represented in hexadecimal.

\* LSB = 0 is the basic effect type.

\* MSB, LSB est représenté en hexadécimal.

\* LSB = 0 est le type d'effet de base.

# Effect Parameter List / Liste des paramètres d'effet

## HALL1,2, ROOM1,2,3 ,STAGE1,2, PLATE

No.*	Parameter	Range	Value	→ P42**	Control
1	Reverb Time	0.3~30.0s	0-69	table#4	
2	Diffusion	0~10	0-10		
3	Initial Delay	0~63	0-63	table#5	
4	HPF Cutoff	Thru~8.0kHz	0-52	table#3	
5	LPF Cutoff	1.0k~Thru	34-60	table#3	
6					
7					
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127	table#5	●
11	Rev Delay	0~63	0-63		
12	Density	0~3	0-3		
13	Er/ Rev Balance	E63> R~ E=R ~ E<R63	1-127		
14					
15	Feedback Level	-63~+63	1-127		
16					

## ECHO

No.*	Parameter	Range	Value	→ P42**	Control
1	Lch Delay1	0.1~355.0ms	1-3550		
2	Lch Feedback Level	-63~+63	1-127		
3	Rch Delay1	0.1~355.0ms	1-3550		
4	Rch Feedback Level	-63~+63	1-127		
5	High Damp	0.1~1.0	1-10		
6	Lch Delay2	0.1~355.0ms	1-3550		
7	Rch Delay2	0.1~355.0ms	1-3550		
8	Delay2 Level	0~127	0-127		
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
14	EQ Low Gain	-12~+12dB	52-76		
15	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
16	EQ High Gain	-12~+12dB	52-76		

## WHITE ROOM ,TUNNEL, BASEMENT

No.*	Parameter	Range	Value	→ P42**	Control
1	Reverb Time	0.3~30.0s	0-69	table#4	
2	Diffusion	0~10	0-10		
3	Initial Delay	0~63	0-63	table#5	
4	HPF Cutoff	Thru~8.0kHz	0-52	table#3	
5	LPF Cutoff	1.0k~Thru	34-60	table#3	
6	Width	0.5~10.2m	0-37	table#8	
7	Height	0.5~20.2m	0-73	table#8	
8	Depth	0.5~30.2m	0-104	table#8	
9	Wall Vary	0~30	0-30		
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127	table#5	●
11	Rev Delay	0~63	0-63		
12	Density	0~3	0-3		
13	Er/ Rev Balance	E63> R~ E=R ~ E<R63	1-127		
14					
15	Feedback Level	-63~+63	1-127		
16					

## CROSS DELAY

No.*	Parameter	Range	Value	→ P42**	Control
1	L->R Delay	0.1~355.0ms	1-3550		
2	R->L Delay	0.1~355.0ms	1-3550		
3	Feedback Level	-63~+63	1-127		
4	Input Select	L,R,L&R	0-2		
5	High Damp	0.1~1.0	1-10		
6					
7					
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
14	EQ Low Gain	-12~+12dB	52-76		
15	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
16	EQ High Gain	-12~+12dB	52-76		

## DELAY L,C,R

No.*	Parameter	Range	Value	→ P42**	Control
1	Lch Delay	0.1~715.0ms	1-7150		
2	Rch Delay	0.1~715.0ms	1-7150		
3	Cch Delay	0.1~715.0ms	1-7150		
4	Feedback Delay	0.1~715.0ms	1-7150		
5	Feedback Level	-63~+63	1-127		
6	Cch Level	0~127	0-127		
7	High Damp	0.1~1.0	1-10		
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127	table#5	●
11					
12					
13	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
14	EQ Low Gain	-12~+12dB	52-76		
15	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
16	EQ High Gain	-12~+12dB	52-76		

## EARLY REF1,2

No.*	Parameter	Range	Value	→ P42**	Control
1	Type	S-H, L-H, RdM, Rvs, Plt, Spr	0-5		
2	Room Size	0.1~7.0	0-44	table#6	
3	Diffusion	0~10	0-10		
4	Initial Delay	0~63	0-63		
5	Feedback Level	-63~+63	1-127		
6	HPF Cutoff	Thru~8.0kHz	0-52		
7	LPF Cutoff	1.0k~Thru	34-60		
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11	Liveness	0~10	0-10		
12	Density	0~3	0-3		
13	High Damp	0.1~1.0	1-10		
14					
15					
16					

## DELAY L,R

No.*	Parameter	Range	Value	→ P42**	Control
1	Lch Delay	0.1~715.0ms	1-7150		
2	Rch Delay	0.1~715.0ms	1-7150		
3	Feedback Delay 1	0.1~715.0ms	1-7150		
4	Feedback Delay 2	0.1~715.0ms	1-7150		
5	Feedback Level	-63~+63	1-127		
6	High Damp	0.1~1.0	1-10		
7					
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127	table#5	●
11					
12					
13	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
14	EQ Low Gain	-12~+12dB	52-76		
15	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
16	EQ High Gain	-12~+12dB	52-76		

## GATE REVERB,REVERSE GATE

No.*	Parameter	Range	Value	→ P42**	Control
1	Type	TypeA,TypeB	0-1		
2	Room Size	0.1~7.0	0-44	table#6	
3	Diffusion	0~10	0-10		
4	Initial Delay	0~63	0-63		
5	Feedback Level	-63~+63	1-127		
6	HPF Cutoff	Thru~8.0kHz	0-52		
7	LPF Cutoff	1.0k~Thru	34-60		
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11	Liveness	0~10	0-10		
12	Density	0~3	0-3		
13	High Damp	0.1~1.0	1-10		
14					
15					
16					

- ● : Can be controlled by AC1 (Assignable Controller 1)
- No.\* : These numbers correspond to the Parameter Suffix numbers in <Table 1 - 3> (page 27)
- →P42\*\* : Refer to "Effect Data Assign Table"
- ● : Peut être contrôlé par AC1 (Assignable Controller 1)
- No.\* : Ces numéros correspondent au numéros Parameter Suffix dans le <Tableau 1 - 3> (page 27)
- →P42\*\* : Cf. le "Tableau d'assignation de valeur de données d'effet"

## Effect Parameter List / Liste des paramètres d'effet

### KARAOKE1,2,3

No.*	Parameter	Range	Value	→ P42**	Control
1	Delay Time	0-127	0-127	table#7	
2	Feedback Level	-63-+63	1-127		
3	HPF Cutoff	Thru-8.0kHz	0-52		
4	LPF Cutoff	1.0k-Thru	34-60		
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13					
14					
15					
16					

### ROTARY SPEAKER

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	●
2	LFO Depth	0~127	0-127		
3					
4					
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		
11					
12					
13					
14					
15					
16					

### CHORUS1,2,3,4, CELESTE1,2,3,4

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	
2	LFO PM Depth	0-127	0-127		
3	Feedback Level	-63-+63	1-127		
4	Delay Offset	0-127	0-127	table#2	
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13					
14					
15	Input Mode	mono/stereo	0-1		
16					

### TREMOLO

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	●
2	AM Depth	0-127	0-127		
3	PM Depth	0-127	0-127		
4					
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10					
11					
12					
13					
14	LFO Phase Difference	-180-+180deg	4-124	resolution=3deg.	
15	Input Mode	mono/stereo	0-1		
16					

### FLANGER1,2,3

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	
2	LFO Depth	0-127	0-127		
3	Feedback Level	-63-+63	1-127		
4	Delay Offset	0-63	0-63	table#2	
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13					
14	LFO Phase Difference	-180-+180deg	4-124	resolution=3deg.	
15					
16					

### AUTO PAN

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	●
2	LR Depth	0-127	0-127		
3	FR Depth	0-127	0-127		
4	PAN Direction	L<->R,L->R,L<-R,Lturn,Rturn,L/R	0-5		
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10					
11					
12					
13					
14					
15					
16					

### SYMPHONIC

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	
2	LFO Depth	0-127	0-127		
3	Delay Offset	0-127	0-127	table#2	
4					
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		●
11					
12					
13					
14					
15					
16					

### PHASER1,2

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00-39.7Hz	0-127	table#1	
2	LFO Depth	0-127	0-127		
3	Phase Shift Offset	0-127	0-127		
4	Feedback Level	-63-+63	1-127		
5					
6	EQ Low Frequency	50Hz-2.0kHz	8-40	table#3	
7	EQ Low Gain	-12-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz-16.0kHz	28-58	table#3	
9	EQ High Gain	-12-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		
11	Stage	6-10(phaser1) / 3-5(phaser2)	3-10		
12	Diffusion	Mono/Stereo	0-1		
13	LFO Phase Difference	-180-+180deg.	4-124	Phaser2 only	
14					
15					
16					

- ● : Can be controlled by AC1 (Assignable Controller 1)
- No.\* : These numbers correspond to the Parameter Suffix numbers in <Table 1 - 3> (page 27)
- →P42\*\* : Refer to "Effect Data Assign Table"
- ● : Peut être contrôlé par AC1 (Assignable Controller 1)
- No.\* : Ces numéros correspondent au numéros Parameter Suffix dans le <Tableau 1 - 3> (page 27)
- →P42\*\* : Cf. le "Tableau d'assignation de valeur de données d'effet"

## DISTORTION,OVERDRIVE

No.*	Parameter	Range	Value	→ P42**	Control
1	Drive	0-127	0-127		●
2	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
3	EQ Low Gain	-12~-+12dB	52-76		
4	LPF Cutoff	1.0k-Thru	34-60	table#3	
5	Output Level	0-127	0-127		
6					
7	EQ Mid Frequency	500Hz~10.0kHz	28-54	table#3	
8	EQ Mid Gain	-12~-+12dB	52-76		
9	EQ Mid Width	1.0~12.0	10-120		
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		
11	Edge(Clip Curve)	0-127	0-127	mild-sharp	
12					
13					
14					
15					
16					

## AUTO WAH

No.*	Parameter	Range	Value	→ P42**	Control
1	LFO Frequency	0.00~39.7Hz	0-127	table#1	
2	LFO Depth	0~127	0-127		●
3	Cutoff Frequency Offset	0~127	0-127		
4	Resonance	1.0~12.0	10-120		
5					
6	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
7	EQ Low Gain	-12~-+12dB	52-76	table#3	
8	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
9	EQ High Gain	-12~-+12dB	52-76	table#3	
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		
11					
12					
13					
14					
15					
16					

## GUITAR AMP SIMULATOR

No.*	Parameter	Range	Value	→ P42**	Control
1	Drive	0-127	0-127		●
2	AMP Type	Off,Stack,Combo,Tube	0-3		
3	LPF Cutoff	1.0k-Thru	34-60	table#3	
4	Output Level	0-127	0-127		
5					
6					
7					
8					
9					
10	Dry/Wet	D63>W ~ D=W ~ D<W63	1-127		
11	Edge(Clip Curve)	0-127	0-127	mild-sharp	
12					
13					
14					
15					
16					

## 3-BAND EQ

No.*	Parameter	Range	Value	→ P42**	Control
1	EQ Low Gain	-12~-+12dB	52-76		
2	EQ Mid Frequency	500Hz~10.0kHz	28-54	table#3	
3	EQ Mid Gain	-12~-+12dB	52-76		
4	EQ Mid Width	1.0~12.0	10-120		
5	EQ High Gain	-12~-+12dB	52-76		
6	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
7	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
8					
9					
10					
11					
12					
13					
14					
15					
16					

## 2-BAND EQ

No.*	Parameter	Range	Value	→ P42**	Control
1	EQ Low Frequency	50Hz~2.0kHz	8-40	table#3	
2	EQ Low Gain	-12~-+12dB	52-76	table#3	
3	EQ High Frequency	500Hz~16.0kHz	28-58	table#3	
4	EQ High Gain	-12~-+12dB	52-76		
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

- ● : Can be controlled by AC1 (Assignable Controller 1)
- No.\* : These numbers correspond to the Parameter Suffix numbers in <Table 1 - 3> (page 27)
- →P42\*\* : Refer to "Effect Data Assign Table"
- ● : Peut être contrôlé par AC1 (Assignable Controller 1)
- No.\* : Ces numéros correspondent au numéros Parameter Suffix dans le <Tableau 1 - 3> (page 27)
- →P42\*\* : Cf. le "Tableau d'assignation de valeur de données d'effet"

# Effect Data Value Assign Table / Tableau d'assignation de valeur de données d'effet

**Table#1**

LFQ Frequency (Hz)

Data	Value	Data	Value	Data	Value
0	0.00	43	1.81	86	5.38
1	0.04	44	1.85	87	5.55
2	0.08	45	1.89	88	5.72
3	0.13	46	1.94	89	6.06
4	0.17	47	1.98	90	6.39
5	0.21	48	2.02	91	6.73
6	0.25	49	2.06	92	7.07
7	0.29	50	2.10	93	7.40
8	0.34	51	2.15	94	7.74
9	0.38	52	2.19	95	8.08
10	0.42	53	2.23	96	8.41
11	0.46	54	2.27	97	8.75
12	0.51	55	2.31	98	9.08
13	0.55	56	2.36	99	9.42
14	0.59	57	2.40	100	9.76
15	0.63	58	2.44	101	10.10
16	0.67	59	2.48	102	10.80
17	0.72	60	2.52	103	11.40
18	0.76	61	2.57	104	12.10
19	0.80	62	2.61	105	12.80
20	0.84	63	2.65	106	13.50
21	0.88	64	2.69	107	14.10
22	0.93	65	2.78	108	14.80
23	0.97	66	2.86	109	15.50
24	1.01	67	2.94	110	16.20
25	1.05	68	3.03	111	16.80
26	1.09	69	3.11	112	17.50
27	1.14	70	3.20	113	18.20
28	1.18	71	3.28	114	19.50
29	1.22	72	3.37	115	20.90
30	1.26	73	3.45	116	22.20
31	1.30	74	3.53	117	23.60
32	1.35	75	3.62	118	24.90
33	1.39	76	3.70	119	26.20
34	1.43	77	3.87	120	27.60
35	1.47	78	4.04	121	28.90
36	1.51	79	4.21	122	30.30
37	1.56	80	4.37	123	31.60
38	1.60	81	4.54	124	33.00
39	1.64	82	4.71	125	34.30
40	1.68	83	4.88	126	37.00
41	1.72	84	5.05	127	39.70
42	1.77	85	5.22		

**Table#2**

Modulation Delay Offset (ms)

Data	Value	Data	Value	Data	Value
0	0.0	43	4.3	86	8.6
1	0.1	44	4.4	87	8.7
2	0.2	45	4.5	88	8.8
3	0.3	46	4.6	89	8.9
4	0.4	47	4.7	90	9.0
5	0.5	48	4.8	91	9.1
6	0.6	49	4.9	92	9.2
7	0.7	50	5.0	93	9.3
8	0.8	51	5.1	94	9.4
9	0.9	52	5.2	95	9.5
10	1.0	53	5.3	96	9.6
11	1.1	54	5.4	97	9.7
12	1.2	55	5.5	98	9.8
13	1.3	56	5.6	99	9.9
14	1.4	57	5.7	100	10.0
15	1.5	58	5.8	101	11.1
16	1.6	59	5.9	102	12.2
17	1.7	60	6.0	103	13.3
18	1.8	61	6.1	104	14.4
19	1.9	62	6.2	105	15.5
20	2.0	63	6.3	106	17.1
21	2.1	64	6.4	107	18.6
22	2.2	65	6.5	108	20.2
23	2.3	66	6.6	109	21.8
24	2.4	67	6.7	110	23.3
25	2.5	68	6.8	111	24.9
26	2.6	69	6.9	112	26.5
27	2.7	70	7.0	113	28.0
28	2.8	71	7.1	114	29.6
29	2.9	72	7.2	115	31.2
30	3.0	73	7.3	116	32.8
31	3.1	74	7.4	117	34.3
32	3.2	75	7.5	118	35.9
33	3.3	76	7.6	119	37.5
34	3.4	77	7.7	120	39.0
35	3.5	78	7.8	121	40.6
36	3.6	79	7.9	122	42.2
37	3.7	80	8.0	123	43.7
38	3.8	81	8.1	124	45.3
39	3.9	82	8.2	125	46.9
40	4.0	83	8.3	126	48.4
41	4.1	84	8.4	127	50.0
42	4.2	85	8.5		

**Table#3**

EQ Frequency (Hz)

Data	Value	Data	Value	Data	Value
0	THRU(20)	43	43	2.8k	
1	0.1	22	44	3.2k	
2	0.2	25	45	3.6k	
3	0.3	28	46	4.0k	
4	0.4	32	47	4.5k	
5	0.5	36	48	5.0k	
6	0.6	40	49	5.6k	
7	0.7	45	50	6.3k	
8	0.8	50	51	7.0k	
9	0.9	56	52	8.0k	
10	1.0	63	53	9.0k	
11	1.1	70	54	10.0k	
12	1.2	80	55	11.0k	
13	1.3	90	56	12.0k	
14	1.4	100	57	14.0k	
15	1.5	110	58	16.0k	
16	1.6	125	59	18.0k	
17	1.7	140	60	THRU(20k)	

**Table#4**

Reverb Time (ms)

Data	Value	Data	Value
0	0.3	43	4.6
1	0.4	44	4.7
2	0.5	45	4.8
3	0.6	46	4.9
4	0.7	47	5.0
5	0.8	48	5.5
6	0.9	49	6.0
7	1.0	50	6.5
8	1.1	51	7.0
9	1.2	52	7.5
10	1.3	53	8.0
11	1.4	54	8.5
12	1.5	55	9.0
13	1.6	56	9.5
14	1.7	57	10.0
15	1.8	58	11.0
16	1.9	59	12.0
17	2.0	60	13.0
18	2.1	61	14.0
19	2.2	62	15.0
20	2.3	63	16.0
21	2.4	64	17.0
22	2.5	65	18.0
23	2.6	66	19.0
24	2.7	67	20.0
25	2.8	68	25.0
26	2.9	69	30.0

# Specifications

## **Tone Generation Method**

AWM2 (Advanced Wave Memory 2)

## **Maximum Simultaneous Polyphony**

32-note (last-note priority)

## **Multitimbral Capacity**

16-Part (DVA : Dynamic Voice Allocation)

## **Internal Voice**

### **Normal Voices**

Total .....	676
XG mode .....	480
TG300B mode .....	579

### **Drum Voices (Sets)**

Total .....	21
XG mode .....	11
TG300B mode .....	10

## **Effects**

Reverb (11 Types), Chorus (11 Types), Variation (42 Types)

## **Board's Port**

WaveBlaster expansion port (26 pins)

## **Power Consumption**

2 W

## **Dimensions (W x D x H)**

139 x 89 x 15 mm (5-1/2" x 3-1/2" x 5/8")

## **Weight**

65 g (2.3 oz)

# Spécifications technique

## **Méthode de génération de sons**

AWM2 (Advanced Wave Memory 2)

## **Polyphonie simultanée maximale**

32-notes (priorité à la dernière note)

## **Capacité multitimbre**

16 Partitions (DVA: Allocation de voix dynamique)

## **Voix internes**

### **Voix "Normal"**

Total .....	676
Mode XG .....	480
Mode TG300B .....	579

### **Drum Voices (Sets)**

Total .....	21
Mode XG .....	11
Mode TG300B .....	10

## **Effets**

Reverb (11 types), Chorus (11 types), Variation (42 types)

## **Port de carte**

Port d'extension WaveBlaster (26 broches)

## **Consommation électrique**

2 W

## **Dimensions (l x h x p)**

139 x 89 x 15 mm

## **Poids**

65 g (2.3 oz)

# Precautions

- Do not expose the daughter board to direct sunlight, excessive humidity, high temperatures, excessive dust or strong vibrations.
- Before handling the daughter board, be sure to touch a metal surface to discharge any static electricity which may be in your body.
- When holding the daughter board, do not touch the inside area of the circuit board or apply excessive pressure to the board, and be sure to protect the board from contact with water or other liquids.
- Before installing the daughter board onto a sound card, unplug the power connector of your computer.

- Before connecting the computer to other devices, turn off the power switches of all devices.
- Yamaha is not responsible for loss of data through computer malfunctions or operator actions.
- The daughter board contains no user-serviceable parts, so never touch the inside area of the circuit board or tamper with the electronic circuitry in any way. Doing so may result in electrical shock or damage to the daughter board.

**YAMAHA CANNOT BE HELD RESPONSIBLE  
FOR DAMAGE CAUSED BY IMPROPER  
CARE AND USE OF THE DAUGHTER BOARD.**

- \* Windows® and MS-DOS are registered trademarks of Microsoft® Corporation.
- \* SoundBlaster™ and WaveBlaster™ are trademarks of Creative Labs, Inc.
- \* Company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies and are hereby acknowledged.

## FCC INFORMATION (U.S.A.)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures: Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA 90620

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

## CANADA

THIS DIGITAL APPARATUS DOES NOT EXCEED THE "CLASS B" LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATION OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

LE PRESENT APPAREIL NUMÉRIQUE N'EMET PAS DE BRUITS RADIOÉLECTRIQUES DÉPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMÉRIQUES DE LA "CLASSE B" PRÉSCRITES DANS LE RÈGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE ÉDICTÉ PAR LE MINISTÈRE DES COMMUNICATIONS DU CANADA.

\* This applies only to products distributed by YAMAHA CANADA MUSIC LTD.

For details of products, please contact your nearest Yamaha or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

## NORTH AMERICA

### CANADA

#### Yamaha Canada Music Ltd.

135 Milner Avenue, Scarborough, Ontario,  
M1S 3R1, Canada

Tel: 416-298-1311

### U.S.A.

#### Yamaha Corporation of America

6600 Orangethorpe Ave., Buena Park, Calif. 90620,  
U.S.A.

Tel: 714-522-9011

## MIDDLE & SOUTH AMERICA

### MEXICO

#### Yamaha De Mexico S.A. De C.V.

##### Departamento de ventas

Javier Rojo Gomez No.1149, Col. Gpe Del  
Moral, Deleg. Iztapalapa, 09300 Mexico, D.F.

Tel: 686-00-33

### BRASIL

#### Yamaha Musical Do Brasil LTDA.

Ave. Reboucas 2636, São Paulo, Brasil

Tel: 011-853-1377

### PANAMA

#### Yamaha De Panama S.A.

Edificio Interseco, Calle Elvira Mendez no.10,  
Piso 3, Oficina #105, Ciudad de Panama, Panama

Tel: 507-69-5311

### OTHER LATIN AMERICAN COUNTRIES AND CARIBBEAN COUNTRIES

#### Yamaha Music Latin America Corp.

6101 Blue Lagoon Drive, Miami, Florida 33126,  
U.S.A.

Tel: 305-261-4111

## EUROPE

### THE UNITED KINGDOM

#### Yamaha-Kemble Music (U.K.) Ltd.

Sherbourne Drive, Tilbrook, Milton Keynes,  
MK7 8BL, England

Tel: 01908-366700

### IRELAND

#### Danfay Ltd.

61D, Sallynoggin Road, Dun Laoghaire, Co. Dublin

Tel: 01-2859177

### GERMANY/SWITZERLAND

#### Yamaha Europa GmbH.

Siemensstraße 22-34, 25462 Rellingen, F.R. of  
Germany

Tel: 04101-3030

### AUSTRIA

#### Yamaha Music Austria

Schleiergasse 20, A-1100 Wien Austria

Tel: 0222-60203900

### THE NETHERLANDS

#### Yamaha Music Nederland

Kanaalweg 18G, 3526KL, Utrecht, The Netherlands

Tel: 030-2828411

### BELGIUM

#### Yamaha Music Belgium

Keiberg Imperiastraat 8, 1930 Zaventem, Belgium

Tel: 02-7258220

### FRANCE

#### Yamaha Musique France,

##### Division Professionnelle

BP 70-77312 Marne-la-Valée Cedex 2, France

Tel: 01-64-61-4000

## ITALY

#### Yamaha Musica Italia S.P.A.,

##### Combo Division

Viale Italia 88, 20020 Lainate (Milano), Italy

Tel: 02-935-771

## SPAIN

#### Yamaha-Hazen Electronica Musical, S.A.

Jorge Juan 30, 28001, Madrid, Spain

Tel: 91-577-7270

## PORTUGAL

#### Valentim de Carvalho CI SA

Estrada de Porto Salvo, Paço de Arcos 2780 Oeiras,  
Portugal

Tel: 01-443-3398/4030/1823

## GREECE

#### Philippe Nakas S.A.

Navarinou Street 13, P.Code 10680, Athens, Greece

Tel: 01-364-7111

## SWEDEN

#### Yamaha Scandinavia AB

J. A. Wettergrens Gata 1

Box 30053

S-400 43 Göteborg, Sweden

Tel: 031 89 34 00

## DENMARK

#### YS Copenhagen Liaison Office

Generatorvej 8B

DK-2730 Herlev, Denmark

Tel: 44 92 49 00

## FINLAND

#### Warner Music Finland OY/Fazer Music

Aleksanterinkatu 11, P.O. Box 260

SF-00101 Helsinki, Finland

Tel: 0435 011

## NORWAY

#### Narud Yamaha AS

Grini Næringspark 17

N-1345 Østerås, Norway

Tel: 67 14 47 90

## ICELAND

#### Skifan HF

Skeifan 17 P.O. Box 8120

IS-128 Reykjavik, Iceland

Tel: 525 5000

## OTHER EUROPEAN COUNTRIES

#### Yamaha Europa GmbH.

Siemensstraße 22-34, 25462 Rellingen, F.R. of

Germany

Tel: 04101-3030

## AFRICA

#### Yamaha Corporation,

##### International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430

Tel: 053-460-2312

## MIDDLE EAST

## TURKEY/CYPRUS

#### Yamaha Europa GmbH.

Siemensstraße 22-34, 25462 Rellingen,

F.R. of Germany

Tel: 04101-3030

## OTHER COUNTRIES

#### Yamaha Corporation,

##### International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430

Tel: 053-460-2312

## ASIA

### HONG KONG

#### Tom Lee Music Co., Ltd.

11/F., Silvercord Tower 1, 30 Canton Road,

Tsimshatsui, Kowloon, Hong Kong

Tel: 730-1098

### INDONESIA

#### PT. Yamaha Music Indonesia (Distributor)

##### PT. Nusantik

Gedung Yamaha Music Center, Jalan Jend. Gatot Subroto Kav. 4, Jakarta 12930, Indonesia

Tel: 21-520-2577

### KOREA

#### Cosmos Corporation

#131-31, Neung-Dong, Sungdong-Ku, Seoul

Korea

Tel: 02-466-0021~5

### MALAYSIA

#### Yamaha Music Malaysia, Sdn., Bhd.

16-28, Jalan SS 2/72, Petaling Jaya, Selangor,

Malaysia

Tel: 3-717-8977

### PHILIPPINES

#### Yupango Music Corporation

339 Gil J. Puyat Avenue, P.O. Box 885 MCPO,

Makati, Metro Manila, Philippines

Tel: 819-7551

### SINGAPORE

#### Yamaha Music Asia Pte., Ltd.

Blk 17A Toa Payoh #01-190 Lorong 7

Singapore 1231

Tel: 354-0133

### TAIWAN

#### Kung Hsue She Trading Co., Ltd.

No. 322, Section 1, Fu Hsing S. Road,

Taipei 106, Taiwan. R.O.C.

Tel: 02-709-1266

### THAILAND

#### Siam Music Yamaha Co., Ltd.

86 Phrompracha Building, Rama I Road,

Patumwan, Bangkok 10330, Thailand

Tel: 2-215-3443

### THE PEOPLE'S REPUBLIC OF CHINA AND OTHER ASIAN COUNTRIES

#### Yamaha Corporation,

##### International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430

Tel: 053-460-2317

## OCEANIA

### AUSTRALIA

#### Yamaha Music Australia Pty. Ltd.

17-33 Market Street, South Melbourne, Vic. 3205,

Australia

Tel: 3-699-2388

### NEW ZEALAND

#### Music Houses of N.Z. Ltd.

146/148 Captain Springs Road, Te Papapa,

Auckland, New Zealand

Tel: 9-634-0099

### COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN

#### Yamaha Corporation,

##### International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430

Tel: 053-460-2317

## HEAD OFFICE Yamaha Corporation, Electronic Musical Instrument Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430

Tel: 053-460-2445

SY11