

MAIN LOGIC BOARD JUMPERS

Jumpers are shown for reference. They should not have to be changed for normal user operation. Default (factory) jumper settings are listed in "Configuration Settings."

The following table lists possible jumper settings for your computer.

Feature	Description	Jumper Setting
Monitor Type	Software selection by Setup*	E11 and E12 - installed
	Color Monochrome	E10 and E11 - installed E10, E11 and E12 - no connection
BIOS ROM Type 256KB	Reserved for factory use*	E22 and E23 - no connection E24 and E25 - installed
IDE IOCHRDY	Enabled* Disabled	E1 and E2 - installed E1 and E2 - no connection
IDE DIAG	Normal operation* Diagnostic mode	E3 and E4 - no connection E3 and E4 - installed
I/O Recovery	Enabled* Disabled	E8 and E9 - installed E8 and E9 - no connection
System Timing	Reserved for factory use*	E14 and E15 - installed E17 and E18 - installed E20 and E21 - installed
*Indicates factory setting.		

Tandy 4016DX - Jumper Settings		
Feature	Description	Jumper Setting
Monitor Type	Software selection by Setup *	E11 and E12 installed
	Color	E10 and E11 installed
	Monochrome	E10, E11 and E12 no connection

BIOS ROM Type 256Kb=32KB	Reserved for factory use*	E22 and E23 no connection E24 and E25 installed
IDE IOCHRDY	Enabled*	E1 and E2 installed

Feature	Description	Jumper Setting
IDE DIAG	Disabled	E1 and E2 no connection
	Normal operation*	E3 and E4 no connection
	Diagnostic mode	E3 and E4 installed
I/O Recovery	Enabled*	E8 and E9 installed
	Disabled	E8 and E9 no connection
System Timing	Reserved for factory use*	E14 and E15 installed E17 and E18 installed E20 and E21 installed

*Indicates factory setting.