

If you suspect that your CB is not working as it should, refer to the following chart to see if you can eliminate the problem.

If the problem persists, take the CB to your local Radio Shack store. DO NOT attempt repairs or adjustments yourself.

Symptom	Remedy
Insufficient charged condition	Replace or recharge batteries.
Hard to transmit	Be sure to fully press PUSH TO TALK and to fully extend the antenna.
Hard to receive	Adjust SQUELCH.

(smm/all-06/23/94)