



Part Number: 27L8075

ThinkPad 600E

Quick Reference and Service Information

Your name: _____

Company name: _____

Model number: _____

Serial number: _____



Company or reseller service: _____

IBM service Web site: _____

IBM service number: _____

Notes:

Locations

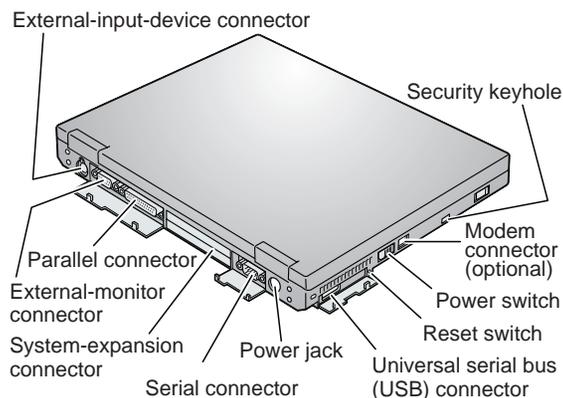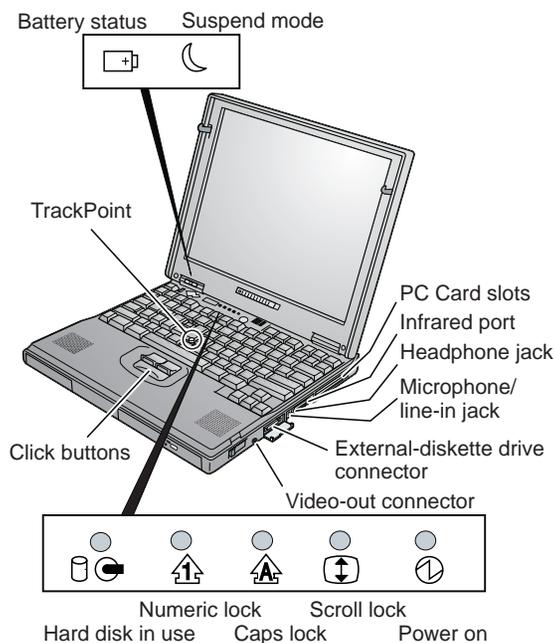

Attaching Options

You want to...	You need to...
The storage device is in the UltralimBay	
Swap the device in the bay	Enter your computer into suspend mode or power off your computer; then swap the device.
Attach the diskette drive externally	Power off your computer; then attach the diskette drive.
Note: For the details, see the <i>User's Reference</i> .	

Function Keys

Fn +	Result
F2	Show or hide the window for the battery power status.
F3	Enter standby mode.
F4	Enter suspend mode.
F7	Change the display output location.
F8	Switch the screen size to the full screen mode.
F11	Change the power mode.
F12	Enter hibernation mode.
PgUp	Increase the volume.
PgDn	Decrease the volume.
Back Space	Turn off the sound. Note: To turn on the sound, press Fn + PgUp or Fn + PgDn .

Getting Service

Always read the “Solving Computer Problems” chapter of your *User's Reference* before calling IBM.

During the warranty period, you can get help and information from International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- The exact wording of any error messages
- Hardware and software configuration information
- A description of the problem
- Information and serial numbers of any options installed on your system

International Warranty Service Information

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New Zealand, and Hong Kong:	61-2-9354-4171
Canada, Latin America, and the U.S.:	1-800-497-7426
Europe, Middle East, and Africa:	44-1475-893638
Japan, Korea, China (except Hong Kong), and Taiwan:	81-462-73-7598

Help through a ThinkPad Web Site

The latest information about ThinkPad computers:

➔ <http://www.ibm.com/thinkpad>

Technical support information:

➔ <http://www.ibm.com/support>

ThinkPad Configuration Program

You can customize your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click on **Start**, move the cursor to **Settings**, and click on **Control Panel**; then double-click on the **ThinkPad Configuration** icon.



For more information, click on the **Help** button



Battery Status

You can monitor the battery status with the Fuel-Gauge program. To start the Fuel-Gauge program, click on **Start** and move the cursor to **Programs** and **ThinkPad**; then click on **Fuel-Gauge**.

If you are using the secondary battery, you can also see its status with the Fuel-Gauge program.

For Further Information

You can find the following information in your ThinkPad user's manuals.

User's Reference

- Getting familiar with your computer
- Extending the features of your computer
- Protecting your computer
- Solving computer problems
- Features and specifications

Online User's Guide

- Using your computer outside your home country
- Using audio, modem, and DVD features
- Protecting your computer
- Using your computer with a battery pack
- Using your computer with a PC Card
- Getting service
- Resolving system resource conflicts
- Frequently asked questions
- Installing software
- Using system management
- Using PS2 commands
- Handling tips

Note: To start the *Online User's Guide*, click on **Start** and move the cursor to **Programs** and **ThinkPad 600**; then click on *ThinkPad 600 User's Guide*.