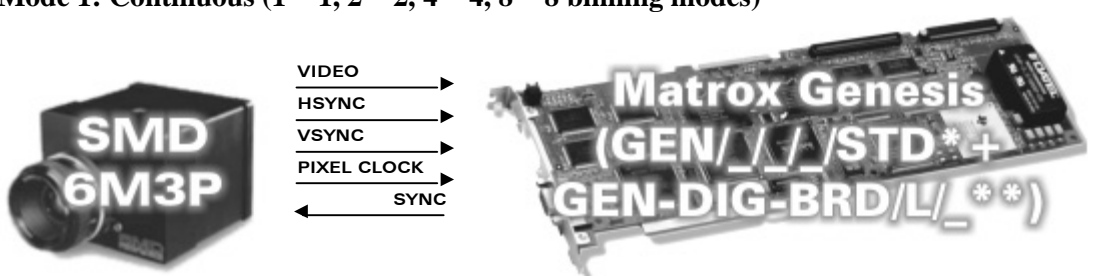
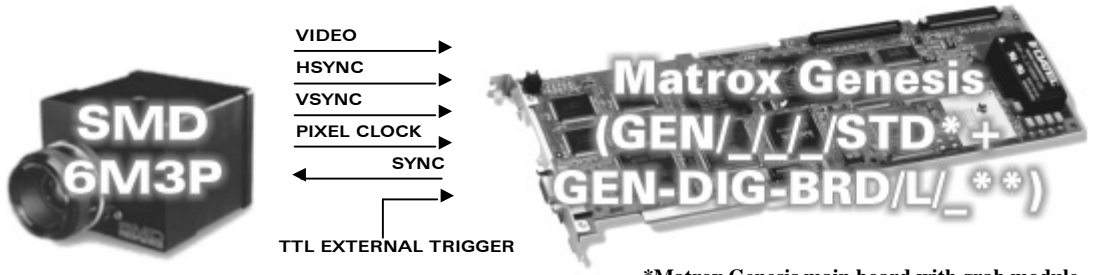


# Application Note:

## Interfacing non-standard cameras to Matrox Genesis

SMD 6M3P

May 9, 2000

<b>Camera Descriptions</b>	<ul style="list-style-type: none"> <li>• 3072 × 2048 × 12-bit @ up to 2.75 fps</li> <li>• Single tap LVDS digital video output.</li> <li>• Progressive scan.</li> <li>• External or internal exposure control.</li> <li>• Internal and external synchronization.</li> <li>• Maximum frame rate: 12.5 fps (8 × 8 binning mode).</li> <li>• Pixel clock rate: up to 20 MHz.</li> </ul>
<b>Interface modes</b>	<ul style="list-style-type: none"> <li>• Continuous, Asynchronous reset (1 × 1, 2 × 2, 4 × 4, 8 × 8 binning modes)</li> </ul>
<b>Camera Interface Briefs</b>	<p><b>Mode 1: Continuous (1 × 1, 2 × 2, 4 × 4, 8 × 8 binning modes)</b></p> <div data-bbox="406 693 1494 966">  <p>The diagram shows an SMD 6M3P camera on the left and a Matrox Genesis main board with a grab module on the right. Five signal lines connect them: VIDEO (out), HSYNC (in), VSYNC (in), PIXEL CLOCK (in), and SYNC (out). The board is labeled 'Matrox Genesis (GEN/_/_/_/STD*+ GEN-DIG-BRD/L/_**)'.</p> </div> <ul style="list-style-type: none"> <li>• 3072 × 2048 × 12-bit @ 1 fps.</li> <li>• Single tap LVDS digital video.</li> <li>• Progressive scan.</li> <li>• Continuous video.</li> <li>• Matrox Genesis sending periodic EXPOSURE1 (SYNC) signal to camera: EXPOSURE1 (SYNC) signal initiates exposure and controls exposure time.</li> <li>• Matrox Genesis receiving HSYNC, VSYNC, PIXEL CLOCK (PCLK) and video signals from camera.</li> <li>• DCF used: <a href="#">G6M3PC1.DCF</a> (1 × 1 binning mode: 3072 × 2048 @ 20 MHz)</li> <li>• DCF used: <a href="#">G6M3PC2.DCF</a> (2 × 2 binning mode: 1535 × 1024 @ 10 MHz)</li> <li>• DCF used: <a href="#">G6M3PC4.DCF</a> (4 × 4 binning mode: 766 × 511 @ 5 MHz)</li> <li>• DCF used: <a href="#">G6M3PC8.DCF</a> (8 × 8 binning mode: 383 × 255 @ 2.5 MHz)</li> </ul> <p><b>Mode 2: Asynchronous reset (1 × 1, 2 × 2, 4 × 4, 8 × 8 binning modes)</b></p> <div data-bbox="406 1491 1494 1764">  <p>The diagram shows the same SMD 6M3P camera and Matrox Genesis main board. Six signal lines connect them: VIDEO (out), HSYNC (in), VSYNC (in), PIXEL CLOCK (in), SYNC (out), and a TTL EXTERNAL TRIGGER line (in) connected to the camera's trigger input.</p> </div> <ul style="list-style-type: none"> <li>• 3072 × 2048 × 12-bit @ 1 fps.</li> <li>• Single tap LVDS digital video.</li> <li>• Matrox Genesis receiving TTL external trigger signal.</li> </ul> <p>continued</p>

# Application Note:

## Interfacing non-standard cameras to Matrox Genesis

SMD 6M3P

May 9, 2000

<b>Camera Interface Briefs (continued)</b>	<ul style="list-style-type: none"> <li>Matrox Genesis sending EXPOSURE1 (SYNC) signal to camera: EXPOSURE1 (SYNC) signal initiates exposure and controls exposure time.</li> <li>Matrox Genesis receiving HSYNC, VSYNC, PIXEL CLOCK (PCLK) and video signals from camera.</li> <li>DCF used: <a href="#">G6M3PA1.DCF</a> (1 × 1 binning mode: 3072 × 2048 @ 20 MHz)</li> <li>DCF used: <a href="#">G6M3PA2.DCF</a> (2 × 2 binning mode: 1535 × 1024 @ 10 MHz)</li> <li>DCF used: <a href="#">G6M3PA4.DCF</a> (4 × 4 binning mode: 766 × 511 @ 5 MHz)</li> <li>DCF used: <a href="#">G6M3PA8.DCF</a> (8 × 8 binning mode: 383 × 255 @ 2.5 MHz)</li> </ul>														
<b>Camera Interface Details</b>	<p><b>Mode 1: Continuous (1 × 1, 2 × 2, 4 × 4, 8 × 8 binning modes)</b></p> <ul style="list-style-type: none"> <li>Matrox Genesis sends the periodic EXPOSURE1 (SYNC) signal to the camera to initiate and control the exposure time (integration).</li> <li><b>Frame rate:</b> The frame rate is determined by the frequency of the periodic EXPOSURE1 (SYNC) signal. Default frame rate for the DCFs is 1 frame per second. In order to change the frame rate, adjust the total exposure period (active and inactive portions) of Timer1 in the Exposure Settings menu tab in Matrox Intellicam. For a list of maximum possible frame rates per binning mode, refer to the camera specifications.</li> <li><b>Exposure time:</b> The active width of the EXPOSURE1 (SYNC) signal equals the exposure time. Exposure is initiated on the rising edge and halted on the falling edge of the EXPOSURE1 (SYNC) signal. The default exposure time for the DCFs is equal to <b>300 ms</b>. In order to change the exposure time, adjust the active duration of Timer1 in the Exposure Settings menu tab in Matrox Intellicam. Consult the Matrox Intellicam User Guide for more information.</li> <li><b>Camera settings (configuration):</b> As outlined in the camera specifications, camera configurations may be modified through the manipulation of control registers. All registers are accessed via an RS-232 serial interface. For this camera interface, Integrate Mode and Binning Mode control registers must be set as follows:</li> </ul> <table> <tr> <th>Binning Mode</th><th>Setting</th></tr> <tr> <td>1 × 1</td><td>00</td></tr> <tr> <td>2 × 2</td><td>01</td></tr> <tr> <td>4 × 4</td><td>10</td></tr> <tr> <td>8 × 8</td><td>11</td></tr> </table> <table> <tr> <th>Integrate Mode</th><th>Setting</th></tr> <tr> <td>External</td><td>1</td></tr> </table> <p><b>Mode 2: Asynchronous reset (1 × 1, 2 × 2, 4 × 4, 8 × 8 binning modes)</b></p> <ul style="list-style-type: none"> <li>Once it has received the external trigger signal, Matrox Genesis sends the EXPOSURE1 (SYNC) signal to the camera to initiate and control the exposure time (integration).</li> <li><b>Frame rate:</b> The frame rate is determined by the frequency of the external trigger signal.</li> <li><b>Exposure time:</b> The pulse width of the EXPOSURE1 (SYNC) signal equals the exposure time. Exposure is initiated on the rising edge and halted on the falling edge of the EXPOSURE1 (SYNC) signal. The default exposure time for the DCF is equal to <b>300 ms</b>. In order to change the width and deployment time of EXPOSURE1 (SYNC), adjust the pulse portion of Timer1 in the Exposure Settings menu tab in Matrox Intellicam. Consult the Matrox Intellicam User Guide for more information.</li> <li><b>Camera settings (configuration):</b> Are as in <i>Mode 1: Continuous</i>.</li> </ul>	Binning Mode	Setting	1 × 1	00	2 × 2	01	4 × 4	10	8 × 8	11	Integrate Mode	Setting	External	1
Binning Mode	Setting														
1 × 1	00														
2 × 2	01														
4 × 4	10														
8 × 8	11														
Integrate Mode	Setting														
External	1														

# Application Note:

## Interfacing non-standard cameras to Matrox Genesis

SMD 6M3P

May 9, 2000

<b>Cabling Requirements</b>	<b>Mode 1: Continuous (1 ´ 1, 2 ´ 2, 4 ´ 4, 8 ´ 8 binning modes)</b>			
	<ul style="list-style-type: none"> <li>DBHD100-TO-OPEN cable and GEN/DIG/BRD/L/_ board required for digital data, synchronization and control signals.</li> <li>Connections between the 60-pin connector of the camera and the 100-pin connector of the GEN-DIG-BRD/L/_ are as follows:</li> </ul>			
	<b>GEN-DIG-BRD/L/_ (100-pin connector)</b>		<b>SMD 6M3P (60-pin connector)</b>	
	<i>Pin name</i>	<i>Pin no.</i>	<i>Pin name</i>	<i>Pin no.</i>
	DATA, INPUT, 0+	01	← DA0	01
	DATA, INPUT, 0-	02	← DA0*	02
	DATA, INPUT, 1+	03	← DA1	03
	DATA, INPUT, 1-	04	← DA1*	04
	DATA, INPUT, 2+	05	← DA2	05
	DATA, INPUT, 2-	06	← DA2*	06
	DATA, INPUT, 3+	07	← DA3	07
	DATA, INPUT, 3-	08	← DA3*	08
	DATA, INPUT, 4+	09	← DA4	09
	DATA, INPUT, 4-	10	← DA4*	10
	DATA, INPUT, 5+	11	← DA5	11
	DATA, INPUT, 5-	12	← DA5*	12
	DATA, INPUT, 6+	13	← DA6	13
	DATA, INPUT, 6-	14	← DA6*	14
	DATA, INPUT, 7+	15	← DA7	15
	DATA, INPUT, 7-	16	← DA7*	16
	DATA, INPUT, 8+	17	← DA8	17
	DATA, INPUT, 8-	18	← DA8*	18
	DATA, INPUT, 9+	19	← DA9	19
	DATA, INPUT, 9-	20	← DA9*	20
	DATA, INPUT, 10+	21	← DA10	21
	DATA, INPUT, 10-	22	← DA10*	22
	DATA, INPUT, 11+	23	← DA11	23
	DATA, INPUT, 11-	24	← DA11*	24
	GROUND	37	-- GND	45
	GROUND	50	-- GND	46
	VSYNC, INPUT, +	35	← VSYNC	56
	VSYNC, INPUT, -	36	← VSYNC*	55
	HSYNC, INPUT, +	33	← HSYNC	58
	HSYNC, INPUT, -	34	← HSYNC*	57
	CLOCK, INPUT, +	39	← PCLK	60
	CLOCK, INPUT, -	40	← PCLK*	59
	EXPOSURE1, OUTPUT, TTL	87	→ SYNC	Camera Rear

# Application Note:

## Interfacing non-standard cameras to Matrox Genesis

SMD 6M3P

May 9, 2000

<b>Cabling Requirements (continuous)</b>	<p><b>Mode 2: Asynchronous reset (1 ´ 1, 2 ´ 2, 4 ´ 4, 8 ´ 8 binning modes)</b></p> <ul style="list-style-type: none"> <li>• DBHD100-TO-OPEN and IMG-7W2-TO-5BNC cables, and GEN/DIG/BRD/L/_ board required for external trigger, digital data, synchronization, and control signals.</li> <li>• TTL external trigger source should be connected to the TTL trigger input of the IMG-7W2-TO-5BNC cable.</li> <li>• Connections between the 60-pin connector of the camera and the 100-pin connector of the GEN-DIG-BRD/L/_ are as in <i>Mode 1: Continuous</i>.</li> </ul>
--	--

The DCF(s) mentioned in this application note can be found on the MIL and Native Library CD, or our FTP site ([ftp.matrox.com](ftp:matrox.com)). The information furnished by Matrox Electronics System, Ltd. is believed to be accurate and reliable. Please verify all interface connections with camera documentation or manual. Contact your local sales representative or Matrox Sales office or Matrox Imaging Applications at 514-822-6061 for assistance.

**Corporate headquarters:    Offices:**

Canada and U.S.A.	Europe, Middle East & Africa	France	Germany	Asia Pacific
Matrox Electronic Systems Ltd. 1055 St. Regis Blvd. Dorval, Quebec H9P 2T4 Canada Tel: (514) 685-2630 Fax: (514) 822-6273	Matrox VITE Limited Sefton Park Stoke Poges Buckinghamshire SL2 4JS U.K. Tel: 01753 665500 Fax: 01753 665599	Matrox France SARL 2, rue de la Couture, Silic 225 94528 Rungis Cedex Tel: (0) 1 45-60-62-00 Fax: (0) 1 45-60-62-05	Matrox Electronic Systems GmbH Inselkammerstr. 8 D-82008 Unterhaching Germany Tel: 089/614 4740 Fax: 089/614 9743	Matrox Asia Ltd. Rm. 1901, 19/F, Workington Tower 78 Bonham Strand E. Sheung Wan Hong Kong Tel: 852.2877.5387 Fax: 852.2537.9530

