
Chapter 8. Service Information

This section contains the general checkout procedures, related service procedures, symptom-to-FRU indexes, and removal and replacement procedures for the 7563 Passive Backplane System.

Note: This manual and the diagnostic tests are intended to test IBM products only. Non-IBM products can give false errors and invalid system responses during testing. If you remove a non-IBM device and the symptom goes away, the problem is with the device you removed.

Configuration/Setup Utility Program

Before You Begin

The system you are servicing could have a customized configuration (settings other than default settings). Running the Configuration/Setup Utility program can alter those settings. Make a list of the current configuration settings and verify that the same settings are in place when service has been completed.

The Configuration/Setup Utility program is stored in the permanent memory. This program includes settings for the following:

- Devices and I/O Ports
- Date and time
- Security
- Start options
- Advanced setup
- ISA-legacy resources

To run the Configuration/Setup Utility program,

1. Turn off the computer and wait a few seconds until all in-use lights go off.
2. Turn on the computer.
3. When the Configuration/Setup Utility prompt appears on the screen, press F1.
4. When the Configuration/Setup Utility menu appears, follow the instructions on the screen.
5. When finished, select **System Summary** to verify that all configuration changes have been accepted.

Downloading System Support Programs and BIOS Updates

IBM maintains an Internet location with the latest information and programs for the 7563 Passive Backplane System. The file repository contains device drivers and other system support programs, as well as BIOS updates and update information. The home page is:

<http://wwprodsoln.bocaratton.ibm.com/>

To update BIOS after downloading the update files, go to "Flash (BIOS/VPD) Update Procedure."

Vital Product Data

Each computer has a unique vital product data (VPD) code stored in the nonvolatile memory on the SBC. After you replace the SBC, the VPD must be updated. To update the VPD, see "Flash (BIOS/VPD) Update Procedure."

Flash (BIOS/VPD) Update Procedure

Attention

Refer to the information label located inside the system unit cover for any model-specific information.

You need to update the VPD only if the SBC is changed. Otherwise, the Flash update program retains the VPD. To update the VPD, do the following.

1. Turn off the computer.
2. Insert the Flash update diskette into drive A.
3. Turn on the computer.
4. When the Update Utility appears, select your country/keyboard, and then press Enter.
5. If the system-unit serial number was previously recorded, the number is displayed with an option to update it. Press **Y** to update the serial number.
6. Type the 7-digit serial number of the system unit you are servicing, and then press Enter.
7. Follow the instructions on the screen to complete the Flash (BIOS/VPD) update procedure.

Diagnostic and Test Tools

The following tools are available to help identify and resolve hardware-related problems:

- Power-on self-test (POST)
 - POST Beep Patterns
 - Error Code Format
- Error messages
- QAPLus/PRO Diagnostic Program.

Power-On Self-Test (POST)

Each time you turn on the computer, it performs a series of tests that check the operation of the computer and some options. This series of tests is called the *power-on self-test*, or *POST*. POST does the following:

- Checks some basic SBC operations
- Checks the memory operation
- Starts the video operation
- Verifies that the diskette drive is working
- Verifies that the hard disk drive is working

If POST finishes without detecting any problems, you hear a single beep and the first screen of your operating system or application program appears.

If POST detects a problem, an error message appears on your screen. A single problem can cause several error messages to appear. When you correct the cause of the first error message, the other error messages probably will not appear on the screen the next time you turn on the computer.

Beep Codes: POST generates patterns of beeps to indicate successful completion of POST or to indicate an error.


A single beep and text appears on the display to indicate the computer completed POST successfully. Any other condition (more than one beep or no beep) indicates the computer detected an error during POST.

POST Error Code Format: This section provides an explanation of the encoded non-SCSI and SCSI POST error codes. Error messages are displayed on the screen as 3, 4, 5, 8, 12, or 13 digits. An “X” in an error message can be any number or letter. The shorter POST errors are highlighted in “Symptom-to-FRU Index” on page 8-17. Some digits will represent different information for SCSI errors versus non-SCSI errors.

The following figure shows which digits display the shorter POST errors. The figure also defines additional SCSI information.

Notes:

1. Non-IBM device error codes and documentation supersede this list.
2. Duplicate SCSI ID settings will cause misleading error symptoms or messages.

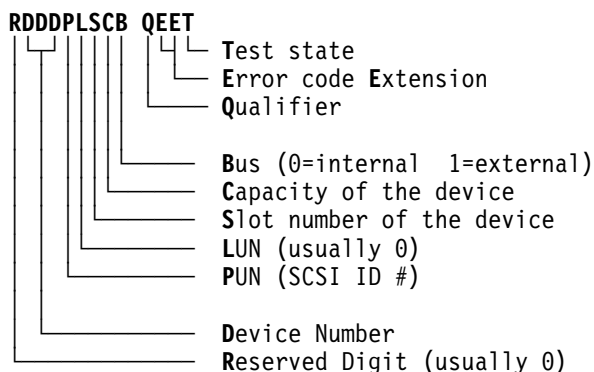

Error Messages

There are four types of error messages:

- POST error messages
- POST beep codes
- Diagnostic error messages
- Software-generated messages

Note: Certain errors can produce multiple error messages. If you have more than one error message, follow the recommended action for the first error displayed.

Error Message	Description
POST Error Messages	Displayed when POST finds problems with the hardware or detects a change in the hardware configuration.
POST Beep Patterns	Beeps emitted from the speaker if POST finds a problem. One beep indicates POST completed successfully. More than one beep indicates POST found a problem.
Diagnostic Error Messages	Displayed when a test program finds a problem with a hardware option.
Software-Generated Error Messages	<p>Displayed if a problem or conflict is found by an application program or the operating system. These messages are typically in the form of text, but they can be numeric also.</p> <p>For an explanation of these messages, refer to the information supplied with that software package.</p>

QAPLus/PRO Diagnostic Program

The QAPLus/PRO diagnostic program provides the primary method for testing the computer. You can use this DOS-based program to test the IBM components of the computer and some external devices. The amount of time required to test all components depends on the number of components. The more optional adapters and devices you have attached to your computer, the longer the testing takes. To access QAPLus/PRO, boot the computer with the QAPLus/PRO diskette in the diskette drive.

This test program includes the following features.

Feature	Description
Advanced Diagnostic Tests	<p>Identifies most problems associated with the following major components:</p> <ul style="list-style-type: none">• Processor card• Hard disk drives• Diskette drives• CD-ROM drives• RAM• Serial and parallel ports• video PMC card or video adapter• Printer• Keyboard• Mouse <div><p>Testing the USB Ports</p><p>The Advanced Diagnostic program does not display or test the USB ports. The support is entirely in the operating system. If you have a problem with a USB device, see "USB Ports" on page 8-13.</p></div>
Flexible Test Control	<p>Allows you to:</p> <ul style="list-style-type: none">• Run groups of tests in batch• Specify parameters to use for each test (for example, video modes, disk cylinders, and port addresses)• Specify the number of passes you want to run (one to continuous)• Log the test results to a text dBase file (DBF) format• Save all test settings for future use• View System Information• View the server configuration information (for example, you can view the IRQ/DMA assignments, memory usage, and device drivers)• Select System Utilities• Run a low-level format• Format a diskette

The QAPLus/PRO program provides advanced functions and utilities for users and service or support professionals to troubleshoot even the most difficult problems.

Module Tests Menu: Typically, when you select the Module Tests Menu, all adapters and devices installed in the computer are highlighted on the menu.

Note: The USB ports and devices do not appear on the list and are not tested by the diagnostic program. If you have a problem with a USB device, see “USB Ports” on page 8-13.

- If an adapter or device not installed in the computer is highlighted on the menu, use the procedure in “Undetermined Problem” on page 8-31 to find the problem.
- If an adapter or device is installed in the computer and is not highlighted on the menu, you have one of the following conditions.
 - The diagnostic code for the adapter or device is not on the diagnostic diskette.
 - The SCSI controller failed (on the SBC or SCSI adapter).
 - An unrecognizable adapter is installed.
 - The missing device is defective or requires an additional diskette or service manual.
 - A defective adapter caused the device not to be highlighted on the menu.

If a device is missing from the list, replace the device. If this does not correct the problem, use the procedure in “Undetermined Problem” on page 8-31 to find the problem.

Program Navigation: You can maneuver within the test programs by typing the first letter of a menu choice, pressing the function keys, or using command-line options.

Typing the First Letter of a Menu Choice: Throughout the test programs, typing the first letter of an option on a menu is the same as moving to that item with the cursor and pressing Enter; however, this function is not enabled on test group screens.

Pressing the Function Keys: Press the following keys to maneuver throughout the test programs.

Keys	Action
Enter	Select an item, run the test module, or run the test
Down Arrow (↓)	Moves the cursor down
Up Arrow (↑)	Moves the cursor up
F1	Calls up the appropriate Help information. Use the up arrow key or the down arrow key to scroll through the information. Pressing F1 from within a Help screen provides a help index from which you can select different categories. One of the important help categories is function key usage. Pressing Esc exits Help and returns to where you left off.
Esc	Go back to the previous menu

Additional functions are available with the following keys.

Keys	Action
Tab	Move to test group (or move to parameters)
Spacebar	Toggle modules on/off (or toggle tests on/off)
F2	View test results log
F10	Local menu
+	Next logical unit number (for example, LUN 1 or LUN 2)
–	Previous logical unit number

Command-Line Options: The following command-line options are available when initially starting the diagnostic program from within its directory. Enter **QAPLPRO /XXX**, where **/XXX** represents one of the following commands.

Command	Action
/B&W	The /B&W command line option forces the program to load in Black and White (Monochrome) mode, which is often more readable on laptop computers.
/LOG=file	The /LOG=file command line option directs the test programs to start using a specified Error Log file.
/INT10	The /INT10 command line option forces the test programs to use the BIOS for screen writes.
/OXXX	The /OXXX command line option, where XXX=test group (some test group labels are: MBD, MEM, VID, HDU, FDU, KBD, COM, and LPT) omits the designated test group from testing.
/USERCONFIG=file	The /USERCONFIG=file command line option tells the test programs to look for a user diagnostic configuration file other than the default USERDIAG.CFG.
/SCRIPT=file[,R]	The /SCRIPT=file[,R] command line option with the “,R” runs the selected script. See “Scripting” on page 8-8 for a description of scripting.
Note: You can use a “–” instead of a “/” as a command-line switch.	

Viewing the Test Groups: As you move the cursor bar up or down in the Module Tests Menu, the right-hand screen changes to show the attributes, parameters, and the selected tests of the corresponding test group. The “◆” symbol indicates a module selected for testing.

The indicated attributes are characteristics of the selected test module that are used by the test programs to determine which tests to run or how to run selected tests. Attributes are also used to limit the allowable range of parameters (for example, – ending cylinder).

Parameters are values you select to establish the scope of tests. For example, you can select Extended Memory testing parameters and limit the testing to a specific range of test blocks by specifying the starting and ending memory block. This might be appropriate if prior experience indicates that problems are likely to exist in a specific area of memory. By selecting these limiting parameters, you reduce memory testing time.

Scripting: Scripting lets you select specific groups of tests, testing parameters, and options. Your selection is saved for later use as a test *script*. To set up a test script, select all the appropriate test groups and specific tests you want to run from the Module Tests selection under Diagnostics. You also should select appropriate testing parameters and options.

Changing Logical Unit Numbers: In some instances, you can have more than one logical unit number (LUN) for a particular module. LUNs represent individual devices within a test group or module. For example, you might have two diskette drives or two hard disk drives; or you might have base, extended, shadow, and cache memory installed in the computer. This configuration might result in as many as 4 or 5 different LUNs in the Memory Test Group.

From either the Module Tests Menu or a test group window, you can change to a different LUN (where applicable) by pressing the plus (+) key (next LUN) or the minus (–) key (previous LUN).

Test-Group Specifications: In the upper-right-hand portion of the testing screen (or just the upper portion if you switched to an individual test group screen) are the specifications for the related test group.

Note: In the Hard Disk Test Group specification area, if a software program compressed your drive, the indicated size is the compressed size of the logical drive.

Starting the Diagnostic Program: To start the diagnostic program, do the following.

1. Insert the diagnostic diskette into drive A.
2. Turn on the computer.
3. When the diagnostic **Main Menu** is displayed, select **Diagnostics** and press Enter.
4. Select **Quick Check** and press Enter.
5. Follow the instructions that appear on your screen. If an error is displayed, go to “Symptom-to-FRU Index” on page 8-17.

Module Tests Selection: If the test programs do not find a problem, or you want to perform in-depth testing, the Module Tests selection provides a method to run individual tests on a single module. For example, you can run an individual test for the diskette drive, or you can run groups of tests for several modules. In the Module Tests selection, you can define how many times each test should run and how the test program should log the errors.

To start the Module Tests, do the following.

1. Insert the diagnostic diskette into drive A.
2. Turn on the computer.
3. When the diagnostic **Main Menu** is displayed, select **Diagnostics** and press Enter.
4. Select **Module Tests** from the Diagnostics Menu.
5. Use the up and down arrow keys to move the highlight bar from one selection to the next in the Module Tests Menu.
6. Use the following instructions to select and run tests.

Note: As you scroll down the selection menu, the Test Group window to the right changes to correspond to the highlighted Module.

Running Selected Module Tests

To run selected tests for a test group, do the following.

1. Use the up and down arrow keys to move the cursor to your selection.
2. Press Enter.

A “◆” appears next to your selection.

Running All Selected Modules

To run all selected test modules, do the following.

1. Use the down arrow key to move the cursor to the last choice, **Run All Selected**.
2. Press Enter.

A “◆” appears next to your selection.

Changing Selected Tests in Test Groups

To change selected tests in a test group, do the following.

1. Use the up and down arrow keys to move the cursor to your selection.
2. Press Tab to move into the expanded Test Group window.
3. Scroll to the test you want to select or deselect.

Attention

Tests indicated by an “*” (red text on color screens) are destructive tests.

4. Press the spacebar at the highlighted test to toggle between selected (indicated by a “◆”) and not selected.

Note: Typing the first letter of a test does not activate the test, unlike menu operations.

5. Press Enter.

Running an Individual Test

To run an individual test, do the following.

1. Use the up and down arrow keys to move the highlighted bar to the test you want to run.
2. Press Enter to run the test.

The results of the test appear in the lower-right-hand Test Log window. Also, if you enabled Test Logging, the results are recorded in the Test Log.

3. After the tests have been completed, press Esc to return to the Module Tests Menu.

Stopping the Tests: To stop running a specific test or stop testing after you have started a test, press Esc while the test is running. The test pauses at the first possible opportunity, and the Skip/Abort Test Menu appears with the following options.

Option	Action
Continue	The test program begins testing where it stopped.
Skip to next test	The test program skips the current test, but remaining tests for the selected Test Module continue.
Skip to next group	The test program skips the remaining tests in the current test group.
Abort all tests	The test program stops and returns to the previous menu.

General Checkout

Attention

The drives in the computer you are servicing might have been rearranged or the drive startup sequence changed. Be extremely careful during write operations such as copying, saving, or formatting. Data or programs can be overwritten if you select an incorrect drive.

Diagnostic error messages appear when a test program finds a problem with a hardware option. For the test programs to properly determine if a test *Passed*, *Failed*, or *Aborted*, the test programs check the error-return code at test completion.

General error messages appear if a problem or conflict is found by an application program, the operating system, or both. For an explanation of these messages, refer to the information supplied with that software package.

Notes:

1. Before replacing any parts, make sure the latest level of BIOS is installed on the computer. A down-level BIOS can cause false errors and unnecessary replacement of the SBC. Refer to the information on the Web (see "Downloading System Support Programs and BIOS Updates" on page 8-2 for the Web address).
2. If multiple error codes are displayed, diagnose the first error code displayed.
3. If the computer stops with a POST error, go to "Symptom-to-FRU Index" on page 8-17.
4. If the computer stops without displaying an error, go to "Undetermined Problem" on page 8-31.
5. If an installed device is not recognized by the diagnostic program, that device might be defective.

001

- Turn off the computer and all external devices.
- Check all cables and power cords.
- Set all display controls to the middle position.
- Insert the Diagnostic diskette into drive A.
- Turn on all external devices.
- Turn on the computer.
- Check for the following responses:
 1. One or two beeps (depending on the diagnostic version level).
 2. Readable instructions or the Main Menu.

DID YOU RECEIVE THE CORRECT RESPONSES?

Yes No

002

Go to the "Symptom-to-FRU Index" on page 8-17.

003

ARE ALL INSTALLED DEVICES IN THE COMPUTER HIGHLIGHTED ON THE MODULE TEST MENU OR HARDWARE CONFIGURATION REPORT?

Yes No

004

Go to "Module Tests Menu" on page 8-6.

Note: The USB ports and devices do not appear on the list and are not tested by the diagnostic program. If you are have a problem with a USB device, see "USB Ports" on page 8-13.

005

Run the Advanced Diagnostic test. If necessary, refer to "Diagnostic and Test Tools" on page 8-3.

- If you receive an error, go to "Symptom-to-FRU Index" on page 8-17.
 - If the test stops and you cannot continue, replace the last device tested.
 - If the computer has incorrect keyboard responses, go to "Keyboard" on page 8-12.
 - If the printer has incorrect responses, go to "Printer" on page 8-15.
 - If the display has problems such as jittering, rolling, shifting, or being out of focus, go to "Display" on page 8-17.
-


Keyboard

If the keyboard is experiencing problems and a mouse or other pointing device is attached, remove it to see if the error symptom goes away. If the symptom goes away, the mouse or pointing device is defective. If the symptom does not go away, do the following.

001

- Turn off the computer.
- Disconnect the keyboard cable from the system unit.
- Turn on the computer and check the keyboard cable connector on the system unit for the voltages shown. All voltages are $\pm 5\%$.

Pin	Voltage (VDC)
1	+5.0
2	Not Used
3	Ground
4	+5.0
5	+5.0
6	Not Used

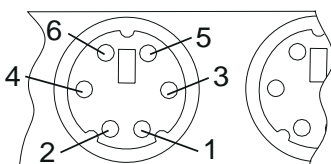


ARE THE VOLTAGES CORRECT?

Yes No

002

- Turn off the computer.
- Disconnect the keyboard/mouse cable from the SBC.
- Turn on the computer and check the keyboard/mouse connector on the SBC for the voltages shown.

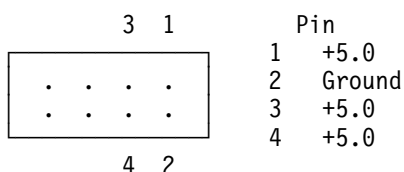

ARE THE VOLTAGES CORRECT?

Yes No

003

Replace the keyboard/mouse cable. If the problem remains, replace the SBC.

004

Replace the video PMC card.

005

On keyboards with a detachable cable, replace the cable. If the problem remains or if the cable is permanently attached to the keyboard, replace the keyboard. If the problem remains, replace the SBC.

USB Ports

Before you begin:

- Make sure the USB ports are enabled (see page 4-16).
- Make sure the operating system support is installed (refer to the instructions for your operating system).
- Make sure the device is connected properly and is powered on (if it has external power).

If a USB device is experiencing problems, do the following.

001

ARE OTHER USB DEVICES ATTACHED TO EITHER OF THE TWO PORTS?

Yes No

002

- Attach the failing device to the other port.
- Test the device again.

DO YOU HAVE THE SAME SYMPTOM?

Yes No

003

Reseat the failing cable at the SBC and retest. If the problem remains, replace the following parts until the problem is corrected.

- Cable assembly
- IBM SBC

004

Reinstall the device driver and retest. If the problem remains, replace the following parts until the problem is corrected.

- USB device
 - Cable assembly
 - IBM SBC
-

005

ARE ANY USB DEVICES WORKING PROPERLY?

Yes No

006

- Disconnect all USB devices (including any hubs).
- Reconnect a failing device directly to a USB port.

DO YOU HAVE THE SAME SYMPTOM?

Yes No

007

One of the other USB devices is causing the problem. Reconnect them one at a time until the symptom returns. Then replace that device.

(continued)

008

- Disconnect this device (device 1) and connect another device (device 2).
- Test device 2.

DO YOU HAVE THE SAME SYMPTOM?

Yes No

009

Replace the first device tested (device 1).

010

Replace the cable assembly. If the symptom remains, replace the SBC.

011

- Connect the failing device in place of a device that you know is working.
- Test the device again.

DO YOU HAVE THE SAME SYMPTOM?

Yes No

012

Replace the following parts until the problem is corrected.

- USB hub
- Cable assembly
- SBC

013

Reinstall the device driver. If the problem remains, replace the device.

Printer

If you are experiencing problems printing, make sure the printer is connected properly and is powered on; then run the printer self-test.

If the printer self-test does not run correctly, the problem is in the printer. (Refer to the printer service manual.) If the printer self-test runs correctly, install a wrap plug in the parallel port and run the diagnostic tests to determine which part failed.

If the diagnostic tests (with the wrap plug installed) do not detect a failure, replace the printer cable. If that does not correct the problem, replace the SBC or adapter connected to the printer cable.

Power Supply

If the power-on indicator is not on, the power-supply fan is not running, or the computer does not shut off, do the following.



Check/Verify	Action
1. Check the following: <ul style="list-style-type: none">• Power cord• Voltage-selection switch• On/Off switch connector• Power-supply connectors• Backplane power-supply connectors	Reseat
2. Check the power cord for proper continuity.	Power Cord
3. Check the power switch for continuity.	Power-on Switch

If these are correct, check the voltages shown in "Backplane Power-Supply Connections" on page 8-16.

Backplane Power-Supply Connections

The backplane of the 7563 Passive Backplane System has five green LEDs at the front next to the power supply connectors, one for each of the five output voltages from the power supply. If any of these LEDs is not lit, verify the power supply cables are correctly installed on the backplane. If the power supply connections are correct and the previous checks are correct, replace the power supply.

Note: These voltages must be checked with the power supply cables connected to the backplane.

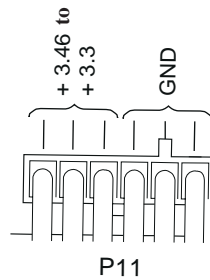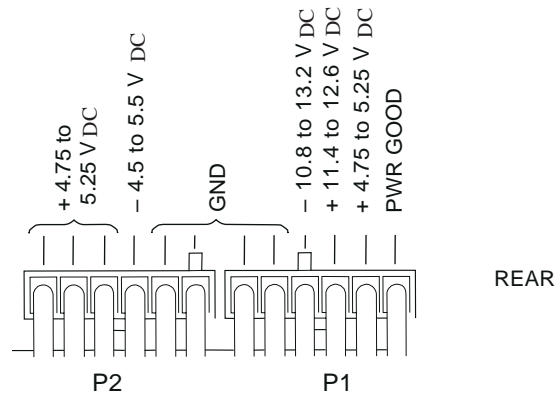

Display

If the screen is rolling, replace the display assembly. If that does not correct the problem, replace the video PMC card or video adapter.

If the screen is not rolling, do the following to run the display self-test.

1. Turn off the computer and the display.
2. Disconnect the display signal cable.
3. Turn on the display.
4. Turn the brightness and contrast controls to their maximum setting. The screen should be a uniform white or light gray test color.
5. If you do not see the test color, replace the display. If there is a test color on the screen, replace the video PMC card or video adapter.

Note: During the first two or three seconds after the display is powered on, the following might occur while the display synchronizes with the computer.

- Unusual patterns or characters
- Static, crackling, or clicking sounds
- A “power-on hum” on larger displays

A noticeable odor might occur on new displays or displays recently removed from storage.

These sounds, display patterns, and odors are normal; do not replace any parts.

If you are unable to correct the problem, go to “Undetermined Problem” on page 8-31.

Symptom-to-FRU Index

The symptom-to-FRU index tables list error symptoms, as well as parts to be replaced and corrective actions to take. The parts and corrective actions are listed in order of decreasing effectiveness in problem solving. Replace the parts or take actions in the order suggested. An X in the tables represent any number from 0 to 9.

Always begin with “General Checkout” on page 8-10. If you are unable to correct the problem using these tables, go to “Undetermined Problem” on page 8-31.

Notes:

1. If you have both an error message and an incorrect pattern of beeps, diagnose the error message first.
2. If you cannot run the diagnostic tests, but did receive a POST error message, diagnose the POST error message.
3. If you did not receive any error message, look for a description of your error symptoms in the first part of this index.
4. Check all power supply voltages before you replace the SBC. (See “Power Supply” on page 8-15.)
5. Check the hard disk drive jumper settings before you replace a hard disk drive. (See “Hard Disk Drive Jumper Settings” on page B-2.)

Important

1. Some errors are indicated with a pattern of beeps. (See “Beep Symptoms” on page 8-18.)
2. The processor is a separate part from the SBC. (See “Removing and Replacing the IBM SBC” on page 8-42.)

Beep Symptoms

The computer produces patterns of beeps to assist in diagnosing many problems. The SBC provides the processor function for the 7563 Passive Backplane System. If the video PMC card is installed, and the beeps indicate an SBC failure or there is no beep and the computer is not responding, separate the video PMC card from the SBC and rerun the test. If the symptom changes, replace the video PMC card first, then the SBC.

Beeps	Description
1-2-X	<ul style="list-style-type: none"> • One beep • A pause (or break) • Two beeps • A pause (or break) • Any number of beeps
4	Four continuous beeps

Beep Symptom	Action
1-1-3 CMOS read/write error	<ol style="list-style-type: none"> 1. Run Setup. 2. IBM SBC
1-1-4 ROM BIOS check error	<ol style="list-style-type: none"> 1. IBM SBC
1-2-X DMA error	<ol style="list-style-type: none"> 1. IBM SBC
1-3-X	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
1-4-4	<ol style="list-style-type: none"> 1. Keyboard 2. IBM SBC
1-4-X Error detected in first 64 KB of RAM.	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
2-1-1, 2-1-2	<ol style="list-style-type: none"> 1. Run Setup. 2. IBM SBC
2-1-X First 64 KB of RAM failed.	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
2-2-2	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC
2-2-X First 64 KB of RAM failed.	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
2-3-X	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
2-4-X	<ol style="list-style-type: none"> 1. Run Setup. 2. Memory Module 3. IBM SBC
3-1-X DMA register failed.	<ol style="list-style-type: none"> 1. IBM SBC
3-2-4 Keyboard controller failed.	<ol style="list-style-type: none"> 1. IBM SBC 2. Keyboard
3-3-4 Screen initialization failed.	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display

Beep Symptom	Action
3-4-1 Screen retrace test detected an error.	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display
3-4-2 POST is searching for video ROM.	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC
4	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC
All other beep patterns.	<ol style="list-style-type: none"> 1. IBM SBC
One long and one short beep during POST. Base 640 KB memory error or shadow RAM error.	<ol style="list-style-type: none"> 1. Memory Module 2. IBM SBC
One long and two or three short beeps during POST. (video error)	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC
Three short beeps during POST.	<ol style="list-style-type: none"> 1. See "Removing and Replacing the IBM SBC" on page 8-42. 2. IBM SBC
Continuous beep.	<ol style="list-style-type: none"> 1. IBM SBC
Repeating short beeps.	<ol style="list-style-type: none"> 1. Check for stuck keyboard key. 2. Keyboard Cable 3. IBM SBC

No Beeps

Symptom/Error	Action
No beep during POST but the computer works correctly.	<ol style="list-style-type: none"> 1. LED Board 2. LED Cable 3. IBM SBC
No beep during POST.	<ol style="list-style-type: none"> 1. See "Undetermined Problem" on page 8-31. 2. IBM SBC 3. Memory Module 4. Any Adapter or Device 5. Power Cord 6. Power Supply

Numeric Error Codes

Error Code/Explanation	Action
000 SCSI Adapter not enabled.	1. Verify adapter device and Bus Master fields are enabled in the PCI Configuration Program.
08X Check SCSI terminator installation.	1. SCSI Cable 2. SCSI Terminator 3. SCSI Device 4. SCSI Adapter
101 SBC interrupt failure.	1. IBM SBC
102 SBC timer error.	1. IBM SBC
106	1. IBM SBC
110 SBC memory parity error.	1. Memory Module 2. IBM SBC
111 I/O channel parity error.	1. Reseat adapters. 2. Any Adapter 3. IBM SBC
114 Adapter ROM error.	1. Adapter Memory 2. IBM SBC
129 Internal cache test error.	1. Processor 2. L2 Cache Memory 3. IBM SBC
151 Real-time clock failure.	1. IBM SBC
161 Bad battery.	1. Run Setup. 2. Battery (see page E-7) 3. IBM SBC
162 Configuration mismatch.	1. Run Setup and verify configuration. 2. Device was added, removed, changed location? If not, suspect that device. 3. Turn on all external devices first, then turn on the computer. 4. Battery (see page E-7) 5. IBM SBC
162 And unable to run diagnostic.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable
163 Clock not updating or invalid time set.	1. Set/check time and date. 2. Battery (see page E-7) 3. IBM SBC
164 POST detected a base memory or extended memory size mismatch error.	1. Run Setup and check System Summary menu for memory size change (see "Configuration/Setup Utility Program" on page 8-1). 2. Run the Extended Memory Diagnostic tests (Memory Test Group).
175	1. IBM SBC
176	1. Replace covers removed from the computer.

Error Code/Explanation	Action
177 Corrupted Administrator Password.	1. IBM SBC
178	1. IBM SBC 2. Processor
183	1. Enter the administrator password.
184 Password removed due to check-sum error.	1. Define new password.
185 Corrupted boot sequence.	1. Set configuration and reinstall the boot sequence.
186	1. IBM SBC
189	1. More than three password attempts were made to access the computer. Turn off the computer and try again.
1XX Not listed previously.	1. IBM SBC
201, 20X Memory data error.	1. Memory Module 2. IBM SBC
225 Unsupported memory.	1. Replace memory.
229 External cache test error.	1. L2 Cache Memory 2. IBM SBC
262 POST detected a base memory or extended memory type error.	1. Run Setup and Check System Summary menu for memory type change (see "Configuration/Setup Utility Program" on page 8-1). 2. Run the Extended Memory Diagnostic tests (Memory test group).
301	1. Keyboard 2. Keyboard Cable 3. Keyboard/Mouse Cable 4. IBM SBC
303 With an 8603 error.	1. Mouse 2. Keyboard 3. Keyboard Cable 4. Keyboard/Mouse Cable 5. IBM SBC
303 With no 8603 error.	1. Keyboard 2. Keyboard Cable 3. Keyboard/Mouse Cable 4. IBM SBC
3XX Not listed previously.	1. Keyboard 2. Keyboard Cable 3. Keyboard/Mouse Cable 4. IBM SBC
5XX	1. Video PMC Card or Video Adapter 2. IBM SBC
601	1. Diskette Drive A 2. Diskette Drive Cable 3. IBM SBC

Error Code/Explanation	Action
602	<ol style="list-style-type: none"> 1. Diskette 2. Verify Diskette and retry.
604 And able to run diagnostic.	<ol style="list-style-type: none"> 1. Run Setup and verify diskette configuration settings. 2. Diskette Drive B 3. Diskette Drive Cable 4. IBM SBC
604 And unable to run diagnostic.	<ol style="list-style-type: none"> 1. Run Setup and verify diskette configuration settings. 2. Diskette Drive A 3. Diskette Drive Cable 4. IBM SBC
605 POST cannot unlock the diskette drive.	<ol style="list-style-type: none"> 1. Diskette Drive 2. Diskette Drive Cable 3. IBM SBC
662	1. Diskette drive configuration error or wrong diskette drive type. Run Setup and verify diskette configuration.
6XX Not listed previously.	<ol style="list-style-type: none"> 1. Diskette Drive 2. IBM SBC 3. External Drive Adapter 4. Diskette Drive Cable 5. Power Supply
962 Parallel port configuration error.	<ol style="list-style-type: none"> 1. Run Setup and verify parallel port configuration. 2. Parallel Adapter 3. IBM SBC
9XX	<ol style="list-style-type: none"> 1. Printer 2. IBM SBC
107X Check SCSI terminator installation.	<ol style="list-style-type: none"> 1. Check SCSI terminator installation. 2. SCSI Cable 3. SCSI Terminator 4. SCSI Device 5. SCSI Adapter
1101 Serial connector error or possible SBC failure.	<ol style="list-style-type: none"> 1. IBM SBC 2. Any Serial Device
11XX Not listed previously.	1. IBM SBC
1692 Boot sequence error.	1. Run FDISK to ensure at least one active partition is set active.
1762 Hard disk drive configuration error.	1. Run Setup and verify hard disk drive configuration (see "Configuration/Setup Utility Program" on page 8-1).
1780 (Disk Drive 0) 1781 (Disk Drive 1) 1782 (Disk Drive 2) 1783 (Disk Drive 3)	<ol style="list-style-type: none"> 1. See "Power Supply" on page 8-15. 2. Hard Disk Drive 3. IBM SBC 4. Hard Disk Cable 5. Power Supply

Error Code/Explanation	Action
180X PCI configuration or resource error.	<ol style="list-style-type: none"> 1. Run Setup and verify PCI/ISA configuration settings. 2. If necessary, set ISA adapters to "Not available" to allow PCI adapters to configure properly. 3. Remove any suspected ISA adapters. 4. Rerun diagnostics. 5. PCI Adapter
1962 Boot sequence error.	<ol style="list-style-type: none"> 1. Possible hard disk drive problem (see "Hard Disk Drive Boot Error" on page 8-31).
2401, 2402 If screen colors are OK.	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display
2410	<ol style="list-style-type: none"> 1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display
2462 Video memory configuration error.	<ol style="list-style-type: none"> 1. Check cable connections. 2. Run Setup and verify video configuration settings. 3. Video Memory 4. Video PMC Card or Video Adapter 5. IBM SBC
8601, 8602	<ol style="list-style-type: none"> 1. Pointing Device (Mouse) 2. Keyboard/Mouse Cable 3. IBM SBC
8603, 8604	<ol style="list-style-type: none"> 1. IBM SBC 2. Keyboard/Mouse Cable 3. Pointing Device (Mouse)
86XX Not listed previously.	<ol style="list-style-type: none"> 1. Mouse 2. Keyboard/Mouse Cable 3. IBM SBC

Error Messages

Error Message/Symptom	Action
Address Exceeds the Size of Your Memory An invalid memory address was entered. Diagnostic Tests display this message during the Locate Bad Chips option.	1. Enter the correct address. 2. Memory Module 3. IBM SBC
Arithmetic Functions Failed An error was detected during the CPU Test.	1. Processor 2. IBM SBC
Base Memory Test Failed An error was detected in base memory.	1. Memory Module 2. IBM SBC
Boot Sector Unreadable A boot sector read error was detected on the hard disk drive.	1. Hard Disk Drive 2. Hard Disk Drive Cable 3. Hard Disk Drive Adapter 4. IBM SBC
Bus Noise Test Failed RAM Test detected an error in the memory bus.	1. Memory Module 2. IBM SBC
Butterfly Cylinder Access Test Failed Hard Disk Drive Test detected mismatch between the data read and the data stored on the drive.	1. Hard Disk Drive 2. Hard Disk Drive Cable 3. Hard Disk Drive Adapter 4. IBM SBC
Clock Stopped Real-time clock has stopped working.	1. Battery (see page E-7) 2. IBM SBC
CMOS Clock Test Failed Time and Date Settings for CMOS and DOS do not Match.	1. Battery (see page E-7) 2. IBM SBC
Controller Diagnostic Test Failed An error was detected while testing the Hard Disk Controller (Adapter).	1. Hard Disk Drive Adapter 2. Hard Disk Drive 3. IBM SBC
Cylinder 0 errors Test detected an error reading the first cylinder of the hard disk drive.	1. Hard Disk Drive 2. Hard Disk Drive Adapter 3. IBM SBC
Device is Not Ready Ready the Device... or Press Any Key	1. Ensure the device is powered-on. 2. Replace failing device. 3. Device Adapter 4. IBM SBC
Disk Error Encountered Opening Output File Press Any Key To Continue.	1. Hard Disk Drive 2. Hard Disk Drive Adapter 3. IBM SBC
DMA #X Failed Main Components Test detected an error while testing the DMA controller.	1. IBM SBC
DMA Page Register Failed DMA page register error	1. IBM SBC
Drive (x) Media (y) Mismatch FAT ID mismatch with installed drive.	1. Check diskette and diskette drive capacity. 2. Diskette Drive 3. IBM SBC
Error in video buffer. Bad bits. Video memory test error.	1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display

Error Message/Symptom	Action
Exception Interrupt In Protected Mode Diags Cannot Continue Server error, remove one adapter at a time until the symptom goes away.	1. Any Adapter 2. IBM SBC 3. Processor
Extended Memory Test Failed Extended memory error.	1. Memory Module 2. IBM SBC
Floppy Drive Failed Diskette drive(s) failed.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable
General Function Failed Remove one adapter at a time until the symptom goes away.	1. Any Adapter 2. IBM SBC 3. Processor
Hard Drives Failed Hard Disk Drive test error.	1. Hard Disk Drive 2. Hard Disk Drive Adapter 3. IBM SBC
Incorrect DOS version	1. Ensure you are using DOS version 3.0 or higher.
INT Mask Register Failed INT Mask Register error.	1. Processor 2. IBM SBC
Invalid Date Clock/DOS date mismatch.	1. CMOS Backup Battery (see page E-7) 2. IBM SBC
Invalid Time Clock/DOS time mismatch. Back-up clock and DOS time of day settings do not match.	1. CMOS Backup Battery (see page E-7) 2. IBM SBC
Linear Cylinder Access Test Failed Hard disk drive error.	1. Hard Disk Drive 2. Hard Disk Drive Cable 3. Hard Disk Drive Adapter 4. IBM SBC
Logic Function Failed CPU Logic test error.	1. Processor 2. IBM SBC
Loopback Error COM Port Test or Parallel Port error. A wrap plug must be installed to successfully complete these tests.	1. IBM SBC 2. Wrap Plug
Main Components Failed SBC error.	1. IBM SBC 2. Processor
Memory test cannot run at this location in memory Not enough free memory available to start the memory test.	1. Memory Module 2. IBM SBC
Missing QAPIus/PRO Files(s) One or more diagnostic support files are missing.	1. Diagnostic Diskette
NO LOOPBACK PLUG. Skipping External loopback test No wrap plug installed.	1. Install the wrap plug on the serial port; then rerun the test. 2. Internal Serial Cable 3. IBM SBC
Not ready Printer not on-line or not ready.	1. Ready Printer 2. Printer 3. Printer Cable 4. IBM SBC

Error Message/Symptom	Action
No 'type-amatic' repeat At least one repeat key must be tested during this test or an error will occur. Typematic test error.	1. Keyboard 2. Keyboard/Mouse Cable 3. IBM SBC
Not used by any standard device IRQ is not currently being used by a non-standard device.	1. IBM SBC
Numeric Proc Failed NPU test error.	1. Processor 2. IBM SBC
Parallel Ports Failed Test Report Summary message.	1. IBM SBC
Pass (N): ** Errors ** Drive (X) Failed Diskette drive read/write test error.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable
Pass (N) Drive Not Ready Diskette drive door is open or defective.	1. Ensure diskette drive is ready. 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Pass (N): Drive (X) Write Protected or Unformatted	1. Insert a non-write protected, formatted diskette into the diskette drive; then rerun the test. 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Pass (N): Unknown Media Drive (X) Diskette Drive Test error.	1. Diskette 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Place Hi-density Media in Drive Media/drive mismatch.	1. Diskette 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Printer Failed Printer powered-on and ready?	1. Printer 2. Printer Cable 3. IBM SBC
Printer Fault Printer powered-on and ready?	1. Printer 2. Printer Cable 3. IBM SBC
Printer Not Selected Ensure the printer is powered-on and ready.	1. Printer 2. Printer Cable 3. IBM SBC
Program or File Not Found Press Any Key Diagnostics cannot find the USER(N).COM file.	1. Diagnostic Diskette 2. Diskette Drive 3. IBM SBC
Program Too Big To Fit In Memory Too many Terminate and Stay Resident programs in memory.	1. Reboot the computer from the Diagnostic Diskette.
QAPLUS/PRO Cannot Be Re-run because of Error in Relocating Program Diagnostics failed to relocate the Diagnostic Test programs so the memory space it resides in was not tested.	1. Diagnostic Diskette 2. Memory Module 3. IBM SBC

Error Message/Symptom	Action
RAM Memory Error in Block n. Bad bits n Memory error.	1. Memory Module 2. IBM SBC
RAM Test Failed Memory error.	1. Memory Module 2. IBM SBC
Read error on cylinder n Hard disk drive format error.	1. Hard Disk Drive 2. Hard Disk Drive Adapter 3. IBM SBC
Read Errors Diskette drive read error.	1. Diskette 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Receive Error Serial Port loopback test error.	1. Serial Port Cable 2. IBM SBC
Refresh Failure Diagnostic Test detected an error while testing the DMA controller's RAM refresh cycle.	1. Memory Module 2. IBM SBC
RTC Interrupt Failure Diagnostic Test cannot detect the Real-Time clock interrupt.	1. IBM SBC
Serial Chip Error COM Port error, general.	1. Serial Port Cable 2. IBM SBC
Serial Compare Error COM Port error; information transmitted is not the same as information received.	1. Serial Port Cable 2. IBM SBC
Serial Time-out Error COM Port error; time interval is too long between transmitted and received data.	1. Serial Port Cable 2. IBM SBC
Serious Memory Error—Diags Cannot Continue Memory Test error.	1. Memory Module 2. IBM SBC
Sorry, You Need A Mouse Mouse or mouse driver was not detected.	1. Mouse 2. IBM SBC
System Hangs Go to "Undetermined Problem" on page 8-31.	1. Any device 2. Any adapter 3. IBM SBC
The Address Exceeds the Size of Your Memory An invalid memory address was entered. The Diagnostic Tests display this message during the Locate Bad Chips option under the interact menu if an invalid memory address was entered at the "Enter Memory Address Of Bad Chip" prompt.	1. Enter the correct address. 2. Memory Module 3. IBM SBC
That Number Is Out of Range An invalid bit number was entered. Diagnostic Tests display this message during the Locate Bad Chips option.	1. Enter the correct number. 2. Memory Module 3. IBM SBC
Too Many Errors — Test Aborted Too many errors; the Diagnostic Test cannot continue.	1. Processor 2. IBM SBC
Transmit Error Internal or external serial port loopback test failure.	1. Serial Port Cable 2. IBM SBC

Error Message/Symptom	Action
Video Adapter Failed Test Result Summary displayed if "Fail" was at the Quit/Fail/Pass menu of any video test.	1. Video PMC Card or Video Adapter 2. IBM SBC 3. Display
Write error on cylinder n Hard disk drive write error.	1. Hard Disk Drive 2. Hard Disk Drive Adapter
Write Errors Diskette drive write error.	1. Diskette 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
Write Protected or Unformatted Diskette is write protected or is not formatted.	1. Insert a non-write-protected, formatted diskette into the diskette drive; then rerun the test. 2. Diskette Drive 3. IBM SBC 4. Diskette Drive Cable
You Cannot Delete the Motherboard "Remove Board" option was selected. The Diagnostic Tests display this message during the Locate Bad Chips option.	1. Make the correct selection. 2. Memory Module 3. IBM SBC 4. Processor

Miscellaneous Symptoms

Symptom	Action
Changing colors.	1. Display
System unit will not shut off.	1. See "Power Supply" on page 8-15. 2. Power Switch 3. IBM SBC
System unit will not turn on.	1. See "Power Supply" on page 8-15. 2. Power Switch 3. Power Supply 4. IBM SBC
Diskette drive in-use light remains on or does not light when drive is active.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable
Flashing cursor with an otherwise blank display.	1. IBM SBC 2. Primary Hard Disk Drive 3. Hard Disk Drive Cable
Incorrect memory size during POST.	1. Run the memory tests. 2. Memory Module 3. IBM SBC
"Insert a Diskette" icon appears with a known-good diagnostic diskette in the first 3.5-inch diskette drive.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable 4. Network Adapter
Intensity or color varies from left to right of characters and color bars.	1. Display 2. Video PMC Card or Video Adapter
No power, or fan not running.	1. See "Power Supply" on page 8-15.
Nonsystem disk or disk error-type message with a known-good diagnostic diskette.	1. Diskette Drive 2. IBM SBC 3. Diskette Drive Cable
Other display symptoms not listed previously (including blank or illegible display).	1. See "Display" on page 8-17. 2. IBM SBC 3. Display
Power-on indicator or hard disk drive in-use light not on, but computer works correctly.	1. Power Supply 2. IBM SBC 3. LED Cables
Printer problems.	1. See "Printer" on page 8-15.
Program loads from the hard disk with a known-good diagnostic diskette in the first 3.5-inch diskette drive.	1. Run Setup. 2. Diskette Drive 3. Diskette Drive Cable 4. IBM SBC 5. Power Supply
Serial or parallel port device failure (port on SBC).	1. Check external device self-test. 2. External Device 3. Device Cable 4. Device Connector Cable (from SBC) 5. IBM SBC

Symptom	Action
Serial or parallel port device failure (port on adapter).	<ol style="list-style-type: none"> 1. Check external device self-test. 2. External Device 3. Device Cable 4. Adapter 5. IBM SBC
USB port device failure.	<ol style="list-style-type: none"> 1. See "USB Ports" on page 8-13.
Some or all keys on the keyboard do not work.	<ol style="list-style-type: none"> 1. Keyboard 2. Keyboard Cable 3. Keyboard/Mouse Cable 4. IBM SBC
Battery inaccurate.	<ol style="list-style-type: none"> 1. Battery (see page E-7) 2. IBM SBC

Hard Disk Drive Boot Error

A hard disk drive boot error (error codes 1962 and I999030X) can be caused by the following.

Cause	Actions
The start-up drive is not in the boot sequence in the configuration.	Check the configuration and ensure the start-up drive is in the boot sequence.
No operating system is installed on the boot drive.	Install an operating system on the boot drive.
The boot sector on the start-up drive is corrupted.	The drive must be formatted. Do the following. <ol style="list-style-type: none">1. Attempt to access and recover (back up) the failing hard disk drive.2. Using the operating systems programs, format the hard disk drive.
The drive is defective.	Replace the hard disk drive.

Undetermined Problem

Check the power supply voltages. See "Power Supply" on page 8-15. If the voltages are correct, return here and continue with the following steps.

1. Turn off the computer.
2. Remove or disconnect the following, one at a time:
 - a. Non-IBM devices
 - b. External devices (modem, printer, or mouse)
 - c. Any adapters
 - d. Memory modules
Before removing or replacing memory modules, see "Removing and Replacing the IBM SBC" on page 8-42.
 - e. Extended video memory
 - f. External Cache
 - g. External Cache RAM
 - h. Hard disk drive
 - i. Diskette drive
3. Turn on the computer to re-test it.
4. Repeat steps 1 through 3 until you find the failing device or adapter.

If all devices and adapters have been removed, and the problem continues, replace the SBC. See "Removing and Replacing the IBM SBC" on page 8-42.

Removal and Replacement Procedures

This section describes the step-by-step procedures for removing and replacing features and parts in the 7563 Passive Backplane System. ***These procedures should be performed only by trained service personnel, because performing steps incorrectly could lead to personal injury or damage to the computer.***

Before performing any removal and replacement procedures, be sure to read and understand the information in "Safety Information" on page E-10 and in "Handling Electrostatic-Discharge-Sensitive Devices" on page E-15.

CAUTION:

- **Power must always be switched off before performing any removal/replacement procedures; if possible, electrical power and any backup power source should also be unplugged or otherwise disconnected. To assure that power is switched off and disconnected in the correct order, start every removal and replacement procedure with "Removing Power and Disconnecting Cables."**
- **Depending on the options installed, the system unit could weigh more than one person can comfortably lift. Do not attempt to lift it by yourself if you think it is too heavy for you.**

Attention

Whenever handling electronic components, use precautions to prevent component damage due to electrostatic discharge. See "Handling Electrostatic-Discharge-Sensitive Devices" on page E-15 for a list of those precautions.

When performing the following procedures, refer to Figure 1-1 on page 1-1 and Figure 1-2 on page 1-2.

Removing Power and Disconnecting Cables

Use the following procedure to remove all power from the system unit before beginning any removal/replacement procedure. If it is necessary to remove the system unit from its mounting place, use this procedure before removing the system unit.

1. Remove any media (diskettes and CDs) from the computer.
2. Turn off the computer and any attached devices.
3. Tag all cables connected to the system unit or record the connections to prevent confusing the cables while they are unplugged.
4. If you have a modem or fax machine attached, disconnect the telephone line from the wall outlet and then from the system unit.
5. Disconnect all electrical power and any backup power source.
6. Disconnect any other cables connected to the system unit. Where applicable, disconnect the cables at the receptacle end first, and then at the device end.


When reassembling the system unit, reverse these steps.

You now are ready to proceed.

- For installations in which the mounting does not impede access, go directly to “Removing the System Unit Cover.”
- For installations in which the mounting does impede access, remove the system unit from its mounting before beginning any removal or replacement procedure. The steps to removing the system unit from its mounting depend on the particular mounting method.

Removing the System Unit Cover


Loosen the six cover screws and slide the cover toward the rear. Then lift the cover off the chassis, as shown in the following figure.

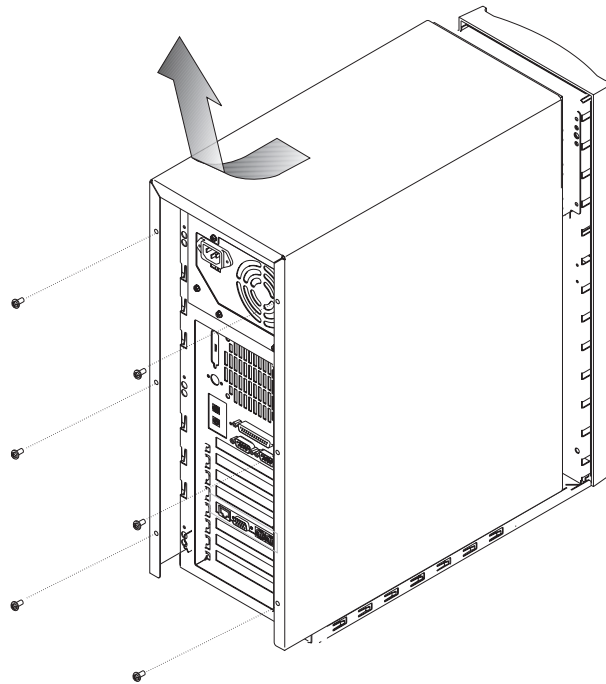

Removing and Replacing Adapters

All adapters are removed and replaced in the same way. Adapters are secured by a card retainer bracket. In addition to the bracket, full-size adapters are held in place by guides in the front fan guard; shorter adapters do not reach the guides.

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover.
3. Remove the card retainer bracket.

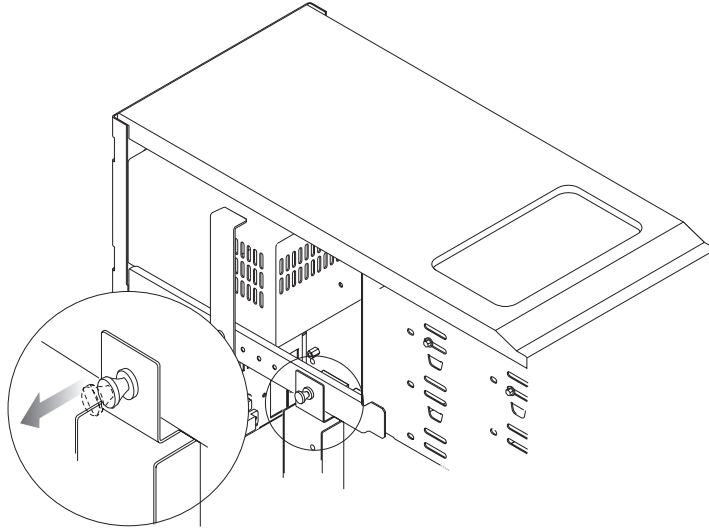


4. Loosen the retaining screw for the adapter.
5. Disconnect any cables going to that adapter.
6. Remove the adapter.

When reassembling the system unit, reverse these steps. Be sure the card retainer bracket properly captures all cards.

Removing and Replacing a Drive in the Drive Cage

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the power and signal cables from the rear of the diskette drive.
4. Disconnect the power and signal cables from the hard disk drive.
5. Remove the four screws that mount the drive cage, as shown. Then, slide the drive cage toward the rear until the diskette drive clears the front of the chassis. Then remove the cage from the system unit.

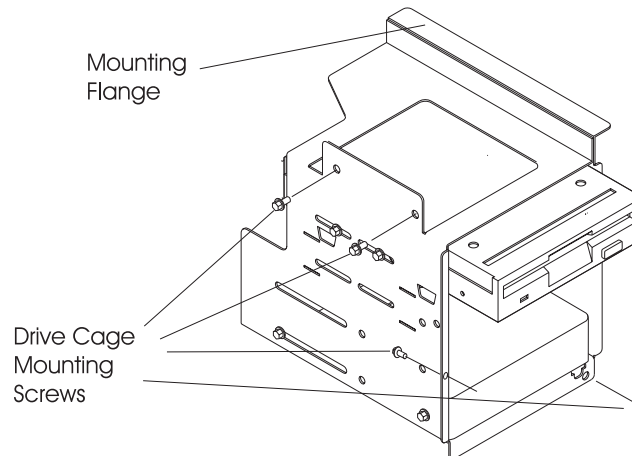


6. Remove the four screws securing the drive and remove the drive.
7. Set any jumpers or terminators on the new drive to the same settings as the old drive; then install the new drive in the drive cage.

When reassembling the system unit, reverse these steps. When installing the drive cage, make sure the mounting flange seats properly in the slot on the chassis.

Removing and Replacing a CD-ROM Drive

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the power and signal cables from the rear of the CD-ROM drive.
4. Remove the four screws that mount the drive; then, slide the drive toward the front and remove it from the system unit.

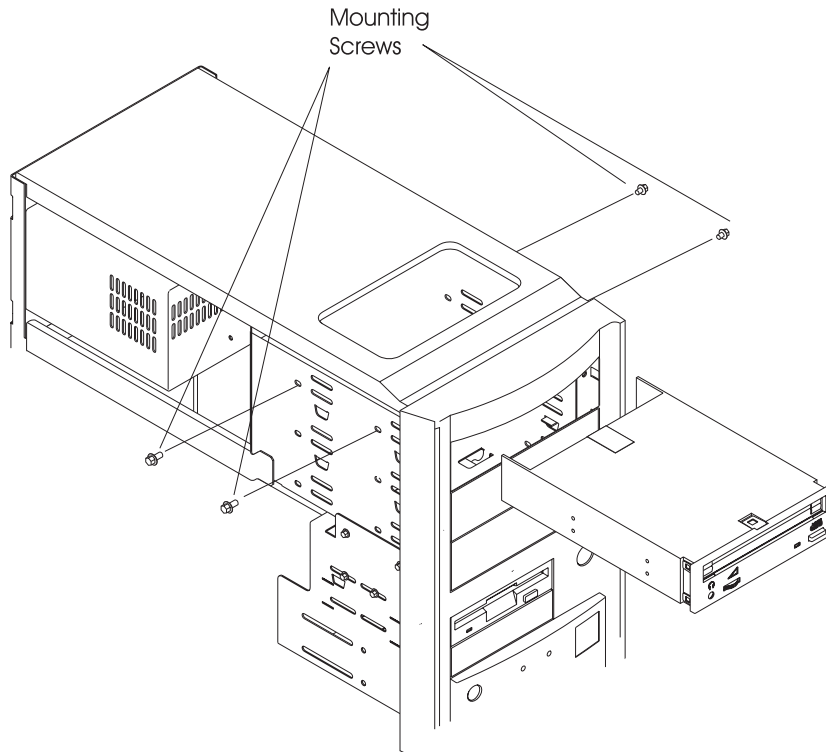


5. Set any jumpers or terminators on the new drive to the same settings as the old drive; then install the new drive in the drive cage.

When reassembling the system unit, reverse these steps.

Removing and Replacing a Hard Drive in the 5.25-Inch Bay

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the power and signal cables from the rear of the hard drive.
4. Remove the power supply (see page 8-38).
5. Remove the four screws that mount the drive; then, slide the drive toward the rear and remove it from the system unit.

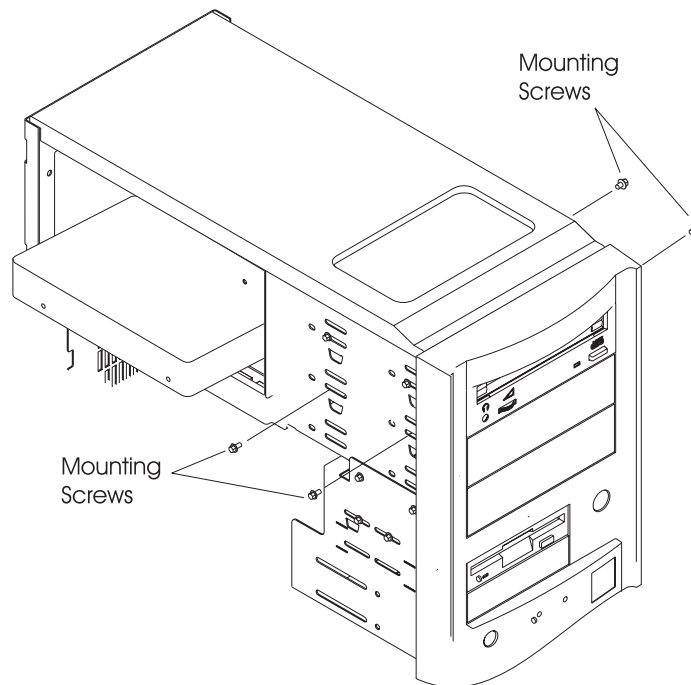

6. Set any jumpers or terminators on the new drive to the same settings as the old drive; then install the new drive in the drive cage.

When reassembling the system unit, reverse these steps.


Removing and Replacing the Power Supply

The 7563 Passive Backplane System is shipped with one of two power supplies: a 200-watt or a 330-watt. The power supply can be identified by the presence of a voltage-selection switch near the input connector for the power cord. The 200-watt power supply has the switch; the 330-watt power supply does not have a switch.

CAUTION:

Never remove the cover on the power supply. If you have a problem with the power supply, you must replace the power supply FRU or have it serviced by a qualified technician.

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the power cables to all drives.
4. If present, remove the shipping bracket.

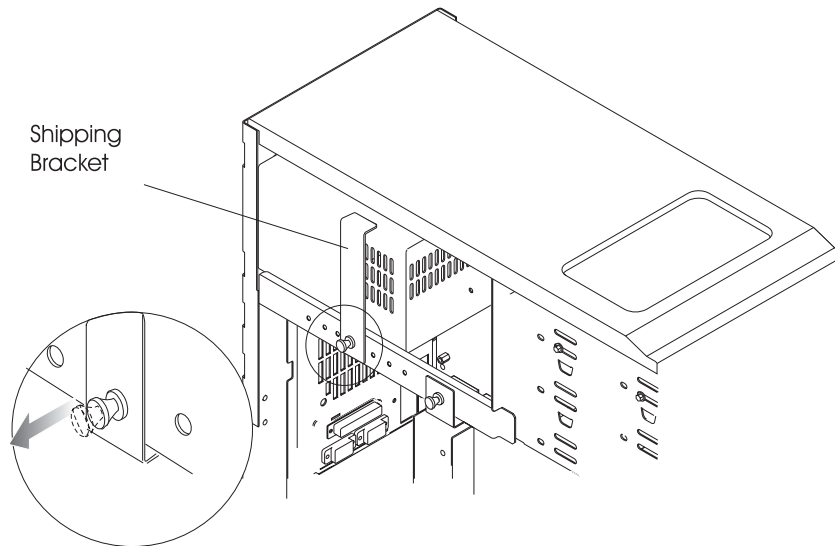

5. For the 200-watt power supply, disconnect the connector to the on/off switch and disconnect the power cables at the backplane. For the 330-watt power supply, disconnect the power-supply connector from the ATX-adapter cable.
6. Remove the four screws that secure the power supply to the rear mounting bracket.
7. Slide the power supply forward slightly to release it from its side bracket, and lift it out the side of the system unit.


When reassembling the system unit, reverse these steps. The connectors from the power supply are keyed, and the cables can be attached only one way.

Attention (200-Watt Power Supply Only)

If you have a 200-watt power supply, be sure the voltage-selection switch is in the correct position (see page 2-2 for instructions on setting the switch). If the switch is in the wrong position, you will damage your system unit when it is turned on.

Removing and Replacing the Front Fan

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Record the slot position of any adapter cards and the SBC.
4. Remove the SBC and all adapters.
5. Disconnect the fan power connector.
6. Remove the card-guide mounting screw.
7. The card guide is held in place by tabs at the top and bottom. To release the card guide from the chassis, press down firmly on the top of the card guide and away from the chassis. Then remove the card guide and fan.

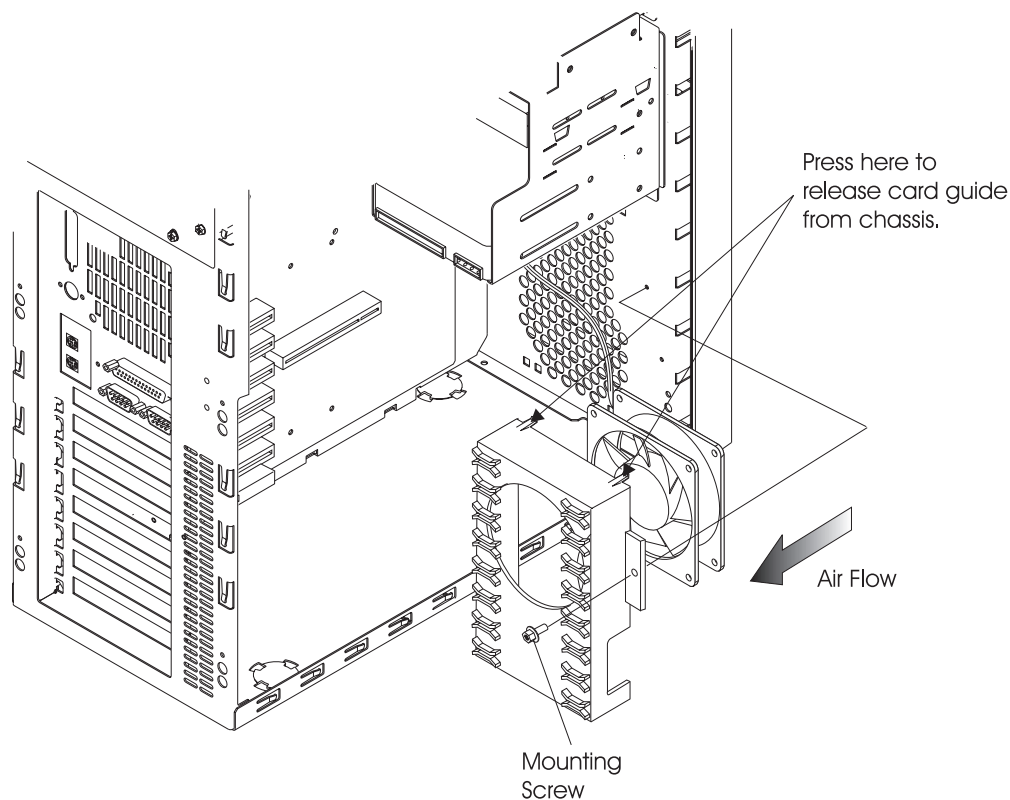


8. Remove the fan from the card guide assembly by spreading the clips on the card guide and pressing the fan towards the open side.
9. Replace the fan and reassemble the card-guide assembly. Make sure the arrow on the fan is pointing toward the rear of the system unit (the arrow shows the direction of the air flow).

When reassembling the system unit, reverse these steps. Make sure the card guide and fan are oriented as shown in the illustration.

Removing and Replacing the Rear Fan

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Record the slot position of any adapter cards and the SBC.
4. Remove the SBC and all adapters.
5. Disconnect the fan power connector.
6. Remove the four mounting screws, then remove the fan and fan guard.

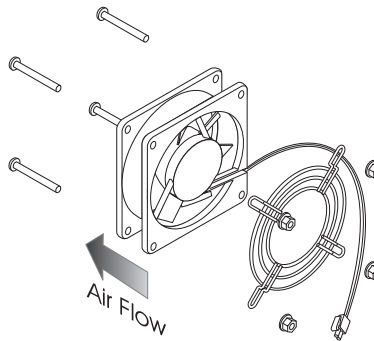

7. When installing the new fan, make sure the arrow on the fan is pointing toward the rear of the system unit (the arrow shows the direction of the air flow).

When reassembling the system unit, reverse these steps.

Removing and Replacing an LED Assembly

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the LED cable from the SBC.
4. Remove the six screws holding the front panel to the chassis and rotate the front panel away from the chassis.
5. Pull the LED from its mounting in the front panel. Then, press the new LED into the mounting and reconnect the cable to the SBC.

When reassembling the system unit, reverse these steps.

Removing and Replacing the Reset or On/Off Switch

Replacing the On/Off Switch

The connector on the on/off switch does not pass through the front panel. To remove the switch, cut the leads between the switch and the connector. The new switch includes a new connector.

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. The on/off switch is connected to a power supply lead, and the reset switch is connected to a connector on the backplane. Disconnect the cable for the switch being replaced.
4. Remove the six screws holding the front panel to the chassis and rotate the front panel away from the chassis.
5. Press the switch out the front of the front panel.
Note: When replacing the on/off switch, assemble the switch and connector after threading the switch leads through the front panel. The black lead goes in the center connector position.
6. Install the new switch.


When reassembling the system unit, reverse these steps.

Removing and Replacing the IBM SBC

Before You Begin


- Make sure the latest level of BIOS is installed on the SBC. A down-level BIOS can cause false errors and unnecessary replacement of the SBC.
- If the new SBC does not correct the problem, reinstall the options on the old SBC, reinstall the old SBC, then replace the processor.

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Disconnect the power and signal cables from the hard disk drives.
4. Remove the card retainer bracket.
5. Disconnect all cables from the SBC.
6. Remove the screw on the retaining bracket for the SBC.
7. Lift the SBC straight up and out of the system unit.
8. Remove the processor (see page 8-44) and all options from the old SBC. Install them on the new SBC and set the configuration switches to the same as the old one. Use the following figure as a check list.

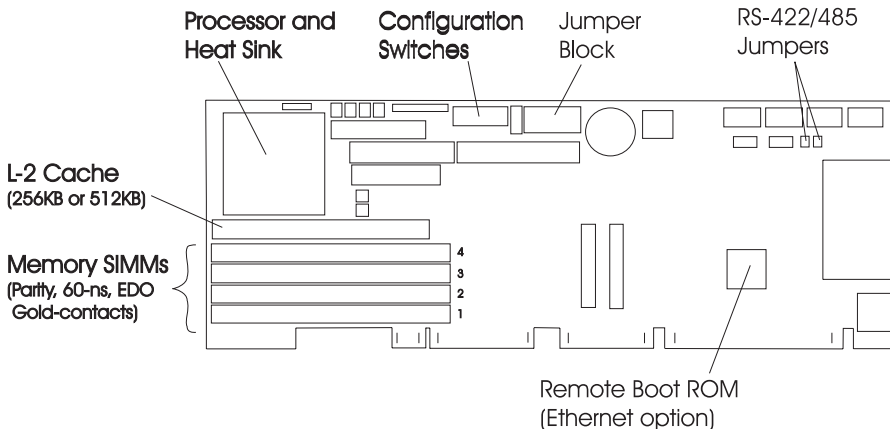

9. Install the new SBC in the system unit. Make sure it is fully seated in the connector.
10. Reinstall the screw in the retaining bracket.

11. Using the following figure, reconnect the cables to the SBC.

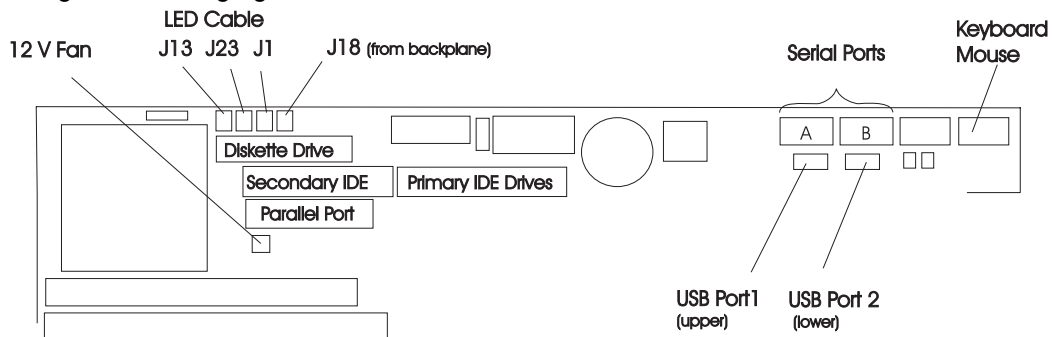

12. Reconnect the power and signal cables.

13. Reinstall the covers and all external cables.


14. Use the Flash Update program to construct VPD and, if necessary, update flash. See "Downloading System Support Programs and BIOS Updates," "Vital Product Data," and "Flash (BIOS/VPD) Update Procedure" on page 8-2 .

Replacing the Processor

Upgrading the Microprocessor

If you are changing the microprocessor speed or type, refer to Figure 6-2 on page 6-11 and Table 6-5 on page 6-12 for information on configuring the SBC to the microprocessor.

1. With the SBC on a clean, static-free work area (refer to "Removing and Replacing the IBM SBC" on page 8-42), remove the heat sink clip and the heat sink, as shown in the following figure.

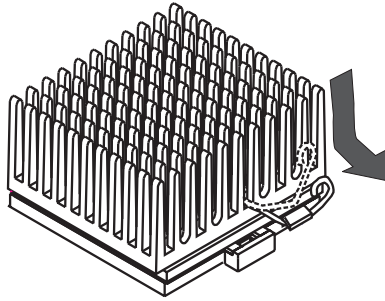


2. Insert the blade of a flat-blade screwdriver into the slot on the processor socket marked OPEN.


Attention

Moving the screwdriver further than is needed to open the socket can damage the socket.

While moving the screwdriver vertically toward (or slightly past) an upright position, watch the slot marked LOCK. When the gap is fully closed, the processor socket is fully open. The processor will move approximately .040 inches (1 millimeter).

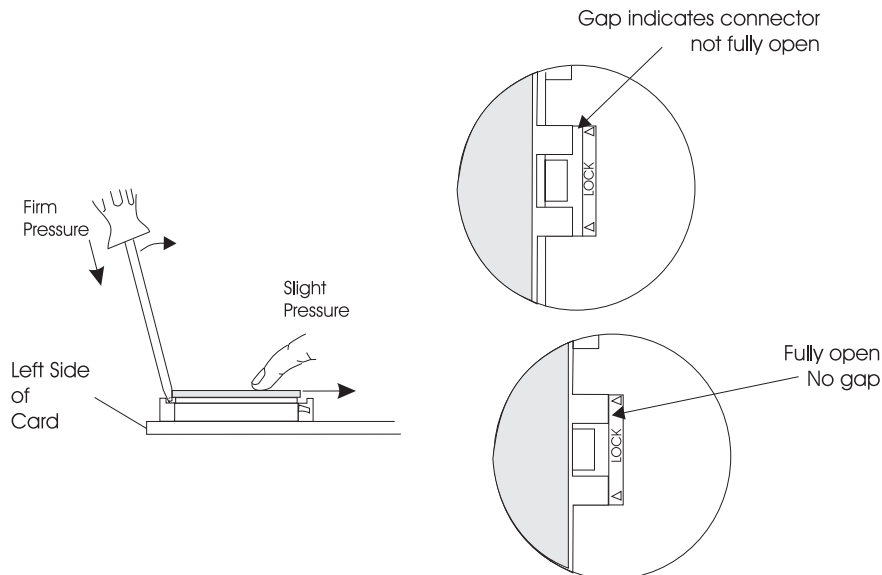

3. Remove the processor and make sure the processor socket is fully open (no gap, as shown in the following figure).

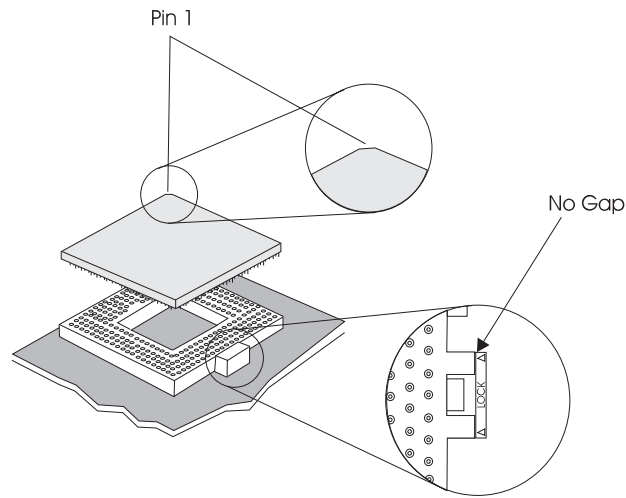


4. Locate pin 1 on the processor (pin 1 is indicated by a cut corner on the chip). Using pin 1 as a reference, align the processor and socket as shown in the previous figure; then install the new processor in the socket. If the processor does not install easily, check the processor for bent pins.
5. Insert the blade of a flat-blade screwdriver into the slot on the processor socket marked LOCK.


Attention

Moving the screwdriver further than is needed to close the socket can damage the socket.

While moving the screwdriver vertically toward (or slightly past) an upright position, watch the slot marked OPEN. When the gap is fully closed, the processor socket is fully closed and locked. The processor will move approximately .040 inches (1 millimeter). There should not be a gap on the OPEN side of the processor socket.

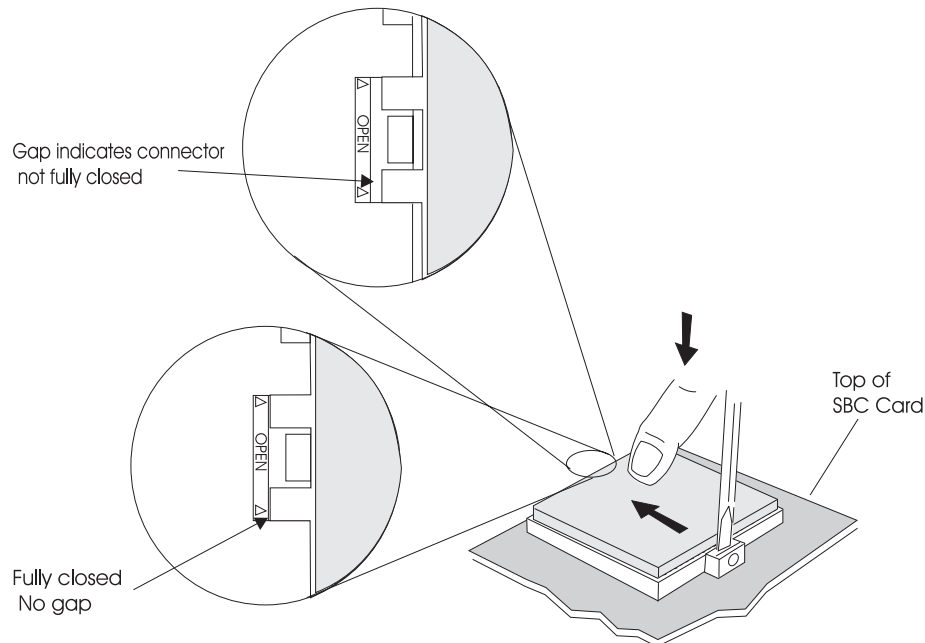

6. Install the heat sink and heat sink clip. Make sure that the clip is fully seated in the groove as shown. The clip will not seat in the groove unless the socket is fully closed.

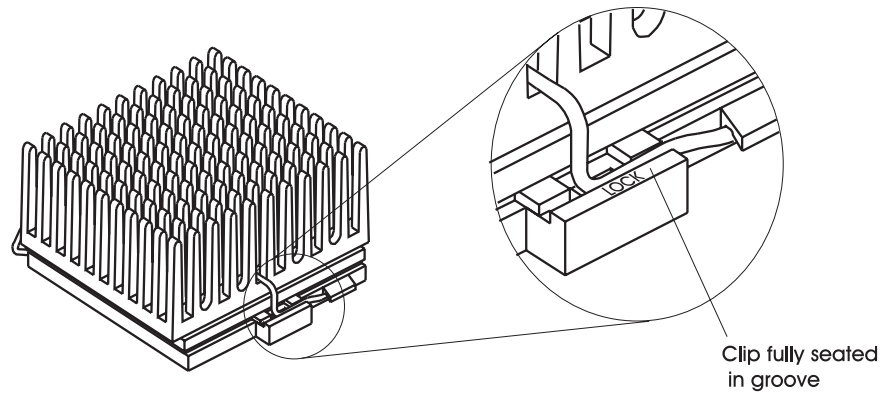


7. Reinstall the SBC and run the diagnostic tests.

Note: If the LED display on the SBC displays 00 continuously, the processor might not be installed properly. Make sure the socket is fully closed.

Replacing a Video PMC Card or Keyboard/Mouse Cable


1. Remove the SBC (refer to page 8-42).
2. Remove the two screws from the video connector.

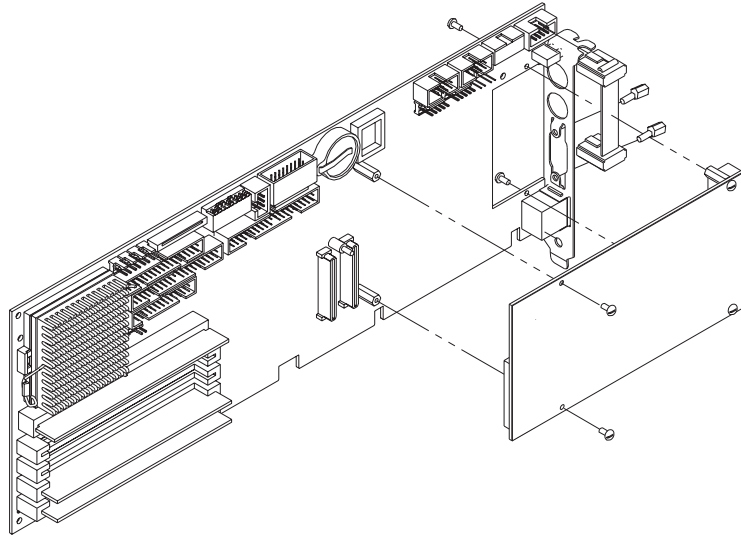

3. Remove the four retaining screws from the back of the SBC.
4. Carefully separate the video PMC card from the SBC.
5. Disconnect the keyboard/mouse cable from the video PMC card. This cable plugs into the connectors on the SBC and the video PMC card. You do not need to unplug the cable from the SBC unless you are replacing the cable.

Removing and Replacing the Backplane

Use the following figure as a reference when working with the backplane.

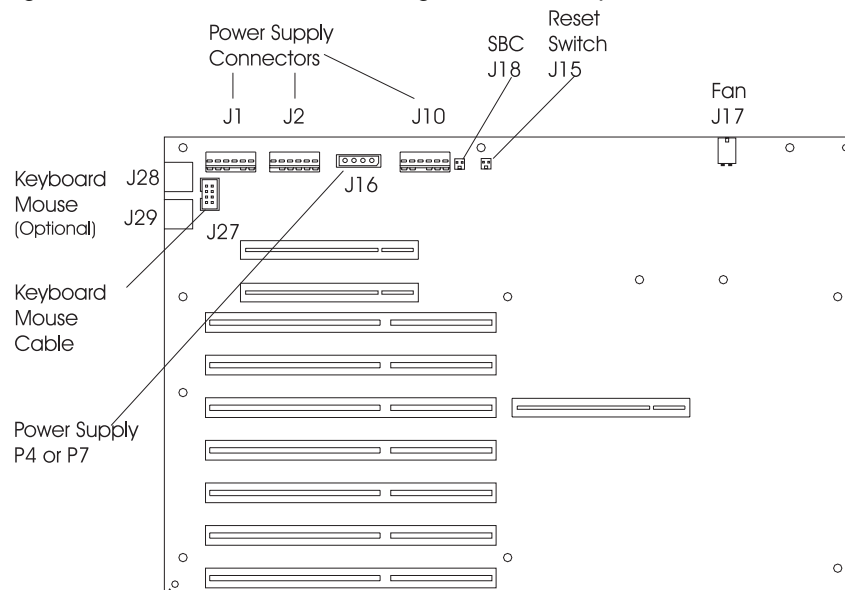

1. Turn off the computer and disconnect all cables (see page 8-32).
2. Remove the system unit cover (see page 8-33).
3. Remove all adapters and the SBC from the backplane (refer to “Removing and Replacing Adapters” on page 8-34 and “Removing and Replacing the IBM SBC” on page 8-42).
4. Disconnect the cables connected to the backplane.
5. Remove the ten screws securing the backplane to the frame and remove the backplane.

When reassembling the system unit, reverse these steps.